




M10

Quectel Cellular Engine

AT Commands Set

M10_ATC_V1.01

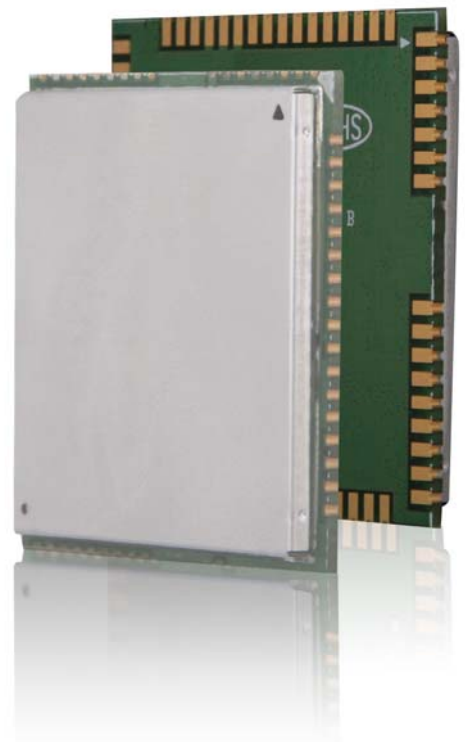

Document Title:	M10 AT Commands Set
Revision:	1.01
Date:	2009-06-26
Status:	Release
Document Control ID:	M10_ATC_V1.01

General Notes

Quectel offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Quectel. The information provided is based upon requirements specifically provided to Quectel by the customers. Quectel has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Quectel within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Quectel Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai Quectel Wireless Solutions Co., Ltd. 2009

Contents

Contents.....	2
0 Revision History.....	8
1 Introduction.....	9
1.1 Scope of the document.....	9
1.2 Conventions and abbreviations.....	9
1.3 AT Command syntax.....	9
1.3.1 Basic syntax.....	9
1.3.2 S parameter syntax.....	10
1.3.3 Extended Syntax.....	10
1.3.4 Combining AT commands on the same Command line.....	10
1.3.5 Entering successive AT commands on separate lines.....	10
1.4 Supported character sets.....	10
1.5 Flow control.....	11
1.5.1 Software flow control (XON/XOFF flow control).....	11
1.5.2 Hardware flow control (RTS/CTS flow control).....	11
1.6 Unsolicited Result Code.....	12
2 AT Commands According to V.25TER.....	13
2.1 Overview of AT Commands According to V.25TER.....	13
2.2 Detailed Description of AT Commands According to V.25TER.....	14
2.2.1 A/ Re-issues The Last Command Given.....	14
2.2.2 ATA Answer An Incoming Call.....	14
2.2.3 ATD Mobile Originated Call To Dial A Number.....	15
2.2.4 ATD> <n> Originate Call To Phone Number In Current Memory.....	17
2.2.5 ATDL Redial Last Telephone Number Used.....	18
2.2.6 ATE Set Command Echo Mode.....	18
2.2.7 ATH Disconnect Existing Connection.....	19
2.2.8 ATI Display Product Identification Information.....	19
2.2.9 ATL Set Monitor Speaker Loudness.....	19
2.2.10 ATM Set Monitor Speaker Mode.....	20
2.2.11 +++ Switch From Data Mode Or PPP Online Mode To Command Mode.....	20
2.2.12 ATO Switch From Command Mode To Data Mode.....	21
2.2.13 ATP Select Pulse Dialing.....	21
2.2.14 ATQ Set Result Code Presentation Mode.....	21
2.2.15 ATS0 Set Number Of Rings Before Automatically Answering The Call.....	21
2.2.16 ATS3 Set Command Line Termination Character.....	22
2.2.17 ATS4 Set Response Formatting Character.....	22
2.2.18 ATS5 Set Command Line Editing Character.....	23
2.2.19 ATS6 Set Pause Before Blind Dialing.....	23
2.2.20 ATS7 Set Number Of Seconds To Wait For Connection Completion.....	23

2.2.21 AT\$S Set Number Of Second To Wait For Comma Dial Modifier Encountered In Dial String Of D Command.....	24
2.2.22 AT\$10 Set Disconnect Delay After Indicating The Absence Of Data Carrier.....	24
2.2.23 AT\$ Select Tone Dialing	24
2.2.24 AT\$ TA Response Format.....	25
2.2.25 AT\$ Set CONNECT Result Code Format And Monitor Call Progress.....	26
2.2.26 AT\$ Set All Current Parameters To User Defined Profile.....	26
2.2.27 AT&C Set DCD Function Mode	26
2.2.28 AT&D Set DTR Function Mode.....	27
2.2.29 AT&F Set All Current Parameters To Manufacturer Defaults	27
2.2.30 AT&V Display Current Configuration	27
2.2.31 AT&W Store Current Parameter To User Defined Profile.....	28
2.2.32 AT+DR V.42bis Data Compression Reporting Control.....	28
2.2.33 AT+DS V.42bis Data Compression Control	28
2.2.34 AT+GCAP Request Complete TA Capabilities List	29
2.2.35 AT+GMI Request Manufacture Identification.....	30
2.2.36 AT+GMM Request TA Model Identification.....	30
2.2.37 AT+GMR Request TA Revision Identification Of Software Release.....	30
2.2.38 AT+GOI Request Global Object Identification	31
2.2.39 AT+GSN Request TA Serial Number Identification (IMEI).....	31
2.2.40 AT+ICF Set TE-TA Control Character Framing.....	32
2.2.41 AT+IFC Set TE-TA Local Data Flow Control.....	32
2.2.42 AT+ILRR Set TE-TA Local Data Rate Reporting Mode.....	33
2.2.43 AT+IPR Set TE-TA Fixed Local Rate	34
3 AT Commands According to GSM07.07.....	36
3.1 Overview of AT Command According to GSM07.07.....	36
3.2 Detailed Descriptions of AT Command According to GSM07.07.....	37
3.2.1 AT+CACM Accumulated Call Meter (ACM) Reset Or Query	37
3.2.2 AT+CAMM Accumulated Call Meter Maximum (ACM max) Set Or Query	38
3.2.3 AT+CAOC Advice Of Charge.....	39
3.2.4 AT+CBST Select Bearer Service Type.....	39
3.2.5 AT+CCFC Call Forwarding Number And Conditions Control	40
3.2.6 AT+CCUG Closed User Group Control.....	43
3.2.7 AT+CCWA Call Waiting Control	43
3.2.8 AT+CEER Extended Error Report	45
3.2.9 AT+CGMI Request Manufacturer Identification.....	45
3.2.10 AT+CGMM Request Model Identification.....	45
3.2.11 AT+CGMR Request TA Revision Identification Of Software Release	46
3.2.12 AT+CGSN Request Product Serial Number Identification (Identical With +GSN).....	46
3.2.13 AT+CSCS Select TE Character Set.....	46
3.2.14 AT+CSTA Select Type Of Address.....	47
3.2.15 AT+CHLD Call Hold And Multiparty.....	47
3.2.16 AT+CIMI Request International Mobile Subscriber Identity	48
3.2.17 AT+CKPD Keypad Control.....	49
3.2.18 AT+CLCC List Current Calls Of ME.....	49

3.2.19 AT+CLCK Facility Lock.....	51
3.2.20 AT+CLIP Calling Line Identification Presentation	52
3.2.21 AT+CLIR Calling Line Identification Restriction	53
3.2.22 AT+CMEE Report Mobile Equipment Error.....	54
3.2.23 AT+COLP Connected Line Identification Presentation.....	55
3.2.24 AT+COPS Operator Selection.....	56
3.2.25 AT+CPAS Mobile Equipment Activity Status.....	58
3.2.26 AT+CPBF Find Phonebook Entries.....	58
3.2.27 AT+CPBR Read Current Phonebook Entries	59
3.2.28 AT+CPBS Select Phonebook Memory Storage.....	60
3.2.29 AT+CPBW Write Phonebook Entry	61
3.2.30 AT+CPIN Enter PIN.....	62
3.2.31 AT+CPWD Change Password.....	62
3.2.32 AT+CR Service Reporting Control.....	64
3.2.33 AT+CRC Set Cellular Result Codes For Incoming Call Indication.....	64
3.2.34 AT+CREG Network Registration.....	65
3.2.35 AT+CRLP Select Radio Link Protocol Parameter.....	67
3.2.36 AT+CRSM Restricted SIM Access.....	67
3.2.37 AT+CSQ Signal Quality Report	68
3.2.38 AT+FCLASS FAX: Select, Read Or Test Service Class.....	69
3.2.39 AT+FMI FAX: Report Manufactured ID.....	69
3.2.40 AT+FMM FAX: Rreport Mmodel ID	70
3.2.41 AT+FMR FAX: Report Revision ID.....	70
3.2.42 AT+VTD Tone Duration.....	71
3.2.43 AT+VTS DTMF And Tone Generation	71
3.2.44 AT+CMUX Multiplexer Control	73
3.2.45 AT+CNUM Subscriber Number	74
3.2.46 AT+CPOL Preferred Operator List.....	74
3.2.47 AT+COPN Read Operator Names	75
3.2.48 AT+CFUN Set Phone Functionality.	76
3.2.49 AT+CCLK Clock.....	76
3.2.50 AT+CSIM Generic SIM Access	78
3.2.51 AT+CALM Alert Sound Mode.....	78
3.2.52 AT+CRSL Ringer Sound Levels	79
3.2.53 AT+CLVL Loud Speaker Volume Level.....	79
3.2.54 AT+CMUT Mute Control.....	80
3.2.55 AT+CPUC Price Per Unit And Currency Table.....	81
3.2.56 AT+CCWE Call Meter Maximum Event	81
3.2.57 AT+CBC Battery Charge.....	82
3.2.58 AT+CUSD Unstructured Supplementary Service Data	83
3.2.59 AT+CSSN Supplementary Services Notification	83
3.2.60 AT+CSNS Single Numbering Scheme	84
3.2.61 AT+CMOD Configure Alternating Mode Calls	85
4 AT Commands According to GSM07.05.....	86
4.1 Overview of AT Commands According to GSM07.05	86

4.2 Detailed Descriptions of AT Commands According to GSM07.05	86
4.2.1 AT+CMGD Delete SMS Message.....	86
4.2.2 AT+CMGF Select SMS Message Format.....	87
4.2.3 AT+CMGL List SMS Messages From Preferred Store	87
4.2.4 AT+CMGR Read SMS Message	90
4.2.5 AT+CMGS Send SMS Message.....	93
4.2.6 AT+CMGW Write SMS Message To Memory	94
4.2.7 AT+CMSS Send SMS Message From Storage.....	95
4.2.8 AT+CMGC Send SMS Command.....	96
4.2.9 AT+CNMI New SMS Message Indications	97
4.2.10 AT+CPMS Preferred SMS Message Storage.....	99
4.2.11 AT+CREG Restore SMS Settings	100
4.2.12 AT+CSAS Save SMS Settings	101
4.2.13 AT+CSCA SMS Service Center Address	101
4.2.14 AT+CSCB Select Cell Broadcast SMS Messages	102
4.2.15 AT+CSDH Show SMS Text Mode Parameters	103
4.2.16 AT+CSMP Set SMS Text Mode Parameters.....	103
4.2.17 AT+CSMS Select Message Service.....	104
5 AT Commands for GPRS Support.....	106
5.1 Overview of AT Commands for GPRS Support	106
5.2 Detailed Descriptions of AT Commands for GPRS Support	106
5.2.1 AT+CGATT Attach To/Detach From GPRS Service.....	106
5.2.2 AT+CGDCONT Define PDP Context	107
5.2.3 AT+CGQMIN Quality Of Service Profile (Minimum Acceptable).....	108
5.2.4 AT+CGQREQ Quality Of Service Profile (Requested).....	109
5.2.5 AT+CGACT PDP Context Activate Or Deactivate	109
5.2.6 AT+CGDATA Enter Data State	110
5.2.7 AT+CGPADDR Show PDP Address	111
5.2.8 AT+CGCLASS GPRS Mobile Station Class.....	111
5.2.9 AT+CGEREP Control Unsolicited GPRS Event Reporting	112
5.2.10 AT+CGREG Network Registration Status	113
5.2.11 AT+CGSMS Select Service For MO SMS Messages.....	114
6 AT Commands Special for Quectel	115
6.1 Overview	115
6.2 Detailed Descriptions of Commands.....	116
6.2.1 AT+QECHO Echo Cancellation Control.....	116
6.2.2 AT+QSIDET Change The Side Tone Gain Level.....	116
6.2.3 AT+QPOWD Power Off.....	117
6.2.4 AT+QTRPIN Times Remain To Input SIM PIN/PUK	117
6.2.5 AT+QMIC Change The Microphone Gain Level	117
6.2.6 AT+QALARM Set Alarm.....	118
6.2.7 AT+QADC Read ADC	119
6.2.8 AT+QRSTCB Reset Cell Broadcast.....	120
6.2.9 AT+QINDRI Indicate RI When Using URC	120

6.2.10 AT+QLOCTS Get Local Timestamp	120
6.2.11 AT+QEXTHS External Headset Jack Control.....	121
6.2.12 AT+QHSBTN Headset Button Status Reporting.....	122
6.2.13 AT+QSIMSTAT SIM Inserted Status Reporting	122
6.2.14 AT+QLDTMF Generate Local DTMF Tone	123
6.2.15 AT+QCGTIND CS Voice/Data/Fax Call Or GPRS PDP Context Termination Indication	124
6.2.16 AT+QSPN Get Service Provider Name From SIM	124
6.2.17 AT+QBAND Get And Set Mobile Operation Band.....	125
6.2.18 AT+QAUDCH Swap The Audio Channels	125
6.2.19 AT+QSCLK Configure Slow Clock	126
6.2.20 AT+QENG Switch On Or Off Engineering Mode.....	126
6.2.21 AT+QSCLASS0 Store Class 0 SMS To SIM When Received Class 0 SMS.....	128
6.2.22 AT+QCCID Show ICCID.....	128
6.2.23 AT+QTEMP Set Critical Temperature Operating Mode Or Query Temperature.....	129
6.2.24 AT+QSIMDET Switch On Or Off Detecting SIM Card.....	129
6.2.25 AT+QMGDA Delete All SMS.....	130
6.2.26 AT+QLTONE Generate Local Specific Tone.....	131
6.2.27 AT+QCLIP Connected Line Identification Presentation Without Alpha String	131
6.2.28 AT+QGID Get SIM Card Group Identifier.....	131
6.2.29 AT+QMOSTAT Show State of Mobile Originated Call.....	132
6.2.30 AT+QGPCLASS Change GPRS Multi Slot Class	132
6.2.31 AT+QMGHEX Enable To Send Non-ASCII Character SMS.....	133
6.2.32 AT+QAUDLOOP Audio Channel Loopback Test	134
6.2.33 AT+QSMSCODE Configure SMS Code Mode.....	134
6.2.34 AT+QIURC Enable Or Disable Initial URC Presentation	135
6.2.35 AT+QCSPWD Change PS Super Password.....	135
6.2.36 AT+QEXTUNSOL Enable /Disable Proprietary Unsolicited Indications	135
7 AT Commands for TCP/IP Application Toolkit.....	138
7.1 Overview	138
7.2 Detailed Descriptions of Commands.....	138
7.2.1 AT+QIOPEN Start Up TCP Or UDP Connection.....	138
7.2.2 AT+QISEND Send Data Through TCP Or UDP Connection.....	139
7.2.3 AT+QICLOSE Close TCP Or UDP Connection.....	140
7.2.4 AT+QIDEACT Deactivate GPRS/CSD PDP Context.....	141
7.2.5 AT+QILPORT Set Local Port.....	142
7.2.6 AT+QIREGAPP START TCP/IP Task And Set APN、 USER NAME、 PASSWORD	142
7.2.7 AT+QIACT Bring Up Wireless Connection With GPRS Or CSD	143
7.2.8 AT+QILOCIP Get Local IP Address	143
7.2.9 AT+QISTAT Query Current Connection Status.....	144
7.2.10 AT+QIDNSCFG Configure Domain Name Server	144
7.2.11 AT+QIDNSGIP Query The IP Address Of Given Domain Name	145
7.2.12 AT+QIDNSIP Connect With IP Address Or Domain Name Server	146
7.2.13 AT+QIHEAD Add An IP Head When Receiving Data.....	146
7.2.14 AT+QIAUTOS Set Auto Sending Timer	147
7.2.15 AT+QIPROMPT Set Prompt Of '>' When Sending Data	147

7.2.16 AT+QISERVER Configure As Server	148
7.2.17 AT+QICSGP Set CSD Or GPRS For Connection Mode.....	149
7.2.18 AT+QISRVC Choose Connection	150
7.2.19 AT+QISHOWRA Set Whether Display IP Address And Port Of Sender When Receive Data	151
7.2.20 AT+QISCON Save TCPIP Application Context.....	151
7.2.21 AT+QIMODE Select TCPIP Application Mode.....	153
7.2.22 AT+QITCFG Configure Transparent Transfer mode.....	153
7.2.23 AT+QISHOWPT Control whether to show the protocol type of the received data.....	154
7.2.24 AT+QIMUX Control whether to support establish multiple TCPIP connection	154
7.2.25 AT+QISHOWLA Set Whether Display local IP Address When Receive Data	155
7.2.26 AT+QIFGCNT Configure a context as foreground context.....	156
7.2.27 AT+QISACK Query the length of sent data and the length of acknowledged data.....	156
Appendix A Supported unsolicited result codes	158
A.1 Summary of CME ERROR Codes	158
A.2 Summary of CMS ERROR Codes.....	160
A.3 Summary of URC.....	161

0 Revision History

Revision	Date	Author	Description
1.00	2009-05-29	Willis YANG	Initial
1.01	2009-06-05	Willis YANG	1. AT+CGCOUNT is not used. Remove it
	2009-06-17	Colin HU	2. Modify the property for the parameters of the command AT+CGQMIN 3. Modify the property for the parameters of the command AT+CGQREQ

1 Introduction

1.1 Scope of the document

This document presents the AT Command Set for Quectel cellular engine M10.

1.2 Conventions and abbreviations

In this document, the GSM engines are referred to as following term:

- 1) ME (Mobile Equipment);
- 2) MS (Mobile Station);
- 3) TA (Terminal Adapter);
- 4) DCE (Data Communication Equipment) or facsimile DCE(FAX modem, FAX board);

In application, controlling device controls the GSM engine by sending AT Command via its serial interface. The controlling device at the other end of the serial line is referred to as following term:

- 1) TE (Terminal Equipment);
- 2) DTE (Data Terminal Equipment) or plainly “the application” which is running on an embedded system;

1.3 AT Command syntax

The "AT" or "at" prefix must be set at the beginning of each Command line. To terminate a Command line enter <CR>.

Commands are usually followed by a response that includes. “<CR><LF><response><CR><LF>” Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

The AT Command set implemented by M10 is a combination of GSM07.05, GSM07.07 and ITU-T recommendation V.25ter and the AT commands developed by Quectel.

Note: Only enter AT Command through serial port after M10 is power on and Unsolicited Result Code “RDY” is received from serial port. If autobauding is enabled, the Unsolicited Result Codes “RDY” and so on are not indicated when you start up the ME

All these AT commands can be split into three categories syntactically: “**basic**”, “**S parameter**”, and “**extended**”. These are as follows:

1.3.1 Basic syntax

These AT commands have the format of “AT<x><n>”, or “AT&<x><n>”, where “<x>” is the Command, and “<n>” is/are the argument(s) for that Command. An example of this is “ATE<n>”, which tells the DCE whether received characters should be echoed back to the DTE according to

the value of “<n>”. “<n>” is optional and a default will be used if missing.

1.3.2 S parameter syntax

These AT commands have the format of “ATS<n>=<m>”, where “<n>” is the index of the S register to set, and “<m>” is the value to assign to it. “<m>” is optional; if it is missing, then a default value is assigned.

1.3.3 Extended Syntax

These commands can operate in several modes, as following table:

Table 1: Types of AT commands and responses

Test Command	AT+<x>=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write Command or by internal processes.
Read Command	AT+<x>?	This command returns the currently set value of the parameter or parameters.
Write Command	AT+<x>=<...>	This command sets the user-definable parameter values.
Execution Command	AT+<x>	The execution command reads non-variable parameters affected by internal processes in the GSM engine

1.3.4 Combining AT commands on the same Command line

You can enter several AT commands on the same line. In this case, you do not need to type the “AT” or “at” prefix before every Command. Instead, you only need type “AT” or “at” at the beginning of the Command line. Please Note to use a semicolon as Command delimiter.

The Command line buffer can accept a maximum of 256 characters. If the characters entered exceeded this number then none of the Command will be executed and TA will return “**ERROR**”.

1.3.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please Note that you need to wait the final response (for example OK, CME error, CMS error) of last AT Command you entered before you enter the next AT Command.

1.4 Supported character sets

The M10 AT Command interface defaults to the **IRA** character set. The M10 supports the following character sets:

- GSM format
- UCS2
- HEX

- IRA
- PCCP437
- 8859_1

The character set can be set and interrogated using the “AT+CSCS” Command (GSM 07.07). The character set is defined in GSM specification 07.05.

The character set affects transmission and reception of SMS and SMS Cell Broadcast messages, the entry and display of phone book entries text field and SIM Application Toolkit alpha strings.

1.5 Flow control

Flow control is very important for correct communication between the GSM engine and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control. M10 support both two kinds of flow control.

In Multiplex mode, it is recommended to use the hardware flow control.

1.5.1 Software flow control (XON/XOFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

The default flow control approach of M10 is hardware flow control (RTS/CTS flow control), to enable software flow control in the DTE interface and within GSM engine, type the following AT Command:

```
AT+IFC=1,1
```

This setting is stored volatile, for use after restart, **AT+IFC=1,1** should be stored to the user profile with **AT&W**.

Ensure that any communications software package (e.g. ProComm Plus, Hyper terminal or WinFax Pro) uses software flow control.

NOTE:

Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.

1.5.2 Hardware flow control (RTS/CTS flow control)

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once

again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

1.6 Unsolicited Result Code

A URC is a report message sent from the ME to the TE. An unsolicited result code can either be delivered automatically when an event occurs, to reflect change in system state or as a result of a query the ME received before, often due to occurrences of errors in executing the queries. However, a URC is not issued as a direct response to an executed AI command, AT commands has their own implementations to validate inputs such as “OK” or “ERROR”.

Typical URCs may be information about incoming calls, received SMS, changing temperature, status of the battery etc. A summary of URCs is listed in Appendix A.

When sending a URC the ME activates its Ring Interrupt (Logic "I"), i.e. the line goes active low for a few milliseconds. If an event that delivers a URC coincides with the execution of an AT command, the URC will be output after command execution has completed.

2 AT Commands According to V.25TER

These AT Command are designed according to the ITU-T (International Telecommunication Union, Telecommunication sector) V.25ter document.

2.1 Overview of AT Commands According to V.25TER

Command	Description
A/	RE-ISSUES LAST AT COMMAND GIVEN
ATA	ANSWER AN INCOMING CALL
ATD	MOBILE ORIGINATED CALL TO DIAL A NUMBER
ATD<<N>	ORIGINATE CALL TO PHONE NUMBER IN CURRENT MEMORY
ATDL	REDIAL LAST TELEPHONE NUMBER USED
ATE	SET COMMAND ECHO MODE
ATH	DISCONNECT EXISTING CONNECTION
ATI	DISPLAY PRODUCT IDENTIFICATION INFORMATION
ATL	SET MONITOR SPEAKER LOUDNESS
ATM	SET MONITOR SPEAKER MODE
+++	SWITCH FROM DATA MODE OR PPP ONLINE MODE TO COMMAND MODE
ATO	SWITCH FROM COMMAND MODE TO DATA MODE
ATP	SELECT PULSE DIALLING
ATQ	SET RESULT CODE PRESENTATION MODE
ATS0	SET NUMBER OF RINGS BEFORE AUTOMATICALLY ANSWERING THE CALL
ATS3	SET COMMAND LINE TERMINATION CHARACTER
ATS4	SET RESPONSE FORMATTING CHARACTER
ATS5	SET COMMAND LINE EDITING CHARACTER
ATS6	SET PAUSE BEFORE BLIND DIALLING
ATS7	SET NUMBER OF SECONDS TO WAIT FOR CONNECTION COMPLETION
ATS8	SET NUMBER OF SECONDS TO WAIT WHEN COMMA DIAL MODIFIER ENCOUNTERED IN DIAL STRING OF D COMMAND
ATS10	SET DISCONNECT DELAY AFTER INDICATING THE ABSENCE OF DATA CARRIER
ATT	SELECT TONE DIALLING
ATV	TA RESPONSE FORMAT
ATX	SET CONNECT RESULT CODE FORMAT AND MONITOR CALL PROGRESS
ATZ	SET ALL CURRENT PARAMETERS TO USER DEFINED PROFILE
AT&C	SET DCD FUNCTION MODE

AT&D	SET DTR FUNCTION MODE
AT&F	SET ALL CURRENT PARAMETERS TO MANUFACTURER DEFAULTS
AT&V	DISPLAY CURRENT CONFIGURATION
AT&W	STORE CURRENT PARAMETER TO USER DEFINED PROFILE
AT+DR	V.42BIS DATA COMPRESSION REPORTING CONTROL
AT+DS	V.42BIS DATA COMPRESSION CONTROL
AT+GCAP	REQUEST COMPLETE TA CAPABILITIES LIST
AT+GMI	REQUEST MANUFACTURER IDENTIFICATION
AT+GMM	REQUEST TA MODEL IDENTIFICATION
AT+GMR	REQUEST TA REVISION IDENTIFICATION OF SOFTWARE RELEASE
AT+GOI	REQUEST GLOBAL OBJECT IDENTIFICATION
AT+GSN	REQUEST TA SERIAL NUMBER IDENTIFICATION (IMEI)
AT+ICF	SET TE-TA CONTROL CHARACTER FRAMING
AT+IFC	SET TE-TA LOCAL DATA FLOW CONTROL
AT+ILRR	SET TE-TA LOCAL DATA RATE REPORTING MODE
AT+IPR	SET TE-TA FIXED LOCAL RATE

2.2 Detailed Description of AT Commands According to V.25TER

2.2.1 A/ Re-issues The Last Command Given

A/ Re-issues The Last Command Given	
Execution Command A/	Response Re-issues the previous Command Note: It does not have to end with terminating character.
	Parameter
Reference V.25ter	Note This Command does not work when the serial multiplexer is active

2.2.2 ATA Answer An Incoming Call

ATA Answer An Incoming Call

<p>Execution Command ATA</p>	<p>Response</p> <p>TA sends off-hook to the remote station.</p> <p>Note1: Any additional commands on the same Command line are ignored.</p> <p>Note2: This Command may be aborted generally by receiving a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>Response in case of data call, if successfully connected CONNECT<text> TA switches to data mode.</p> <p>Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to Command mode after call release OK</p> <p>Response in case of voice call, if successfully connected OK</p> <p>Response if no connection NO CARRIER</p> <p>Parameter</p>
<p>Reference V.25ter</p>	<p>Note See also ATX</p>

2.2.3 ATD Mobile Originated Call To Dial A Number

ATD Mobile Originated Call To Dial A Number	
<p>Execution Command ATD<n>[<mgsml>[:]]</p>	<p>Response</p> <p>This Command can be used to set up outgoing <i>voice, data or fax calls</i>. It also serves to control <i>supplementary services</i>.</p> <p>Note: This Command may be aborted generally by receiving an ATH Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4) BUSY</p> <p>If a connection cannot be established NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode.</p> <p>Note: <text> output only if ATX<value> parameter setting with the</p>

	<p><value> >0</p> <p>When TA returns to Command mode after call release OK</p> <p>If connection successful and voice call OK</p> <p>Parameter</p> <p><n> string of dialing digits and optionally V.25ter modifiers dialing digits: 0-9, *, #, +, A, B, C Following V.25ter modifiers are ignored: ,(comma), T, P, !, W, @</p> <p>Emergency call:</p> <p><n> Standardized emergency number 112(no SIM needed)</p> <p><mgsms> string of GSM modifiers:</p> <p>I Activates CLIR (Disables presentation of own number to called party)</p> <p>i Deactivates CLIR (Enable presentation of own number to called party)</p> <p>G Activates Closed User Group invocation for this call only</p> <p>g Deactivates Closed User Group invocation for this call only</p> <p><;> only required to set up voice call , return to Command state</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● Parameter “I” and “i” only if no *# code is within the dial string ● <n> is default for last number that can be dialed by ATDL ● *# codes sent with ATD are treated as voice calls. Therefore, the Command must be terminated with a semicolon “;” ● See ATX Command for setting result code and call monitoring parameters. <p>Responses returned after dialing with ATD</p> <ul style="list-style-type: none"> ● For voice call two different responses mode can be determined. TA returns “OK” immediately either after dialing was completed or after the call is established. The setting is controlled by AT+COLP. Factory default is AT+COLP=0, this cause the TA returns “OK” immediately after dialing was completed, otherwise TA will returns “OK”, “BUSY”, “NO DIAL TONE”, “NO CARRIER”. <p>Using ATD during an active voice call:</p> <ul style="list-style-type: none"> ● When a user originates a second voice call while there is already an

	<p>active voice call, the first call will be automatically put on hold.</p> <ul style="list-style-type: none"> The current states of all calls can be easily checked at any time by using the AT+CLCC Command.
--	--

2.2.4 ATD> <n> Originate Call To Phone Number In Current Memory

ATD><n> Originate Call To Phone Number In Current Memory	
<p>Execution Command ATD><n> [;]</p>	<p>Response</p> <p>This Command can be used to dial a phone number from current phonebook memory.</p> <p>Note: This Command may be aborted generally by receiving an ATH Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking.</p> <p>If error is related to ME functionality +CME ERROR: <err></p> <p>If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE</p> <p>If busy and (parameter setting ATX3 or ATX4) BUSY</p> <p>If a connection cannot be established NO CARRIER</p> <p>If connection successful and non-voice call. CONNECT<text> TA switches to data mode. Note: <text> output only if ATX<value> parameter setting with the <value> >0</p> <p>When TA returns to Command mode after call release OK</p> <p>If successfully connected and voice call OK</p>
	<p>Parameter</p> <p><n> Integer type memory location should be in the range of locations available in the memory used</p> <p><;> only required to set up voice call , return to Command state</p>
<p>Reference V.25ter</p>	<p>Note</p> <ul style="list-style-type: none"> Parameter “T” and “i” only if no *# code is within the dial string *# codes sent with ATD are treated as voice calls. Therefore, the Command must be terminated with a semicolon “;” See ATX Command for setting result code and call monitoring

	parameters.
--	-------------

2.2.5 ATDL Redial Last Telephone Number Used

ATDL Redial Last Telephone Number Used	
Execution Command ATDL	Response This Command redials the last voice and data call number used. Note: This Command may be aborted generally by receiving an ATH Command or a character during execution. The aborting is not possible during some states of connection establishment such as handshaking. If error is related to ME functionality +CME ERROR: <err> If no dial tone and (parameter setting ATX2 or ATX4) NO DIALTONE If busy and (parameter setting ATX3 or ATX4) BUSY If a connection cannot be established NO CARRIER If connection successful and non-voice call. CONNECT<text> TA switches to data mode. Note: <text> output only if ATX<value> parameter setting with the <value> >0 When TA returns to Command mode after call release OK If successfully connected and voice call OK
Reference V.25ter	Note <ul style="list-style-type: none"> ● See ATX Command for setting result code and call monitoring parameters.

2.2.6 ATE Set Command Echo Mode

ATE Set Command Echo Mode	
Execution Command ATE<value>	Response This setting determines whether or not the TA echoes characters received from TE during Command state. OK

	Parameter <value> 0 Echo mode off 1 Echo mode on
Reference V.25ter	Note

2.2.7 ATH Disconnect Existing Connection

ATH Disconnect Existing Connection	
Execution Command ATH[n]	Response Disconnect existing call by local TE from Command line and terminate call OK Note: OK is issued after circuit 109(DCD) is turned off, if it was previously on.
	Parameter <n> 0 disconnect from line and terminate call
Reference V.25ter	Note

2.2.8 ATI Display Product Identification Information

ATI Display Product Identification Information	
Execution Command ATI	Response TA issues product information text Example: Quectel_Ltd Quectel_M10 Revision: M10A01M32_SST OK
	Parameter
Reference V.25ter	Note

2.2.9 ATL Set Monitor Speaker Loudness

ATL Set Monitor Speaker Loudness	
Execution Command ATL<value>	Response OK
	Parameter <value> 0 low speaker volume

	1 low speaker volume 2 medium speaker volume 3 high speaker volume
Reference V.25ter	Note <ul style="list-style-type: none"> The two commands ATL and ATM are implemented only for V.25 compatibility reasons and have no effect.

2.2.10 ATM Set Monitor Speaker Mode

ATM Set Monitor Speaker Mode	
Execution Command ATM<value>	Response OK Parameter <value> 0 speaker is always off 1 speaker on until TA inform TE that carrier has been detected 2 speaker is always on when TA is off-hook
Reference V.25ter	Note <ul style="list-style-type: none"> The two commands ATL and ATM are implemented only for V.25 compatibility reasons and have no effect.

2.2.11 +++ Switch From Data Mode Or PPP Online Mode To Command Mode

+++ Switch From Data Mode Or PPP Online Mode To Command Mode	
Execution Command +++	Response This Command is only available during a CSD call or a GPRS connection or a transparent TCPIP connection. The +++ character sequence causes the TA to cancel the data flow over the AT interface and switch to Command mode. This allows you to enter AT Command while maintaining the data connection to the remote server or, accordingly, the GPRS connection. OK To prevent the +++ escape sequence from being misinterpreted as data, it should comply to following sequence: <ol style="list-style-type: none"> No characters entered for T1 time (0.5 seconds) “+++” characters entered with no characters in between No characters entered for T1 timer (0.5 seconds) Switch to command mode, otherwise go to step 1. Parameter
Reference V.25ter	Note <ul style="list-style-type: none"> To return from Command mode back to data or PPP online mode: Enter ATO.

2.2.12 ATO Switch From Command Mode To Data Mode

ATO Switch From Command Mode To Data Mode	
Execution Command ATO[n]	<p>Response</p> <p>TA resumes the connection and switches back from Command mode to data mode.</p> <p>If connection is not successfully resumed</p> <p>NO CARRIER</p> <p>else</p> <p>TA returns to data mode from Command mode CONNECT <text> Note: <text> only if parameter setting X>0</p>
	<p>Parameter</p> <p><n> 0 switch from Command mode to data mode</p>
Reference V.25ter	Note

2.2.13 ATP Select Pulse Dialing

ATP Select Pulse Dialing	
Execution Command ATP	<p>Response</p> <p>OK</p>
	Parameter
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● No effect in GSM

2.2.14 ATQ Set Result Code Presentation Mode

ATQ Set Result Code Presentation Mode	
Execution Command ATQ<n>	<p>Response</p> <p>This parameter setting determines whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting.</p> <p>If <n>=0:</p> <p>OK</p> <p>If <n>=1:</p> <p>(none)</p>
	<p>Parameter</p> <p><n> 0 TA transmits result code</p> <p> 1 Result codes are suppressed and not transmitted</p>
Reference V.25ter	Note

2.2.15 ATSO Set Number Of Rings Before Automatically Answering The Call

ATSO Set Number Of Rings Before Automatically Answering The Call	
Read Command	Response

ATS0?	<n> OK
Write Command ATS0=<n>	Response This parameter setting determines the number of rings before auto-answer. OK
	Parameter <n> <u>0</u> automatic answering is disable 1-255 enable automatic answering on the ring number specified
Reference V.25ter	Note ● If <n> is set too high, the calling party may hang up before the call can be answered automatically.

2.2.16 ATS3 Set Command Line Termination Character

ATS3 Set Command Line Termination Character	
Read Command ATS3?	Response <n> OK
Write Command ATS3=<n>	Response This parameter setting determines the character recognized by TA to terminate an incoming Command line. The TA also returns this character in output. OK
	Parameter <n> 0- <u>13</u> -127 Command line termination character
Reference V.25ter	Note ● Default 13 = CR.

2.2.17 ATS4 Set Response Formatting Character

ATS4 Set Response Formatting Character	
Read Command ATS4?	Response <n> OK
Write Command ATS4=<n>	Response This parameter setting determines the character generated by the TA for result code and information text. OK
	Parameter <n> 0- <u>10</u> -127 response formatting character
Reference	Note

V.25ter	<ul style="list-style-type: none"> ● Default 10 = LF.
---------	--

2.2.18 ATS5 Set Command Line Editing Character

ATS5 Set Command line editing character	
Read Command ATS5?	Response <n> OK
Write Command ATS5=<n>	Response This parameter setting determines the character recognized by TA as a request to delete from the Command line the immediately preceding character. OK <hr/> Parameter <n> 0-8-127 response formatting character
Reference V.25ter	Note <ul style="list-style-type: none"> ● Default 8 = Backspace.

2.2.19 ATS6 Set Pause Before Blind Dialing

ATS6 Set Pause Before Blind Dialing	
Read Command ATS6?	Response <n> OK
Write Command ATS6=<n>	Response OK <hr/> Parameter <n> 0-2-10 number of seconds to wait before blind dialing
Reference V.25ter	Note <ul style="list-style-type: none"> ● No effect for GSM

2.2.20 ATS7 Set Number Of Seconds To Wait For Connection Completion

ATS7 Set Number Of Seconds To Wait For Connection Completion	
Read Command ATS7?	Response <n> OK
Write Command ATS7=<n>	Response This parameter setting determines the amount of time to wait for the connection completion in case of answering or originating a call. OK <hr/> Parameter

	<n> 1- <u>60</u> -255 number of seconds to wait for connection completion
Reference V.25ter	Note <ul style="list-style-type: none"> ● If called party has specified a high value for ATS0=<n>, call setup may fail. ● The correlation between ATS7 and ATS0 is important Example: Call may fail if ATS7=30 and ATS0=20. ● ATS7 is only applicable to data call.

2.2.21 ATS8 Set Number Of Second To Wait For Comma Dial Modifier Encountered In Dial String Of D Command

ATS8 Set Number Of Second To Wait For Comma Dial Modifier Encountered In Dial String Of D Command	
Read Command ATS8?	Response <n> OK
Write Command ATS8=<n>	Response OK Parameter <n> 0 no pause when comma encountered in dial string 1-255 number of seconds to wait
Reference V.25ter	Note <ul style="list-style-type: none"> ● No effect for GSM

2.2.22 ATS10 Set Disconnect Delay After Indicating The Absence Of Data Carrier

ATS10 Set Disconnect Delay After Indicating The Absence Of Data Carrier	
Read Command ATS10?	Response <n> OK
Write Command ATS10=<n>	Response This parameter setting determines the amount of time that the TA will remain connected in absence of data carrier. If the data carrier is once more detected before disconnect, the TA remains connected. OK Parameter <n> 1- <u>15</u> -254 number of tenths seconds of delay
Reference V.25ter	Note

2.2.23 ATT Select Tone Dialing

ATT Select Tone Dialing	
Execution Command	Response OK

ATT	Parameter
Reference V.25ter	Note <ul style="list-style-type: none"> ● No effect in GSM

2.2.24 ATV TA Response Format

ATV TA Response Format							
Execution Command ATV<value>	<p>Response</p> <p>This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses.</p> <p>When <value>=0</p> <p>0</p> <p>When <value>=1</p> <p>OK</p>						
	<p>Parameter</p> <table> <tr> <td><value></td> <td>0</td> <td>Information response: <text><CR><LF> Short result code format: <numeric code><CR></td> </tr> <tr> <td></td> <td>1</td> <td>Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF></td> </tr> </table> <p>The result codes, their numeric equivalents and brief descriptions of the use of each are listed in the following table.</p>	<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>		1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>
<value>	0	Information response: <text><CR><LF> Short result code format: <numeric code><CR>					
	1	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>					
Reference V.25ter	Note						

ATV1	ATV0	Description
OK	0	Acknowledges execution of a Command
CONNECT	1	A connection has been established; the DCE is moving from Command state to online data state
RING	2	The DCE has detected an incoming call signal from network
NO CARRIER	3	The connection has been terminated or the attempt to establish a connection failed
ERROR	4	Command not recognized, Command line maximum length exceeded, parameter value invalid, or other problem with processing the Command line
NO DIALTONE	6	No dial tone detected
BUSY	7	Engaged (busy) signal detected
NO ANSWER	8	"@" (Wait for Quiet Answer) dial modifier was used, but remote ringing followed by five seconds of silence was not detected before expiration of the connection timer (S7)
PROCEEDING	9	An AT command is being processed
CONNECT	Manufacturer-	Same as CONNECT, but includes

<text>	specific	manufacturer-specific text that may specify DTE speed, line speed, error control, data compression, or other status
--------	----------	---

2.2.25 ATX Set CONNECT Result Code Format And Monitor Call Progress

ATX Set CONNECT Result Code Format And Monitor Call Progress	
Execution Command ATX<value>	<p>Response</p> <p>This parameter setting determines whether or not the TA detected the presence of dial tone and busy signal and whether or not TA transmits particular result codes</p> <p>OK</p> <hr/> <p>Parameter</p> <p><value></p> <p>0 CONNECT result code only returned, dial tone and busy detection are both disabled</p> <p>1 CONNECT<text> result code only returned, dial tone and busy detection are both disabled</p> <p>2 CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled</p> <p>3 CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled</p> <p>4 CONNECT<text> result code returned, dial tone and busy detection are both enabled</p>
Reference V.25ter	Note

2.2.26 ATZ Set All Current Parameters To User Defined Profile

ATZ Set All Current Parameters To User Defined Profile	
Execution Command ATZ[<value>]	<p>Response</p> <p>TA sets all current parameters to the user defined profile.</p> <p>OK</p> <hr/> <p>Parameter</p> <p><value> <u>0</u> Reset to profile number 0</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● The user defined profile is stored in non volatile memory; ● If the user profile is not valid, it will default to the factory default profile; ● Any additional commands on the same Command line are ignored.

2.2.27 AT&C Set DCD Function Mode

AT&C Set DCD Function Mode	
Execution Command AT&C[<value>]	<p>Response</p> <p>This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end.</p>

	OK
	Parameter <value> 0 DCD line is always ON <u>1</u> DCD line is ON only in the presence of data carrier
Reference V.25ter	Note

2.2.28 AT&D Set DTR Function Mode

AT&D Set DTR Function Mode	
Execution Command AT&D[<value>]	Response This parameter determines how the TA responds when circuit 108/2(DTR) is changed from the ON to the OFF condition during data mode. OK
	Parameter <value> 0 TA ignores status on DTR <u>1</u> ON->OFF on DTR: Change to Command mode with remaining the connected call 2 ON->OFF on DTR: Disconnect call, change to Command mode. During state DTR = OFF is auto-answer off.
Reference V.25ter	Note

2.2.29 AT&F Set All Current Parameters To Manufacturer Defaults

AT&F Set All Current Parameters To Manufacturer Defaults	
Execution Command AT&F[<value>]	Response TA sets all current parameters to the manufacturer defined profile. OK
	Parameter <value> <u>0</u> set all TA parameters to manufacturer defaults.
Reference V.25ter	Note

2.2.30 AT&V Display Current Configuration

AT&V Display Current Configuration	
Execution Command AT&V[<n>]	Response TA returns the current parameter setting. <current configurations text> OK
	Parameter <n> <u>0</u> profile number
Reference V.25ter	Note

2.2.31 AT&W Store Current Parameter To User Defined Profile

AT&W Store Current Parameter To User Defined Profile	
Execution Command AT&W[<n>]	Response TA stores the current parameter setting in the user defined profile. OK
	Parameter <n> <u>0</u> profile number to store to
Reference V.25ter	Note <ul style="list-style-type: none"> The user defined profile is stored in non volatile memory.

2.2.32 AT+DR V.42bis Data Compression Reporting Control

AT+DR V.42bis Data Compression Reporting Control	
Test Command AT+DR=?	Response +DR: (list of supported <value>s) OK
	Parameter See Write Command.
Read Command AT+DR?	Response +DR: <value> OK
	Parameter See Write Command.
Write Command AT+DR=[<value>]	Response This parameter setting determines whether or not intermediate result code of the current data compressing is reported by TA to TE after a connection establishment. OK
	Parameter <value> <u>0</u> reporting disabled
Reference V.25ter	Note

2.2.33 AT+DS V.42bis Data Compression Control

AT+DS V.42bis Data Compression Control	
Test Command AT+DS=?	Response +DS: (list of supported <p0>s), (list of supported <n>s), (list of supported <p1>s), (list of supported <p2>s)

	<p>OK</p> <p>Parameter See Write Command.</p>															
Read Command AT+DS?	<p>Response +DS: <p0>,<n>,<p1>,<p2></p> <p>OK</p> <p>Parameter See Write Command.</p>															
Write Command AT+DS=[<p0>,<n>,<p1>,<p2>]]]	<p>Response This parameter setting determines the possible data compression mode by TA at the compression negotiation with the remote TA after a call set up.</p> <p>OK</p> <p>Parameters</p> <table> <tr> <td><p0></td> <td>0</td> <td>NONE</td> </tr> <tr> <td><n></td> <td>0</td> <td>allow negotiation of p0 down</td> </tr> <tr> <td></td> <td>1</td> <td>do not allow negotiation of p0 - disconnect on difference</td> </tr> <tr> <td><p1></td> <td>512-4096</td> <td>dictionary size</td> </tr> <tr> <td><p2></td> <td>6-250</td> <td>maximum string size (default 6)</td> </tr> </table>	<p0>	0	NONE	<n>	0	allow negotiation of p0 down		1	do not allow negotiation of p0 - disconnect on difference	<p1>	512-4096	dictionary size	<p2>	6-250	maximum string size (default 6)
<p0>	0	NONE														
<n>	0	allow negotiation of p0 down														
	1	do not allow negotiation of p0 - disconnect on difference														
<p1>	512-4096	dictionary size														
<p2>	6-250	maximum string size (default 6)														
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● This Command is only for data call; ● GSM transmits the data transparent. The remote TA may support this compression; ● This Command must be used in conjunction with Command AT+CRLP to enable compression (+CRLP=X,X,X,X,1,X). 															

2.2.34 AT+GCAP Request Complete TA Capabilities List

AT+GCAP Request Complete TA Capabilities List							
Test Command AT+GCAP=?	<p>Response OK</p> <p>Parameter</p>						
Execution Command AT+GCAP	<p>Response TA reports a list of additional capabilities. +GCAP: <name>s</p> <p>OK</p> <p>Parameters</p> <table> <tr> <td><name></td> <td>+CGSM</td> <td>GSM function is supported</td> </tr> <tr> <td></td> <td>+FCLASS</td> <td>FAX function is supported</td> </tr> </table>	<name>	+CGSM	GSM function is supported		+FCLASS	FAX function is supported
<name>	+CGSM	GSM function is supported					
	+FCLASS	FAX function is supported					
Reference V.25ter	<p>Note</p>						

2.2.35 AT+GMI Request Manufacture Identification

AT+GMI Request Manufacture Identification	
Test Command AT+GMI=?	Response OK
	Parameter
Execution Command AT+GMI	TA reports one or more lines of information text which permit the user to identify the manufacturer. Quectel_Ltd
	OK Parameter
Reference V.25ter	Note

2.2.36 AT+GMM Request TA Model Identification

AT+GMM Request TA Model Identification	
Test Command AT+GMM=?	Response OK
	Parameter
Execution Command AT+GMM	TA reports one or more lines of information text which permit the user to identify the specific model of device. Quectel_M10
	OK Parameter
Reference V.25ter	Note

2.2.37 AT+GMR Request TA Revision Identification Of Software Release

AT+GMR Request TA Revision Identification Of Software Release	
Test Command AT+GMR=?	Response OK
	Parameter
Execution Command AT+GMR	TA reports one or more lines of information text which permit the user to identify the revision of software release. Revision: <revision>
	OK

	Parameter <revision> revision of software release
Reference V.25ter	Note

2.2.38 AT+GOI Request Global Object Identification

AT+GOI Request Global Object Identification	
Test Command AT+GOI=?	Response OK
	Parameter
Execution Command AT+GOI	Response TA reports one or more lines of information text which permit the user to identify the device, based on the ISO system for registering unique object identifiers. <Object Id> OK
	Parameter <Object Id> identifier of device type see X.208, 209 for the format of <Object Id>
Reference V.25ter	Note For example in M10 wireless module, string “M10” is displayed.

2.2.39 AT+GSN Request TA Serial Number Identification (IMEI)

AT+GSN Request TA Serial Number Identification(IMEI)	
Test Command AT+GSN=?	Response OK
	Parameter
Execution Command AT+GSN	Response TA reports the IMEI (international mobile equipment identifier) number in information text which permit the user to identify the individual ME device. <sn> OK
	Parameter <sn> IMEI of the telephone(International Mobile station Equipment Identity)
Reference V.25ter	Note ● The serial number (IMEI) is varied by individual ME device.

2.2.40 AT+ICF Set TE-TA Control Character Framing

AT+ICF Set TE-TA Control Character Framing																															
Test Command AT+ICF=?	<p>Response</p> <p>+ICF: (list of supported <format>s), (list of supported <parity>s)</p> <p>OK</p> <p>Parameter</p> <p>See Write Command.</p>																														
Read Command AT+ICF?	<p>Response</p> <p>+ICF: <format>,<parity></p> <p>OK</p> <p>Parameter</p> <p>See Write Command.</p>																														
Write Command AT+ICF=[<format>],[<parity>]	<p>Response</p> <p>This parameter setting determines the serial interface character framing format and parity received by TA from TE.</p> <p>OK</p> <p>Parameters</p> <table border="0"> <tr> <td><format></td> <td>1</td> <td>8 data 0 parity 2 stop</td> </tr> <tr> <td></td> <td>2</td> <td>8 data 1 parity 1 stop</td> </tr> <tr> <td></td> <td><u>3</u></td> <td>8 data 0 parity 1 stop</td> </tr> <tr> <td></td> <td>4</td> <td>7 data 0 parity 2 stop</td> </tr> <tr> <td></td> <td>5</td> <td>7 data 1 parity 1 stop</td> </tr> <tr> <td></td> <td>6</td> <td>7 data 0 parity 1 stop</td> </tr> <tr> <td><parity></td> <td>0</td> <td>odd</td> </tr> <tr> <td></td> <td>1</td> <td>even</td> </tr> <tr> <td></td> <td>2</td> <td>mark (1)</td> </tr> <tr> <td></td> <td><u>3</u></td> <td>space (0)</td> </tr> </table>	<format>	1	8 data 0 parity 2 stop		2	8 data 1 parity 1 stop		<u>3</u>	8 data 0 parity 1 stop		4	7 data 0 parity 2 stop		5	7 data 1 parity 1 stop		6	7 data 0 parity 1 stop	<parity>	0	odd		1	even		2	mark (1)		<u>3</u>	space (0)
<format>	1	8 data 0 parity 2 stop																													
	2	8 data 1 parity 1 stop																													
	<u>3</u>	8 data 0 parity 1 stop																													
	4	7 data 0 parity 2 stop																													
	5	7 data 1 parity 1 stop																													
	6	7 data 0 parity 1 stop																													
<parity>	0	odd																													
	1	even																													
	2	mark (1)																													
	<u>3</u>	space (0)																													
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> ● The Command is applied for Command state; ● The <parity> field is ignored if the < format > field specifies no parity. 																														

2.2.41 AT+IFC Set TE-TA Local Data Flow Control

AT+IFC Set TE-TA Local Data Flow Control	
Test Command AT+IFC=?	<p>Response</p> <p>+IFC: (list of supported <dce_by_dte>s), (list of supported <dte_by_dce>s)</p> <p>OK</p> <p>Parameter</p> <p>See Write Command.</p>
Read Command	Response

AT+IFC?	+IFC: <dce_by_dte>,<dte_by_dce> OK Parameter See Write Command.
Write Command AT+IFC=[<dce_by_dte>,<dte_by_dce>]	Response This parameter setting determines the data flow control on the serial interface for data mode. OK Parameters <dce_by_dte> specifies the method will be used by TE at receive of data from TA 0 None 1 XON/XOFF, don't pass characters on to data stack 2 RTS flow control 3 XON/XOFF, pass characters on to data stack <dte_by_dce> specifies the method will be used by TA at receive of data from TE 0 None 1 XON/XOFF 2 CTS flow control
Reference V.25ter	Note <ul style="list-style-type: none"> ● This flow control is applied for data mode;

2.2.42 AT+ILRR Set TE-TA Local Data Rate Reporting Mode

AT+ILRR Set TE-TA Local Data Rate Reporting Mode	
Test Command AT+ILRR=?	Response +ILRR: (list of supported <value>s) OK Parameter See Write Command.
Read Command AT+ILRR?	Response +ILRR: <value> OK Parameter See Write Command.
Write Command AT+ILRR=[<value>]	Response This parameter setting determines whether or not an intermediate result code of local rate is reported at connection establishment. The rate is applied after the final result code of the connection is transmitted to TE. OK Parameter

	<p><value> 0 Disables reporting of local port rate 1 Enables reporting of local port rate</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> If the <value> is set to 1, the following intermediate result will come out on connection to indicate the port rate settings +ILRR:<rate> <rate> port rate setting on call connection in Baud per second 300 1200 2400 4800 9600 14400 19200 28800 38400 57600 <u>115200</u>

2.2.43 AT+IPR Set TE-TA Fixed Local Rate

AT+IPR Set TE-TA Fixed Local Rate	
Test Command AT+IPR=?	<p>Response +IPR: (list of supported auto detectable <rate>s),(list of supported fixed-only<rate>s) OK</p> <p>Parameter See Write Command.</p>
Read Command AT+IPR?	<p>Response +IPR: <rate> OK</p> <p>Parameter See Write Command.</p>
Write Command AT+IPR=<rate>	<p>Response This parameter setting determines the data rate of the TA on the serial interface. The rate of Command takes effect following the issuance of any result code associated with the current Command line. OK</p> <p>Parameter <rate> Baud rate per second 0(Autobauding ,see chapter 2.2.45.1) 75 150</p>

	300 600 1200 2400 4800 9600 14400 19200 28800 38400 57600 <u>115200</u>
Reference V.25ter	Note Factory setting is AT+IPR=0 (autobauding) .It can be restored with AT&F and ATZ when you modified the bit rate's value.

2.2.43.1 Autobauding

Synchronization between DTE and DCE ensure that DTE and DCE are correctly synchronized and the bit rate used by the DTE is detected by the DCE (= ME). To allow the bit rate to be synchronized simply issue an "AT" or "at" string. This is necessary when you start up the module while autobauding is enabled. It is recommended to wait 3 to 5 seconds before sending the first AT character. Otherwise undefined characters might be returned.

If you want to use autobauding and auto-answer at the same time, you can easily enable the DTE-DCE synchronization, when you activate autobauding first and then configure the auto-answer mode.

Restrictions on autobauding operation

- The serial interface has to be operated at 8 data bits, no parity and 1 stop bit (factory setting).
- Only the strings .AT. or .at. can be detected.
- Unsolicited Result Codes that may be issued before the ME detects the new bit rate (by receiving the first AT Command string) will be sent at the previously detected bit rate.
- The Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME while autobauding is enabled.
- It is not recommended to switch to autobauding from a bit rate that cannot be detected by the autobauding mechanism (e.g. 300 baud). Responses to +IPR=0 and any commands on the same line might be corrupted.
- See also Chapter 2.2.44.

Autobauding and bit rate after restart

The most recently detected bit rate cannot be stored when module is powered down (Store bit rate determined with AT&W). Therefore, module will detect bit rate again after restart.

3 AT Commands According to GSM07.07

3.1 Overview of AT Command According to GSM07.07

Command	Description
AT+CACM	ACCUMULATED CALL METER(ACM) RESET OR QUERY
AT+CAMM	ACCUMULATED CALL METER MAXIMUM(ACM MAX) SET OR QUERY
AT+CAOC	ADVICE OF CHARGE
AT+CBST	SELECT BEARER SERVICE TYPE
AT+CCFC	CALL FORWARDING NUMBER AND CONDITIONS CONTROL
AT+CCUG	CLOSED USER GROUP CONTROL
AT+CCWA	CALL WAITING CONTROL
AT+CEER	EXTENDED ERROR REPORT
AT+CGMI	REQUEST MANUFACTURER IDENTIFICATION
AT+CGMM	REQUEST MODEL IDENTIFICATION
AT+CGMR	REQUEST TA REVISION IDENTIFICATION OF SOFTWARE RELEASE
AT+CGSN	REQUEST PRODUCT SERIAL NUMBER IDENTIFICATION (IDENTICAL WITH +GSN)
AT+CSCS	SELECT TE CHARACTER SET
AT+CSTA	SELECT TYPE OF ADDRESS
AT+CHLD	CALL HOLD AND MULTIPARTY
AT+CIMI	REQUEST INTERNATIONAL MOBILE SUBSCRIBER IDENTITY
AT+CKPD	KEYPAD CONTROL
AT+CLCC	LIST CURRENT CALLS OF ME
AT+CLCK	FACILITY LOCK
AT+CLIP	CALLING LINE IDENTIFICATION PRESENTATION
AT+CLIR	CALLING LINE IDENTIFICATION RESTRICTION
AT+CMEE	REPORT MOBILE EQUIPMENT ERROR
AT+COLP	CONNECTED LINE IDENTIFICATION PRESENTATION
AT+COPS	OPERATOR SELECTION
AT+CPAS	MOBILE EQUIPMENT ACTIVITY STATUS
AT+CPBF	FIND PHONEBOOK ENTRIES
AT+CPBR	READ CURRENT PHONEBOOK ENTRIES
AT+CPBS	SELECT PHONEBOOK MEMORY STORAGE
AT+CPBW	WRITE PHONEBOOK ENTRY
AT+CPIN	ENTER PIN
AT+CPWD	CHANGE PASSWORD
AT+CR	SERVICE REPORTING CONTROL
AT+CRC	SET CELLULAR RESULT CODES FOR INCOMING CALL INDICATION
AT+CREG	NETWORK REGISTRATION

AT+CRLP	SELECT RADIO LINK PROTOCOL PARAMETER
AT+CRSM	RESTRICTED SIM ACCESS
AT+CSQ	SIGNAL QUALITY REPORT
AT+FCLASS	FAX: SELECT, READ OR TEST SERVICE CLASS
AT+FMI	FAX: REPORT MANUFACTURED ID
AT+FMM	FAX: REPORT MODEL ID
AT+FMR	FAX: REPORT REVISION ID
AT+VTD	TONE DURATION
AT+VTS	DTMF AND TONE GENERATION
AT+CMUX	MULTIPLEXER CONTROL
AT+CNUM	SUBSCRIBER NUMBER
AT+CPOL	PREFERRED OPERATOR LIST
AT+COPN	READ OPERATOR NAMES
AT+CFUN	SET PHONE FUNCTIONALITY
AT+CCLK	CLOCK
AT+CSIM	GENERIC SIM ACCESS
AT+CALM	ALERT SOUND MODE
AT+CRSL	RINGER SOUND LEVEL
AT+CLVL	LOUD SPEAKER VOLUME LEVEL
AT+CMUT	MUTE CONTROL
AT+CPUC	PRICE PER UNIT CURRENCY TABLE
AT+CCWE	CALL METER MAXIMUM EVENT
AT+CBC	BATTERY CHARGE
AT+CUSD	UNSTRUCTURED SUPPLEMENTARY SERVICE DATA
AT+CSSN	SUPPLEMENTARY SERVICES NOTIFICATION
AT+CSNS	SINGLE NUMBERING SCHEME
AT+CMOD	CONFIGRUE ALTERNATING MODE CALLS

3.2 Detailed Descriptions of AT Command According to GSM07.07

3.2.1 AT+CACM Accumulated Call Meter (ACM) Reset Or Query

AT+CACM Accumulated Call Meter(ACM) Reset Or Query	
Test Command AT+CACM=?	Response OK Parameter
Read Command AT+CACM?	Response TA returns the current value of ACM. +CACM: <acm> OK If error is related to ME functionality: +CME ERROR: <err> Parameter <acm> string type; three bytes of the current ACM value in hexa-decimal format (e.g. "00001E" indicates

	decimal value 30) 000000 - FFFFFFFF
Write Command AT+CACM=[<passwd>]	Parameter <passwd> string type: SIM PIN2 Response TA resets the Advice of Charge related accumulated call meter (ACM) value in SIM file EF (ACM). ACM contains the total number of home units for both the current and preceding calls. OK If error is related to ME functionality: +CME ERROR: <err>
Reference GSM 07.07 [13]	Note

3.2.2 AT+CAMM Accumulated Call Meter Maximum (ACM max) Set Or Query

AT+CAMM Accumulated Call Meter Maximum(ACM max) Set Or Query	
Test Command AT+CAMM=?	Response OK Parameter
Read Command AT+ CAMM?	Response TA returns the current value of ACM max. +CAMM: <acmmax> OK If error is related to ME functionality: +CME ERROR: <err> Parameters see Write Command
Write Command AT+CAMM=[<acmmax>[,<passwd>]]	Response TA sets the Advice of Charge related accumulated call meter maximum value in SIM file EF (ACM max). ACM max contains the maximum number of home units allowed to be consumed by the subscriber. OK If error is related to ME functionality: +CME ERROR: <err> Parameters <acmmax> string type; three bytes of the max. ACM value in hex-decimal format (e.g. "00001E" indicates decimal value 30) 000000 disable ACMmax feature 000001-FFFFFF <passwd> string type SIM PIN2

Reference GSM 07.07 [13]	Note
-----------------------------	------

3.2.3 AT+CAOC Advice Of Charge

AT+CAOC Advice Of Charge	
Test Command AT+CAOC=?	Response +CAOC: (list of supported <mode>s) OK Parameters see Write Command
Read Command AT+CAOC?	Response +CAOC: <mode> OK Parameters see Write Command
Write Command AT+CAOC=<mode>	Response TA sets the Advice of Charge supplementary service function mode. If error is related to ME functionality: +CME ERROR: <err> If <mode>=0, TA returns the current call meter value +CAOC: <ccm> OK If <mode>=1, TA deactivates the unsolicited reporting of CCM value OK If <mode>=2, TA activates the unsolicited reporting of CCM value OK Parameters <mode> 0 query CCM value 1 deactivate the unsolicited reporting of CCM value 2 activate the unsolicited reporting of CCM value <ccm> string type; three bytes of the current CCM value in hex-decimal format (e.g. "00001E" indicates decimal value 30); bytes are similarly coded as ACMmax value in the SIM 000000-FFFFFF
Reference GSM 07.07 [13]	Note

3.2.4 AT+CBST Select Bearer Service Type

AT+CBST Select Bearer Service Type

Test Command AT+CBST=?	Response +CBST: (list of supported <speed>s) ,(list of supported <name>s) ,(list of supported <ce>s) OK Parameter see Write Command
Read Command AT+CBST?	Response +CBST: <speed>,<name>,<ce> OK Parameter see Write Command
Write Command AT+CBST=[<speed>] [,<name>[,<ce>]]]	Response TA selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated. OK Parameters <speed> 0 autobauding 4 2400 bps(V.22bis) 5 2400 bps(V.26ter) 6 4800 bps(V.32) 7 9600 bps(V.32) 12 9600 bps(V.34) 14 14400 bps(V.34) 68 2400 bps(V.110 or X.31 flag stuffing) 70 4800 bps(V.110 or X.31 flag stuffing) 71 9600 bps(V.110 or X.31 flag stuffing) 75 14400 bps(V.110 or X.31 flag stuffing) <name> 0 asynchronous modem <ce> 0 transparent 1 non-transparent 2 both, transparent preferred 3 both, non-transparent preferred
Reference GSM 07.07 [14]	Note GSM 02.02[1]: lists the allowed combinations of the sub parameters

3.2.5 AT+CCFC Call Forwarding Number And Conditions Control

AT+CCFC Call Forwarding Number And Conditions Control	
Test Command AT+CCFC=?	Response +CCFC: (list of supported <reads>)

	<p>OK</p> <p>Parameters see Write Command</p>
<p>Write Command AT+CCFC = <reads>, <mode> [, <number> [, <type> [, <class> [, <subaddr> [, <satype> [, <time>]]]]]</p>	<p>Response</p> <p>TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.</p> <p>Only ,<reads> and <mode> should be entered with mode (0-2,4)</p> <p>If <mode>=2 and Command successful</p> <p>OK</p> <p>If <mode>=2 and Command successful (only in connection with <reads> 0 – 3)</p> <p>For registered call forward numbers:</p> <p>+CCFC: <status>, <class1>[, <number>, <type> [, <subaddr>, <satype>[, <time>]]] [<CR><LF>+CCFC:]</p> <p>OK</p> <p>If no call forward numbers are registered (and therefore all classes are inactive):</p> <p>+CCFC: <status>, <class></p> <p>OK</p> <p>where <status>=0 and <class>=7</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
	<p>Parameters</p> <p><reads></p> <p>0 unconditional 1 mobile busy 2 no reply 3 not reachable 4 all call forwarding (0-3) 5 all conditional call forwarding (1-3)</p> <p><mode></p> <p>0 disable 1 enable 2 query status 3 registration 4 erasure</p> <p><number> string type phone number of forwarding address in format specified by <type></p>

	<p><type> type of address in integer format; default 145 when dialing string includes international access code character "+", otherwise 129</p> <p><subaddr> string type subaddress of format specified by <satype></p> <p><satype> type of sub-address in integer</p> <p><class></p> <ul style="list-style-type: none"> 1 voice 2 data 4 fax 7 all telephony except sms 8 short message service 16 data circuit sync 32 data circuit async <p><time> time to wait before call is forwarded,rounded to a multiple of 5 sec. 1...20..30 (only for <reas>=no reply)</p> <p><status></p> <ul style="list-style-type: none"> 0 not active 1 active
Reference GSM07.07	Note

3.2.6 AT+CCUG Closed User Group Control

AT+CCUG Closed User Group Control																									
Read Command AT+CCUG?	Response +CCUG: <n>,<index>,<info> OK If error is related to ME functionality: +CME ERROR: <err>																								
	Parameter see Write Command																								
Test Command AT+CCUG=?	Response OK																								
Write Command AT+CCUG=[<n> >] [,<index>,<info >]]	TA sets the Closed User Group supplementary service parameters as a default adjustment for all following calls. OK If error is related to ME functionality: +CME ERROR: <err>																								
	Parameters <table border="0"> <tr> <td><n></td> <td><u>0</u></td> <td>disable CUG</td> </tr> <tr> <td></td> <td>1</td> <td>enable CUG</td> </tr> <tr> <td><index></td> <td><u>0</u>...9</td> <td>CUG index</td> </tr> <tr> <td></td> <td>10</td> <td>no index (preferred CUG taken from subscriber data)</td> </tr> <tr> <td><info></td> <td><u>0</u></td> <td>no information</td> </tr> <tr> <td></td> <td>1</td> <td>suppress OA (Outgoing Access)</td> </tr> <tr> <td></td> <td>2</td> <td>suppress preferential CUG</td> </tr> <tr> <td></td> <td>3</td> <td>suppress OA and preferential CUG</td> </tr> </table>	<n>	<u>0</u>	disable CUG		1	enable CUG	<index>	<u>0</u> ...9	CUG index		10	no index (preferred CUG taken from subscriber data)	<info>	<u>0</u>	no information		1	suppress OA (Outgoing Access)		2	suppress preferential CUG		3	suppress OA and preferential CUG
<n>	<u>0</u>	disable CUG																							
	1	enable CUG																							
<index>	<u>0</u> ...9	CUG index																							
	10	no index (preferred CUG taken from subscriber data)																							
<info>	<u>0</u>	no information																							
	1	suppress OA (Outgoing Access)																							
	2	suppress preferential CUG																							
	3	suppress OA and preferential CUG																							
Reference	Note																								

3.2.7 AT+CCWA Call Waiting Control

AT+CCWA Call Waiting Control	
Read Command AT+CCWA?	Response +CCWA: <n> OK
Test Command AT+CCWA=?	Response +CCWA: (list of supported <n>s) OK
Write Command AT+CCWA=[<n >] [,<mode>,<class >]]	Response TA controls the Call Waiting supplementary service. Activation, deactivation and status query are supported. If <mode><>2 and Command successful OK

	<p>If <mode>=2 and Command successful +CCWA:<status>,<class1>[<CR><LF>+CCWA:<status>,<class2>[...]]</p> <p>OK</p> <p>Note :< status>=0 should be returned only if service is not active for any <class> i.e. +CCWA: 0, 7 will be returned in this case.</p> <p>When mode=2, all active call waiting classes will be reported. In this mode the Command is abort able by pressing any key.</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <p><n> 0 disable presentation of an unsolicited result code 1 enable presentation of an unsolicited result code</p> <p><mode> when <mode> parameter not given, network is not interrogated 0 disable 1 enable 2 query status</p> <p><class> is a sum of integers each representing a class of information 1 voice (telephony) 2 data (bearer service) 4 fax (facsimile) 16 data circuit sync 32 data circuit async</p> <p><status> 0 not active 1 enable</p>
	<p>Unsolicited result code</p> <p>When the presentation Call Waiting at the TA is enabled (and Call Waiting is enabled) and a terminating call set up has attempted during an established call, an unsolicited result code is returned: +CCWA: <number>,<type>,<class>[,<alpha>]</p>
	<p>Parameters</p> <p><number> string type phone number of calling address in format specified by <type></p> <p><type> type of address octet in integer format; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)</p> <p><alpha> optional string type alphanumeric representation of <number> corresponding to the entry found in phone book</p>

Reference GSM 07.07	Note
------------------------	------

3.2.8 AT+CEER Extended Error Report

AT+CEER Extended Error Report	
Test Command AT+CEER=?	Response OK
Execution Command AT+CEER	Response TA returns an extended report of the reason for the last call release. +CEER: <report> OK Parameter <report> Reason for last call release as number code
Reference GSM 07.07 [13]	Note

3.2.9 AT+CGMI Request Manufacturer Identification

AT+CGMI Request Manufacturer Identification	
Test Command AT+CGMI=?	Response OK
Execution Command AT+CGMI	Response TA returns manufacturer identification text. <manufacturer> OK Parameter <manufacturer>
Reference GSM 07.07 [13]	Note

3.2.10 AT+CGMM Request Model Identification

AT+CGMM Request Model Identification	
Test Command AT+CGMM=?	Response OK
Execution Command AT+CGMM	Response TA returns product model identification text. <model>

	<p>OK Parameter <model> product model identification text.</p>
Reference GSM 07.07 [13]	Note

3.2.11 AT+CGMR Request TA Revision Identification Of Software Release

AT+CGMR Request TA Revision Identification Of Software Release	
Test Command AT+CGMR=?	Response OK
Execution Command AT+CGMR	Response TA returns product software version identification text. Revision: <revision> OK Parameter <revision> product software version identification text.
Reference GSM 07.07 [13]	Note

3.2.12 AT+CGSN Request Product Serial Number Identification (Identical With +GSN)

AT+CGSN Request Product Serial Number Identification (Identical With +GSN)	
Test Command AT+CGSN=?	Response OK
Execution Command AT+CGSN	Response see +GSN <sn> OK Parameter see +GSN
Reference GSM 07.07 [13]	Note

3.2.13 AT+CSCS Select TE Character Set

AT+CSCS Select TE Character Set	
Test Command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) OK Parameters <chset> "GSM" GSM default alphabet. "HEX" character strings consist only of

	<p>hexadecimal numbers from 00 to FF; "IRA" international reference alphabet "PCCP437" PC character set Code "UCS2" UCS2 alphabet "8859-1" ISO 8859 Latin I character set</p>
Read Command AT+CSCS?	<p>Response +CSCS: <chset></p> <p>OK Parameter <chset> see Test Command</p>
Write Command AT+CSCS=<chset>	<p>Response Sets which character set <chset> are used by the TE. The TA can then convert character strings correctly between the TE and ME character sets.</p> <p>Parameter <chset> see Test Command</p>
Reference GSM 07.07 [13]	Note

3.2.14 AT+CSTA Select Type Of Address

AT+CSTA Select Type Of Address	
Test Command AT+CSTA=?	<p>Response +CSTA: (129,145, 161,)</p> <p>OK</p>
Read Command AT+CSTA?	<p>Response +CSTA: <type></p> <p>OK Parameter < type > Current address type setting.</p>
Reference GSM 07.07 [13]	<p>Note</p> <p>The ATD Command overrides this setting when a number is dialed.</p> <p>129 Unknown type(ISDN format number) 161 National number type(ISDN format) 145 International number type(ISDN format)</p>

3.2.15 AT+CHLD Call Hold And Multiparty

AT+CHLD Call Hold And Multiparty	
Test Command AT+CHLD=?	<p>Response +CHLD: (list of supported <n>s)</p> <p>OK</p>

<p>Write Command AT+CHLD=[<n>]</p>	<p>Response</p> <p>TA controls the supplementary services Call Hold, Multiparty and Explicit Call Transfer. Calls can be put on hold, recovered, released, added to conversation, and transferred.</p> <p>Note These supplementary services are only applicable to tele service 11 (Speech: Telephony).</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <hr/> <p>Parameter</p> <table border="0"> <tr> <td style="vertical-align: top;"><n></td> <td style="vertical-align: top;">0</td> <td>Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).</td> </tr> <tr> <td></td> <td style="vertical-align: top;">1</td> <td>Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.</td> </tr> <tr> <td></td> <td style="vertical-align: top;">1X</td> <td>Terminate the specific call number X (X= 1-7)(active, waiting or held)</td> </tr> <tr> <td></td> <td style="vertical-align: top;">2</td> <td>Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call</td> </tr> <tr> <td></td> <td style="vertical-align: top;">2X</td> <td>Place all active calls except call X (X= 1-7) on hold</td> </tr> <tr> <td></td> <td style="vertical-align: top;">3</td> <td>Add the held call to the active calls</td> </tr> </table>	<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).		1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.		1X	Terminate the specific call number X (X= 1-7)(active, waiting or held)		2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call		2X	Place all active calls except call X (X= 1-7) on hold		3	Add the held call to the active calls
<n>	0	Terminate all held calls or UDUB (User Determined User Busy) for a waiting call. If a call is waiting, terminate the waiting call. Otherwise, terminate all held calls (if any).																	
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call). It can not terminate active call if there is only one call.																	
	1X	Terminate the specific call number X (X= 1-7)(active, waiting or held)																	
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call																	
	2X	Place all active calls except call X (X= 1-7) on hold																	
	3	Add the held call to the active calls																	
Reference	Note																		

3.2.16 AT+CIMI Request International Mobile Subscriber Identity

AT+CIMI Request International Mobile Subscriber Identity	
<p>Test Command AT+CIMI=?</p>	<p>Response</p> <p>OK</p> <p>Parameter</p>
<p>Execution Command AT+CIMI</p>	<p>Response</p> <p>TA returns <IMSI>for identifying the individual SIM which is attached to ME.</p> <p><IMSI></p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameter</p> <p><IMSI> International Mobile Subscriber Identity (string without double quotes)</p>

Reference GSM 07.07 [13]	Note
-----------------------------	------

3.2.17 AT+CKPD Keypad Control

AT+CKPD Keypad Control																															
Test Command AT+ CKPD=?	Response OK Parameters																														
Write Command AT+CKPD=[<keys> ,<time>[,<pause>]]]	<p>Response</p> <p>TA emulates ME keypad by giving each keystroke as a character in a string <keys>. <time>*0.1 seconds is the time to stroke each key and <pause>*0.1 seconds is the length of pause between two strokes.</p> <p>Keystrokes <keys> are emulated.</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <p><keys> string of characters representing keys as listed in the following table (based on PCCA STD-101 Annex table I-3):</p> <table border="1"> <thead> <tr> <th>Char.:</th> <th>ASCII-Code:</th> <th>Note:</th> </tr> </thead> <tbody> <tr> <td>#</td> <td>35</td> <td>hash (number sign)</td> </tr> <tr> <td>*</td> <td>42</td> <td>star (*)</td> </tr> <tr> <td>0... 9</td> <td>48... 57</td> <td>number keys</td> </tr> <tr> <td>:</td> <td>58</td> <td>escape character for manufacturer specific keys</td> </tr> <tr> <td>D/d</td> <td>68/100</td> <td>volume down</td> </tr> <tr> <td>E/e</td> <td>69/101</td> <td>connection end (END)</td> </tr> <tr> <td>R/r</td> <td>82/114</td> <td>recall last number (R/RCL/MR)</td> </tr> <tr> <td>S/s</td> <td>83/115</td> <td>connection start (SEND)</td> </tr> <tr> <td>U/u</td> <td>85/117</td> <td>volume up</td> </tr> </tbody> </table> <p><time> 0...255 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p> <p><pause> 0... 25.5 seconds (default value is manufacturer specific, but should be so long that a normal ME can handle keystrokes correctly)</p>	Char.:	ASCII-Code:	Note:	#	35	hash (number sign)	*	42	star (*)	0... 9	48... 57	number keys	:	58	escape character for manufacturer specific keys	D/d	68/100	volume down	E/e	69/101	connection end (END)	R/r	82/114	recall last number (R/RCL/MR)	S/s	83/115	connection start (SEND)	U/u	85/117	volume up
Char.:	ASCII-Code:	Note:																													
#	35	hash (number sign)																													
*	42	star (*)																													
0... 9	48... 57	number keys																													
:	58	escape character for manufacturer specific keys																													
D/d	68/100	volume down																													
E/e	69/101	connection end (END)																													
R/r	82/114	recall last number (R/RCL/MR)																													
S/s	83/115	connection start (SEND)																													
U/u	85/117	volume up																													
Reference GSM 07.07 [13]	Note																														

3.2.18 AT+CLCC List Current Calls Of ME

AT+CLCC List Current Calls Of ME	
Test Command	Response

AT+CLCC=?	<p>OK Parameters</p>
<p>Execution Command AT+CLCC</p>	<p>Response TA returns a list of current calls of ME. Note: If Command succeeds but no calls are available, no information response is sent to TE.</p> <p>[+CLCC: <id1>,<dir>,<stat>,<mode>,<mpty>[, <number>,<type>[, “ ”]] [<CR><LF>+CLCC: <id2>,<dir>,<stat>,<mode>,<mpty>[, <number>,<type>[, “ ”]] [...]]]</p> <p>OK If error is related to ME functionality: +CME ERROR: <err> Parameters</p> <p><idx> integer type; call identification number as described in GSM 02.30[19] sub clause 4.5.5.1; this number can be used in +CHLD Command operations</p> <p><dir> 0 mobile originated (MO) call 1 mobile terminated (MT) call</p> <p><stat> state of the call: 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)</p> <p><mode> bearer/tele service: 0 voice 1 data 2 fax 9 unknown</p> <p><mpty> 0 call is not one of multiparty (conference) call parties 1 call is one of multiparty (conference) call parties</p> <p><number> string type phone number in format specified by <type></p> <p><type> type of address of octet in integer format; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)</p>
<p>Reference GSM 07.07 [13][14]</p>	<p>Note</p>

3.2.19 AT+CLCK Facility Lock

AT+CLCK Facility Lock	
Test Command AT+CLCK=?	<p>Response</p> <p>+CLCK: (list of supported <fac>s)</p> <p>OK</p> <p>Parameter see Write Command</p>
Write Command AT+CLCK = <fac>, <mode> [,<passwd> [,<class>]]	<p>Response</p> <p>This Command is used to lock, unlock or interrogate a ME or a network facility <fac>. Password is normally needed to do such actions. When querying the status of a network service (<mode>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>.</p> <p>If <mode><>2 and Command is successful OK</p> <p>If <mode>=2 and Command is successful +CLCK: <status>[,<class1>[<CR><LF> +CLCK: <status>, class2....]]</p> <p>OK</p> <p>Parameters</p> <p><fac> "PS" PH-SIM (lock Phone to SIM card) (ME asks password when other than current SIM card inserted; ME may remember certain amount of previously used cards thus not requiring password when they are inserted)</p> <p>"SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock Command issued)</p> <p>"AO" BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1)</p> <p>"OI" BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1)</p> <p>"OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1)</p> <p>"AI" BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2)</p> <p>"IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2)</p> <p>"AB" All Barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AG" All out Going barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AC" All in Coming barring services (refer GSM02.30[19])</p>

	<p>(applicable only for <mode>=0)</p> <p>"FD" SIM fixed dialing memory: If the mobile is locked to "FD", only the phone numbers stored to the "FD" memory can be dialed</p> <p>"PF" Lock Phone to the very first SIM card</p> <p>"PN" Network Personalization (refer GSM 02.22[33])</p> <p>"PU" network subset Personalization (refer GSM 02.22[33])</p> <p>"PP" service Provider Personalization (refer GSM 02.22[33])</p> <p>"PC" Corporate Personalization (refer GSM 02.22[33])</p> <p><mode> 0 unlock 1 lock 2 query status</p> <p><passwd> password</p> <p><class> 1 voice 2 data 4 fax 7 all telephony except sms (Default) 8 short message service 16 data circuit sync 32 data circuit async</p> <p><status> 0 off 1 on</p>
Reference GSM 07.07 [14]	Note

3.2.20 AT+CLIP Calling Line Identification Presentation

AT+CLIP Calling Line Identification Presentation	
Read Command AT+CLIP?	<p>Response</p> <p>+CLIP: <n>, <m></p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p> <hr/> <p>Parameters</p> <p>see Write Command</p>
Test Command AT+CLIP=?	<p>Response</p> <p>+CLIP: (list of supported <n>s)</p> <p>OK</p> <hr/> <p>Parameters</p>

	see Write Command																							
Write Command AT+CLIP=[<n>]	<p>Response</p> <p>TA enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <hr/> <p>Parameters</p> <table> <tr> <td><n></td> <td>0</td> <td>suppress unsolicited result codes</td> </tr> <tr> <td></td> <td>1</td> <td>display unsolicited result codes</td> </tr> <tr> <td><m></td> <td>0</td> <td>CLIP not provisioned</td> </tr> <tr> <td></td> <td>1</td> <td>CLIP provisioned</td> </tr> <tr> <td></td> <td>2</td> <td>unknown</td> </tr> </table> <hr/> <p>Unsolicited result code</p> <p>When the presentation of the CLI at the TE is enabled (and calling subscriber allows), an unsolicited result code is returned after every RING (or +CRING: <type>) at a mobile terminating call.</p> <p>+CLIP: <number>, <type>,"",<alphaId>,<CLI validity></p> <p>Parameters</p> <table> <tr> <td><number></td> <td>string type phone number of calling address in format specified by <type></td> </tr> <tr> <td><type></td> <td>type of address octet in integer format; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)</td> </tr> <tr> <td><alphaId></td> <td>string type alphanumeric representation of <number> corresponding to the entry found in phone book</td> </tr> <tr> <td><CLI validity></td> <td>0 CLI valid 1 CLI has been withheld by the originator 2 CLI is not available due to interworking problems or limitations of originating network</td> </tr> </table>	<n>	0	suppress unsolicited result codes		1	display unsolicited result codes	<m>	0	CLIP not provisioned		1	CLIP provisioned		2	unknown	<number>	string type phone number of calling address in format specified by <type>	<type>	type of address octet in integer format; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)	<alphaId>	string type alphanumeric representation of <number> corresponding to the entry found in phone book	<CLI validity>	0 CLI valid 1 CLI has been withheld by the originator 2 CLI is not available due to interworking problems or limitations of originating network
<n>	0	suppress unsolicited result codes																						
	1	display unsolicited result codes																						
<m>	0	CLIP not provisioned																						
	1	CLIP provisioned																						
	2	unknown																						
<number>	string type phone number of calling address in format specified by <type>																							
<type>	type of address octet in integer format; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)																							
<alphaId>	string type alphanumeric representation of <number> corresponding to the entry found in phone book																							
<CLI validity>	0 CLI valid 1 CLI has been withheld by the originator 2 CLI is not available due to interworking problems or limitations of originating network																							
Reference	Note																							

3.2.21 AT+CLIR Calling Line Identification Restriction

AT+CLIR Calling Line Identification Restriction	
Read Command AT+CLIR?	<p>Response</p> <p>+CLIR: <n>, <m></p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p>

	Parameters see Write Command
Test Command AT+CLIR=?	Response +CLIR: (list of supported <n>s) OK
Write Command AT+CLIR=[<n>]	Response TA restricts or enables the presentation of the CLI to the called party when originating a call. The Command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite Command. OK If error is related to ME functionality: +CME ERROR: <err>
	Parameters <n> (parameter sets the adjustment for outgoing calls): 0 presentation indicator is used according to the subscription of the CLIR service 1 CLIR invocation 2 CLIR suppression <m> (parameter shows the subscriber CLIR service status in the network): 0 CLIR not provisioned 1 CLIR provisioned in permanent mode 2 unknown (e.g. no network, etc.) 3 CLIR temporary mode presentation restricted 4 CLIR temporary mode presentation allowed
Reference	Note

3.2.22 AT+CMEE Report Mobile Equipment Error

AT+CMEE Report Mobile Equipment Error	
Test Command AT+CMEE=?	Response +CMEE: (list of supported <n>s) OK
	Parameters see Write Command
Read Command AT+CMEE?	Response +CMEE: <n>

	<p>OK</p> <p>Parameters See Write Command</p>									
<p>Write Command AT+CMEE=[<n>]</p>	<p>Response TA disables or enables the use of result code +CME ERROR: <err> as an indication of an error relating to the functionality of the ME.</p> <p>OK</p> <p>Parameters</p> <table> <tr> <td><n></td> <td>0</td> <td>disable result code</td> </tr> <tr> <td></td> <td>1</td> <td>enable result code and use numeric values</td> </tr> <tr> <td></td> <td>2</td> <td>enable result code and use verbose values</td> </tr> </table>	<n>	0	disable result code		1	enable result code and use numeric values		2	enable result code and use verbose values
<n>	0	disable result code								
	1	enable result code and use numeric values								
	2	enable result code and use verbose values								
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>									

3.2.23 AT+COLP Connected Line Identification Presentation

AT+COLP Connected Line Identification Presentation									
<p>Read Command AT+COLP?</p>	<p>Response +COLP: <n>,<m></p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters See Write Command</p>								
<p>Test Command AT+COLP=?</p>	<p>Response +COLP: (list of supported <n>s)</p> <p>OK</p> <p>Parameters See Write Command</p>								
<p>Write Command AT+COLP=[<n>]</p>	<p>Response TA enables or disables the presentation of the COL (Connected Line) at the TE for a mobile originated call. It has no effect on the execution of the supplementary service COLR in the network. Intermediate result code is returned from TA to TE before any +CR or V.25ter responses.</p> <p>OK</p> <p>Parameters</p> <table> <tr> <td><n></td> <td>(parameter sets/shows the result code presentation status in the TA):</td> </tr> <tr> <td>0</td> <td>disable</td> </tr> <tr> <td>1</td> <td>enable</td> </tr> <tr> <td><m></td> <td>(parameter shows the subscriber COLP service status in the</td> </tr> </table>	<n>	(parameter sets/shows the result code presentation status in the TA):	0	disable	1	enable	<m>	(parameter shows the subscriber COLP service status in the
<n>	(parameter sets/shows the result code presentation status in the TA):								
0	disable								
1	enable								
<m>	(parameter shows the subscriber COLP service status in the								

	<p>network):</p> <p>0 COLP not provisioned</p> <p>1 COLP provisioned</p> <p>2 unknown (e.g. no network, etc.)</p>
	<p>Intermediate result code</p> <p>When enabled (and called subscriber allows), an intermediate result code is returned before any +CR or V.25ter responses:</p> <p>+COLP: <number>,<type>[,<subaddr>,<satype> [,<alpha>]]</p>
	<p>Parameters</p> <p><number> string type phone number of format specified by <type></p> <p><type> type of address octet in integer format;</p> <p>129 Unknown type(ISDN format number)</p> <p>145 International number type(ISDN format)</p> <p><subaddr> string type sub address of format specified by <satype></p> <p><satype> type of sub address octet in integer format (refer GSM 04.08 [8] sub clause 10.5.4.8)</p> <p><alpha> optional string type alphanumeric representation of <number> corresponding to the entry found in phone book</p>
Reference	Note

3.2.24 AT+COPS Operator Selection

AT+COPS Operator Selection	
<p>Test Command</p> <p>AT+COPS=?</p>	<p>Response</p> <p>TA returns a list of quadruplets, each representing an operator present in the network. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network, networks referenced in SIM, and other networks.</p> <p>+COPS: (list of supported<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>)s [,(list of supported <mode>s),(list of supported <format>s)]</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>
	<p>Parameters</p> <p>see Write Command</p>
<p>Read Command</p> <p>AT+COPS?</p>	<p>Response</p> <p>TA returns the current mode and the currently selected operator. If no operator is selected, <format> and <oper> are omitted.</p> <p>+COPS: <mode>[, <format>[, <oper>]]</p> <p>OK</p>

	<p>If error is related to ME functionality: +CME ERROR: <err></p> <hr/> <p>Parameters see Write Command</p>
<p>Write Command AT+COPS = <mode> [,<format>,<oper> r>]]</p>	<p>Response</p> <p>TA forces an attempt to select and register the GSM network operator. If the selected operator is not available, no other operator shall be selected (except <mode>=4). The selected operator name format shall apply to further read commands (+COPS?).</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <hr/> <p>Parameters</p> <p><stat> 0 unknown 1 operator available 2 operator current 3 operator forbidden</p> <p><oper> operator in format as per <mode></p> <p><mode> 0 automatic mode; <oper> field is ignored 1 manual operator selection; <oper> field shall be present 2 manual deregister from network 3 set only <format> (for read Command +COPS?) – not shown in Read Command response 4 manual/automatic selected; if manual selection fails, automatic mode (<mode>=0) is entered</p> <p><format> 0 long format alphanumeric <oper>;can be up to 16 characters long 1 short format alphanumeric <oper> 2 numeric <oper>; GSM Location Area Identification number</p>
<p>Reference GSM 07.07 [14]</p>	<p>Note</p>

3.2.25 AT+CPAS Mobile Equipment Activity Status

AT+CPAS Mobile Equipment Activity Status	
Test Command AT+CPAS=?	Response +CPAS: (list of supported <pas>s) OK
	Parameter see Execution Command
Execution Command AT+CPAS	Response TA returns the activity status of ME. +CPAS: <pas> OK If error is related to ME functionality: +CME ERROR: <err>
	Parameter <pas> 0 ready 2 unknown (ME is not guaranteed to respond to instructions) 3 ringing 4 call in progress or call hold
Reference GSM 07.07 [13]	Note

3.2.26 AT+CPBF Find Phonebook Entries

AT+CPBF Find Phonebook Entries	
Test Command AT+CPBF=?	Response +CPBF: maximum length of field <nlength>, maximum length of field <tlength> OK
	Parameters see Write Command
Write Command AT+CPBF=[<findtext>]	Response TA returns phone book entries (from the current phone book memory storage selected with +CPBS) which contain alphanumeric string <findtext>. [+CPBF: <index1>, <number>, <type>, <text>[[...]] <CR><LF>+CBPF: <index2>, <number>, <type>, <text>] OK
	Parameters <findtext> string type field of maximum length <tlength> in current TE

	<p>character set specified by +CSCS.</p> <p><index1> integer type values in the range of location numbers of phone book memory</p> <p><index2> integer type values in the range of location numbers of phone book memory</p> <p><number> string type phone number of format <type> <type>type of address octet in integer format ; 129 Unknown type(ISDN format number) 145 International number type(ISDN format)</p> <p><text> string type field of maximum length <tlength> in current TE character set specified by +CSCS.</p> <p><nlength> integer type value indicating the maximum length of field <number></p> <p><tlength> integer type value indicating the maximum length of field <text></p>
Reference GSM 07.07 [13]	Note

3.2.27 AT+CPBR Read Current Phonebook Entries

AT+CPBR Read Current Phonebook Entries	
Test Command AT+CPBR=?	Response TA returns location range supported by the current storage as a compound value and the maximum lengths of <number> and <text> fields. +CPBR: (list of supported <index>s), <nlength>, <tlength> OK
	Parameters <index> location number <nlength> maximum length of phone number <tlength> maximum length of name for number
Write Command AT+CPBR= <index1> [, <index2>]	Response TA returns phone book entries in location number range <index1>...<index2> from the current phone book memory storage selected with +CPBS. If <index2> is left out, only location <index1> is returned. +CPBR:<index1>,<number>,<type>,<text>[<CR><LF>+CPBR:+CPBR: <index2>,<number>,<type>,<text>] OK
	Parameters <index1> the first phone book record to read <index2> the last phonebook record to read <number> phone number <type> type of number

	<text> text name for phone number in current TE character set specified by +CSCS.
Reference GSM 07.07 [13]	Note

3.2.28 AT+CPBS Select Phonebook Memory Storage

AT+CPBS Select Phonebook Memory Storage	
Test Command AT+CPBS=?	Response +CPBS: (list of supported <storage> s) OK Parameters see Write Command
Read Command AT+CPBS?	Response +CPBS: <storage> [, <used> , <total>] OK Parameters See Write Command
Write Command AT+CPBS=<storage> [, <used> , <total>]	Response TA selects current phone book memory storage, which is used by other phone book commands. OK Parameters <storage> "MC" ME missed (unanswered) calls list "RC" ME received calls list "DC" ME dialed calls list(+CPBW may not be applicable or this storage)(same as LD) "LA" Last Number All list (LND/LNM/LNR) "ME" ME phonebook "BN" SIM barred dialed number "SD" SIM service dial number "VM" SIM voice mailbox "FD" SIM fix dialing-phone book "LD" SIM last-dialling-phone book "ON" SIM (or ME) own numbers (MSISDNs) list "SM" SIM phonebook <used> integer type value indicating the total number of used Locations in selected memory <total> integer type value indicating the total number of locations In selected memory
Reference GSM 07.07 [13]	Note

3.2.29 AT+CPBW Write Phonebook Entry

AT+CPBW Write Phonebook Entry																
Test Command AT+CPBW=?	Response TA returns location range supported by the current storage, the maximum length of <number> field, supported number formats of the storage, and the maximum length of <text> field. +CPBW: (The range of supported <index>s), <nlength>, (list of supported <type>s), <tlength> OK															
	Parameters see Write Command															
Write Command AT+CPBW= <index1> [, <number>, [<type>, [<text>]]]	Response TA writes phone book entry in location number <index> in the current phone book memory storage selected with +CPBS. Entry fields written are phone number <number> (in the format <type>) and text <text> associated with the number. If those fields are omitted, phone book entry is deleted. If <index> is left out, but <number> is given, entry is written to the first free location in the phone book. OK															
	Parameters <nlength> maximum length of phone number <tlength> maximum length of text for number <index> location number <number> phone number <type> type of number; 129 Unknown type(ISDN format number) 145 International number type(ISDN format) <text> text for phone number in current TE character set specified by +CSCS. Note: The following characters in <text> must be entered via the escape sequence: <table border="0"> <thead> <tr> <th>GSM char.</th> <th>Seq. Seq.(hex)</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>\</td> <td>\5C 5C 35 43</td> <td>(backslash)</td> </tr> <tr> <td>“</td> <td>\22 5C 32 32</td> <td>(string delimiter)</td> </tr> <tr> <td>BSP</td> <td>\08 5C 30 38</td> <td>(backspace)</td> </tr> <tr> <td>NULL</td> <td>\00 5C 30 30</td> <td>(GSM null)</td> </tr> </tbody> </table> ‘0’ (GSM null) may cause problems for application layer software when reading string lengths.	GSM char.	Seq. Seq.(hex)	Note	\	\5C 5C 35 43	(backslash)	“	\22 5C 32 32	(string delimiter)	BSP	\08 5C 30 38	(backspace)	NULL	\00 5C 30 30	(GSM null)
GSM char.	Seq. Seq.(hex)	Note														
\	\5C 5C 35 43	(backslash)														
“	\22 5C 32 32	(string delimiter)														
BSP	\08 5C 30 38	(backspace)														
NULL	\00 5C 30 30	(GSM null)														
Reference GSM 07.07 [13]	Note															

3.2.30 AT+CPIN Enter PIN

AT+CPIN Enter PIN	
Test Command AT+CPIN=?	Response OK Parameter see Write Command
Read Command AT+CPIN?	Response TA returns an alphanumeric string indicating whether some password is required or not. +CPIN: <code> OK Parameter <code> READY no further entry needed SIM PIN ME is waiting for SIM PIN SIM PUK ME is waiting for SIM PUK PH_SIM PIN ME is waiting for phone to SIM card (antitheft) PH_SIM PUK ME is waiting for SIM PUK (antitheft) SIM PIN2 PIN2, e.g. for editing the FDN book possible only if preceding Command was acknowledged with +CME ERROR:17 SIM PUK2 possible only if preceding Command was acknowledged with error +CME ERROR: 18.
Write Command AT+CPIN=<pin> [, <new pin>]	Response TA stores a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If the PIN is to be entered twice, the TA shall automatically repeat the PIN. If no PIN request is pending, no action is taken and an error message, +CME ERROR, is returned to TE. If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <new pin>, is used to replace the old pin in the SIM. OK Parameters <pin> string type; password <new pin> string type; If the PIN required is SIM PUK or SIMPUK2: new password
Reference GSM 07.07 [13]	Note

3.2.31 AT+CPWD Change Password

AT+CPWD Change Password	
Test Command AT+CPWD=?	Response TA returns a list of pairs which present the available facilities and the maximum length of their password. +CPWD: (list of supported <fac>s, <pwdlength>s)

	<p>OK</p> <p>Parameters</p> <p><fac></p> <p>otherwise see Write Command, without "FD"</p> <p><pwdlength> integer max. length of password</p>
<p>Write Command</p> <p>AT+CPWD =</p> <p><fac>,</p> <p><oldpwd>,</p> <p><newpwd></p>	<p>Response</p> <p>TA sets a new password for the facility lock function.</p> <p>OK</p> <p>Parameters</p> <p><fac></p> <p>"PS" Phone locked to SIM (device code). The "PS" password may either be individually specified by the client or, depending on the subscription, supplied from the provider (e.g. with a prepaid mobile).</p> <p>"SC" SIM (lock SIM card) (SIM asks password in ME power-up and when this lock Command issued)</p> <p>"AO" BAOC (Barr All Outgoing Calls) (refer GSM02.88[6] clause 1)</p> <p>"OI" BOIC (Barr Outgoing International Calls) (refer GSM02.88[6] clause 1)</p> <p>"OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) (refer GSM02.88[6] clause 1)</p> <p>"AI" BAIC (Barr All Incoming Calls) (refer GSM02.88[6] clause 2)</p> <p>"IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country) (refer GSM02.88 [6] clause 2)</p> <p>"AB" All Barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AG" All outgoing barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"AC" All incoming barring services (refer GSM02.30[19]) (applicable only for <mode>=0)</p> <p>"FD" SIM fixed dialing memory feature</p> <p>"P2" SIM PIN2</p> <p><oldpwd> password specified for the facility from the user interface or with Command. If an old password has not yet been set, <oldpwd> is not to enter.</p> <p><newpwd> new password</p>
<p>Reference</p> <p>GSM 07.07 [13]</p>	<p>Note</p>

3.2.32 AT+CR Service Reporting Control

AT+CR Service Reporting Control																			
Test Command AT+CR=?	<p>Response</p> <p>+CR: (list of supported <mode>s)</p> <p>OK</p> <p>Parameter see Write Command</p>																		
Read Command AT+CR?	<p>Response</p> <p>+CR: <mode></p> <p>OK</p> <p>Parameters see Write Command</p>																		
Write Command AT+CR=[<mode>]	<p>Response</p> <p>TA controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE at a call set up.</p> <p>OK</p> <p>Parameter</p> <table border="0"> <tr> <td><mode></td> <td>0</td> <td>disable</td> </tr> <tr> <td></td> <td>1</td> <td>enable</td> </tr> </table> <p>Intermediate result code</p> <p>If enabled, an intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) is transmitted.</p> <p>+CR:<serv></p> <p>Parameter</p> <table border="0"> <tr> <td><serv></td> <td>ASYNC</td> <td>asynchronous transparent</td> </tr> <tr> <td></td> <td>SYNC</td> <td>synchronous transparent</td> </tr> <tr> <td></td> <td>REL ASYNC</td> <td>asynchronous non-transparent</td> </tr> <tr> <td></td> <td>REL SYNC</td> <td>synchronous non-transparent</td> </tr> </table>	<mode>	0	disable		1	enable	<serv>	ASYNC	asynchronous transparent		SYNC	synchronous transparent		REL ASYNC	asynchronous non-transparent		REL SYNC	synchronous non-transparent
<mode>	0	disable																	
	1	enable																	
<serv>	ASYNC	asynchronous transparent																	
	SYNC	synchronous transparent																	
	REL ASYNC	asynchronous non-transparent																	
	REL SYNC	synchronous non-transparent																	
Reference GSM 07.07 [13]	Note																		

3.2.33 AT+CRC Set Cellular Result Codes For Incoming Call Indication

AT+CRC Set Cellular Result Codes For Incoming Call Indication	
Test Command AT+CRC=?	<p>Response</p> <p>+CRC: (list of supported <mode>s)</p> <p>OK</p> <p>Parameters see Write Command</p>

Read Command AT+CRC?	Response +CRC: <mode> OK
Write Command AT+CRC=[<mode>]	Response TA controls whether or not the extended format of incoming call indication is used. OK Parameter <mode> <u>0</u> disable extended format 1 enable extended format Unsolicited result code When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING: <type> instead of the normal RING. Parameter <type> ASYNC asynchronous transparent SYNC synchronous transparent REL ASYNC asynchronous non-transparent REL SYNC synchronous non-transparent FAX facsimile VOICE voice
Reference GSM 07.07 [13]	Note

3.2.34 AT+CREG Network Registration

AT+CREG Network Registration	
Test Command AT+CREG=?	Response +CREG: (list of supported <n>s) OK
Read Command AT+CREG?	Parameters see Write Command Response TA returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <lac> and <ci> are returned only when <n>=2 and ME is registered in the network. +CREG: <n>,<stat>[,<lac>,<ci>] OK If error is related to ME functionality: +CME ERROR: <err>

3.2.35 AT+CRLP Select Radio Link Protocol Parameter

AT+CRLP Select Radio Link Protocol Parameter	
Test Command AT+CRLP=?	Response TA returns values supported. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: (list of supported <iws>s), (list of supported <mws>s), (list of supported <T1>s), (list of supported <N2>s), (list of supported <ver1>s), (list of supported <T4>s) OK
	Parameters see Write Command
Read Command AT+CRLP?	Response TA returns current settings for RLP version. RLP versions 0 and 1 share the same parameter set. TA returns only one line for this set (where <verx> is not present). +CRLP: <iws>,<mws>,<T1>,<N2>,<ver1>,<T4> OK
	Parameters see Write Command
Write Command AT+CRLP=[<iws> >,<mws>[,<T1>[,<N2>[,<ver>[,<T4>]]]]]	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are setup. OK
	Parameters <iws> 0-61 Interworking window size (IWF to MS) <mws> 0-61 Mobile window size(MS to IWF) <T1> 39-255 acknowledgment timer T1 in 10 ms units <N2> 1-255 retransmission attempts N2 <verx> 0 RLP version number in integer format; when Version indication is not present it shall equal 0. <T4> 3-255 re-sequencing period in integer format, in units of 10 ms.
Reference GSM 07.07 [13]	Note

3.2.36 AT+CRSM Restricted SIM Access

AT+CRSM Restricted SIM Access

Test Command AT+CRSM=?	Response OK
Write Command AT+CRSM=<Command>[,<fileId>][,<P1>,<P2>,<P3>][,<data>]]	Response +CRSM: <sw1>, <sw2> [,<response>] OK / ERROR / +CME ERROR: <err> Parameters <Command> 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS all other values are reserved; refer GSM 11.11. <fileId> integer type; this is the identifier for an elementary data file on SIM. Mandatory for every Command except STATUS <P1>,<P2>,<P3> integer type, range 0 - 255 parameters to be passed on by the ME to the SIM; refer GSM 11.11. <data> information which shall be written to the SIM (hexadecimal character format) <sw1>, <sw2> integer type, range 0 - 255 status information from the SIM about the execution of the actual Command. These parameters are delivered to the TE in both cases, on successful or failed execution of the Command; refer GSM 11.11. <response> response of a successful completion of the Command previously issued (hexadecimal character format)
Reference GSM 07.07 GSM 11.11	Note

3.2.37 AT+CSQ Signal Quality Report

AT+CSQ Signal Quality Report	
Test Command AT+CSQ=?	Response +CSQ: (list of supported <rssi>s),(list of supported <ber>s) OK
Execution Command AT+CSQ	Response +CSQ: <rssi>,<ber> OK +CME ERROR: <err> Execution Command returns received signal strength indication <rssi> and

	channel bit error rate <ber> from the ME. Test Command returns values supported by the TA.
	Parameters <rssI> 0 -113 dBm or less 1 -111 dBm 2...30 -109... -53 dBm 31 -51 dBm or greater 99 not known or not detectable <ber> (in percent): 0...7 as RXQUAL values in the table in GSM 05.08 [20] subclause 8.2.4 99 not known or not detectable
Reference GSM 07.07 [13]	Note

3.2.38 AT+FCLASS FAX: Select, Read Or Test Service Class

AT+FCLASS FAX: Select, Read Or Test Service Class	
Test Command AT+FCLASS=?	Response +FCLASS: (list of supported <n>s) OK
	Parameters see Write Command
Read Command AT+ FCLASS?	Response +FCLASS: <n> OK
	Parameters See Write Command.
Write Command AT+FCLASS= [<n>]	Response TA sets a particular mode of operation (data fax). This causes the TA to process information in a manner suitable for that type of information OK
	Parameter <n> <u>0</u> data 1 fax class 1 (TIA-578-A)
Reference GSM 07.07 [13]	Note

3.2.39 AT+FMI FAX: Report Manufactured ID

AT+FMI FAX: Report Manufactured ID	
Test Command AT+ FMI =?	Response OK

	Parameters see Execution Command
Execution Command AT+ FMI	Response TA reports one or more lines of information text which permit the user to identify the manufacturer. <manufacturer Id> OK
	Parameter <manufacturer Id>
Reference EIA/TIA-578-D	Note

3.2.40 AT+FMM FAX: Rreport Mmodel ID

AT+FMM FAX: Rreport Mmodel ID	
Test Command AT+ FMM =?	Response OK
	Parameters see Execution Command
Execution Command AT+ FMM	Response TA reports one or more lines of information text which permit the user to identify the specific model of device. <model Id> OK
	Parameter <model Id>
Reference EIA/TIA-578-D	Note

3.2.41 AT+FMR FAX: Report Revision ID

AT+FMR FAX: Report Revision ID	
Test Command AT+ FMR =?	Response OK
	Parameter see Execution Command
Execution Command AT+ FMR	Response TA reports one or more lines of information text which permit the user to identify the version, revision level or data or other information of the device. Revision:<Revision Id> OK
	Parameter

	<Revision Id> the version, revision level or data or other information of the device.
Reference EIA/TIA-578-D	Note

3.2.42 AT+VTD Tone Duration

AT+VTD Tone Duration	
Test Command AT+VTD=?	Response +VTD: (list of supported <n>s) OK
	Parameters see Write Command
Read Command AT+VTD?	Response +VTD: <n> OK
	Parameter see Write Command
Write Command AT+VTD = <n>	Response This Command refers to an integer <n> that defines the length of tones emitted as a result of the +VTS Command. This does not affect the D Command. OK
	Parameter <n> 1-255 duration of the tone in 1/10 seconds
Reference GSM 07.07 [13]	Note

3.2.43 AT+VTS DTMF And Tone Generation

AT+VTS DTMF And Tone Generation	
Test Command AT+VTS=?	Response +VTS: (list of supported <dtmf>s), ,(list of supported <duration>s) OK
	Parameters see Write Command

<p>Write Command</p> <p>AT+VTS=<dtmf-string></p>	<p>Response</p> <p>This Command allows the transmission of DTMF tones and arbitrary tones in voice mode. These tones may be used (for example) when announcing the start of a recording period.</p> <p>Note: D is used only for dialing.</p> <p>OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p> <p>Note: The Command is writing only.</p> <p>Parameters</p> <p><dtmf-string> which has a max length of 20 characters, must be entered between double quotes (“ ”) and consists of combinations of the following separated by commas. But a single character does not require quotes.</p> <p>1) <dtmf> A single ASCII characters in the set 0-9, #,*, A-D. This is interpreted as a sequence of DTMF tones whose duration is set by the +VTD Command.</p> <p>2) {<dtmf>, <duration>} This is interpreted as a DTMF tone whose duration is determined by <duration>.</p> <p><duration> duration of the tone in 1/10 seconds range :1-255</p>
<p>Reference</p> <p>GSM 07.07 [13]</p>	<p>Note</p>

3.2.44 AT+CMUX Multiplexer Control

AT+CMUX Multiplexer Control				
Test Command AT+CMUX=?	<p>Response</p> <p>+CMUX: list of supported (<mode>s),(<subset>s),(<port_speed>s),(<N1>s),(<T1>s),(<N2>s),(<T2>s),(<T3>s),(<k>s)</p> <p>OK</p> <p>Parameters See Write Command</p>			
Write Command AT+CMUX=[<mode>,<subset>,<port_speed>,<N1>,<T1>,<N2>,<T2>,<T3>,<k>]]]]]]]]]]	<p>Response</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><mode> multiplexer transparency mechanism <u>0</u> Basic option</p> <p><subset> the way in which the multiplexer control channel is set up <u>0</u> UIH frames used only</p> <p><port_speed> transmission rate <u>5</u> 115200bit/s</p> <p><N1> maximum frame size <u>127</u></p> <p><T1> acknowledgement timer in units of ten milliseconds <u>10</u></p> <p><N2> maximum number of re-transmissions <u>3</u></p> <p><T2> response timer for the multiplexer control channel in units of ten milliseconds <u>30</u></p> <p><T3> wake up response timers in seconds <u>10</u></p> <p><k> window size, for Advanced operation with Error Recovery options <u>2</u></p>			
Read Command AT+CMUX ?	<p>Response:</p> <p>+CMUX: (mode-1),0,5,127,10,3,30,10,2</p> <p>OK</p> <p>ERROR</p>			
Reference GSM 07.07 [13]	<p>Note</p> <ol style="list-style-type: none"> Advanced option with Error Recovery options is not supported. The multiplexing transmission rate is according to the current serial baud rate. It is recommended to enable multiplexing protocol under 115200 bit/s baud rate Multiplexer control channels are listed as follows: <table border="1"> <thead> <tr> <th>Channel Number</th> <th>Type</th> <th>DLCI</th> </tr> </thead> </table>	Channel Number	Type	DLCI
Channel Number	Type	DLCI		

	None	Multiplexer Control	0
	1	07.07 and 07.05	1
	2	07.07 and 07.05	2
	3	07.07 and 07.05	3
	4	07.07 and 07.05	4

3.2.45 AT+CNUM Subscriber Number

AT+CNUM Subscriber Number	
Test Command AT+CNUM=?	Response OK
Execution Command AT+CNUM	<p>Response</p> <p>+CNUM: [<alpha1>],<number1>,<type1>[,<speed>,<service>[,<itc>]] [<CR><LF>+CNUM: [<alpha2>],<number2>,<type2>[,<speed>,<service> [,<itc>]] [...]]</p> <p>OK</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><alpha> optional alphanumeric string associated with <numberx>; used character set should be the one selected with Command Select TE Character Set +CSCS</p> <p><numberx> string type phone number of format specified by <typex></p> <p><typex> type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7)</p> <p><speed> as defined by the +CBST Command</p> <p><service> (service related to the phone number:)</p> <p>0 asynchronous modem 1 synchronous modem 2 PAD Access (asynchronous) 3 Packet Access (synchronous) 4 Voice 5 Fax</p> <p><itc> (information transfer capability:)</p> <p>0 3.1 kHz 1 UDI</p>
Reference GSM 07.07 [13]	Note

3.2.46 AT+CPOL Preferred Operator List

AT+CPOL Preferred Operator List	
Test Command	Response

AT+CPOL=?	<p>+CPOL: (list of supported <index>s),(list of supported <format>s)</p> <p>OK</p> <p>Parameters see Write Command</p>
Read Command AT+CPOL?	<p>Response</p> <p>+CPOL: <index1>,<format>,<oper1> [<CR><LF>+CPOL: <index2>,<format>,<oper2> [...]]</p> <p>OK</p> <p>+CME ERROR: <err></p> <p>Parameters See Write Command</p>
Write Command AT+CPOL=<index>,<format>,<oper>	<p>Response</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><index> integer type: order number of operator in SIM preferred operator list</p> <p><format> 0 long format alphanumeric <oper> 1 short format alphanumeric <oper> 2 numeric <oper></p> <p><oper> string type: <format> indicates whether alphanumeric or numeric format used (see +COPS Command)</p>
Reference GSM 07.07 [13]	Note

3.2.47 AT+COPN Read Operator Names

AT+COPN Read Operator Names	
Test Command AT+COPN=?	<p>Response</p> <p>OK</p>
Execution Command AT+COPN	<p>Response</p> <p>+COPN: <numeric1>,<alpha1 > [<CR><LF>+COPN: <numeric2>,<alpha2> [...]]</p> <p>OK</p> <p>+CME ERROR: <err></p> <p>Parameters</p> <p><numericn> string type: operator in numeric format (see +COPS)</p> <p><alphan> string type: operator in long alphanumeric format (see +COPS)</p>

	<p>OK +CME ERROR: <err></p>
	<p>Parameter See Write Command</p>
<p>Write Command AT+CCLK=<time></p>	<p>Response OK +CME ERROR: <err></p>
	<p>Parameter <time> string type value; format is "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (indicates the difference, expressed in quarters of an hour, between the local time and GMT; range -48...+48). E.g. 6th of May 1994, 22:10:00 GMT+2 hours equals to "94/05/06,22:10:00+08"</p>
<p>Reference GSM 07.07 [13]</p>	<p>Note</p>

3.2.50 AT+CSIM Generic SIM Access

AT+CSIM Generic SIM Access	
Test Command AT+CSIM=?	Response OK
	Parameter
Write Command AT+CSIM=<operation>,<file_index>,<offset>,<record_id>,<length>,<data>	Response +CSIM: <Command>,<response> OK ERROR
	Parameters <operation> 0 read operation 1 write operation <file_index> integer type: sim elementary file id <offset> integer type: offset for sim read and write <length> integer type: length of parameter <data> string type: hex format: parameter sent or received from the ME to the SIM
Reference GSM 07.07 [13]	Note

3.2.51 AT+CALM Alert Sound Mode

AT+CALM Alert Sound Mode	
Test Command AT+CALM=?	Response +CALM: (list of supported <mode>s) OK +CME ERROR: <err>
	Parameter See Write Command
Read Command AT+CALM?	Response +CALM: <mode> OK +CME ERROR: <err>
	Parameter See Write Command
Write Command AT+CALM=<mode>	Response OK +CME ERROR: <err>

	Parameter <mode> 0 normal mode 1 silent mode (all sounds from ME are prevented)
Reference GSM 07.07 [13]	Note

3.2.52 AT+CRSL Ringer Sound Levels

AT+CRSL Ringer Sound Level	
Test Command AT+CRSL=?	Response +CRSL: (list of supported <level> s) OK +CME ERROR: <err>
	Parameter See Write Command
Read Command AT+CRSL?	Response +CRSL: <level> OK +CME ERROR: <err>
	Parameter See Write Command
Write Command AT+CRSL=<level>	Response +CME ERROR: <err>
	Parameter <level> integer type value(0-100) with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note

3.2.53 AT+CLVL Loud Speaker Volume Level

AT+CLVL Loud Speaker Volume Level	
Test Command AT+CLVL=?	Response +CLVL: (list of supported <level> s) OK +CME ERROR: <err>
	Parameter see Write Command
Read Command AT+CLVL?	Response +CLVL: <level> OK

	+CME ERROR: <err>
	Parameter See Write Command
Write Command AT+CLVL=<level> I>	Response +CME ERROR: <err>
	Parameter <level> integer type value(0-100) with manufacturer specific range (smallest value represents the lowest sound level)
Reference GSM 07.07 [13]	Note

3.2.54 AT+CMUT Mute Control

AT+CMUT Mute Control	
Test Command AT+CMUT=?	Response +CMUT: (list of supported <n>s) OK
	Parameter see Write Command
Read Command AT+CMUT?	Response +CMUT: <n> OK +CME ERROR: <err>
	Parameter See Write Command
Write Command AT+CMUT=<n>	Response +CME ERROR: <err>
	Parameter <n> <u>0</u> mute off 1 mute on
Reference GSM 07.07 [13]	Note

3.2.55 AT+CPUC Price Per Unit And Currency Table

AT+CPUC Price Per Unit And Currency Table	
Test Command AT+CPUC=?	Response OK
	Parameters see Write Command
Read Command AT+CPUC?	Response +CPUC: <currency>,<ppu>
	OK +CME ERROR: <err>
	Parameters See Write Command
Write Command AT+CPUC=<currency>,<ppu>[,<passwd>]	Response +CME ERROR: <err>
	Parameters <currency> string type; three-character currency code (e.g. "GBP", "DEM"); character set as specified by Command Select TE Character Set +CSCS <ppu> string type; price per unit; dot is used as a decimal separator(e.g. "2.66") <passwd> string type; SIM PIN2
Reference GSM 07.07 [13]	Note

3.2.56 AT+CCWE Call Meter Maximum Event

AT+CCWE Call Meter Maximum Event	
Test Command AT+CCWE=?	Response +CCWE: (list of supported <mode>s)
	OK +CME ERROR: <err>
	Parameter see Write Command
Read Command AT+CCWE?	Response +CCWE: <mode>
	OK +CME ERROR: <err>
	Parameter See Write Command

Write Command AT+CCWE=[<mode>]	Response OK +CME ERROR: <err>
	Parameter <mode> <u>0</u> Disable call meter warning event 1 Enable call meter warning event
	<u>Unsolicited result codes supported:</u> +CCWV Shortly before the ACM (Accumulated Call Meter) maximum value is reached, an unsolicited result code +CCWV will be Approximately when 5 seconds call time remains. It is also issued when starting a call if less than 5 s call time remains. Parameters
Reference GSM 07.07 [13]	Note GSM 07.07 specifies 30 seconds, so Quectel deviate from the specification.

3.2.57 AT+CBC Battery Charge

AT+CBC Battery Charge	
Test Command AT+CBC=?	Response +CBC: (list of supported < bcs >s),(list of supported < bcl >s),(voltage) OK
	Parameters see Execution Command
Execution Command AT+CBC	Response +CBC: < bcs >, < bcl >,<voltage> OK +CME ERROR: <err>
	Parameters <bcs> charge status 0 ME is not charging 1 ME is charging 2 Charging has finished <bcl> battery connection level 1...100 battery has 1-100 percent of capacity remaining vent <voltage> battery voltage(mV)

Reference GSM 07.07 [13]	Note Support for this Command will be hardware dependant and only be used when battery is set to vibrator
-----------------------------	--

3.2.58 AT+CUSD Unstructured Supplementary Service Data

AT+ CUSD Unstructured Supplementary Service Data	
Test Command AT+CUSD=?	Response +CUSD: (<n>s) OK
	Parameter see Write Command
Read Command AT+CUSD?	Response +CUSD: <n> OK
	Parameter see Write Command
Write Command AT+CUSD=[<n> ,<str>,<dcs>]	Response OK ERROR
	Parameters <n> a numeric parameter which indicates control of the unstructured supplementary service data 0 disable the result code presentation in the TA 1 enable the result code presentation in the TA 2 cancel session (not applicable to read Command response) <str> string type USSD-string <dcs> Cell Broadcast Data Coding Scheme in integer format (default 0)
Reference GSM 03.38 [25]	Note

3.2.59 AT+CSSN Supplementary Services Notification

AT+CSSN Supplementary Services Notification	
Test Command AT+CSSN=?	Response +CSSN: (list of supported <n>s), (list of supported <m>s) OK
	Parameters see Write Command
Read Command AT+CSSN?	Response +CSSN: <n>,<m>

	<p>OK</p>
	<p>Parameters see Write Command</p>
<p>Write Command AT+CSSN=[<n>[,<m>]]</p>	<p>Response OK ERROR</p> <p>Parameters</p> <p><n> a numeric parameter which indicates whether to show the +CSSI:<code1>[,<index>] result code presentation status after a mobile originated call setup</p> <p>0 disable 1 enable</p> <p><m> a numeric parameter which indicates whether to show the +CSSU:<code2> result code presentation status during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received.</p> <p>0 disable 1 enable</p> <p><code1> 0 unconditional call forwarding is active 1 some of the conditional call forwarding are active 2 call has been forwarded 3 call is waiting 4 this is a CUG call (also <index> present) 5 outgoing calls are barred 6 incoming calls are barred 7 CLIR suppression rejected</p> <p><index> closed user group index</p> <p><code2> 0 this is a forwarded call</p>
Reference	Note

3.2.60 AT+CSNS Single Numbering Scheme

AT+CSNS Single Numbering Scheme	
<p>Test Command AT+CSNS=?</p>	<p>Response +CSNS: (list of supported <mode>s)</p> <p>OK</p> <p>Parameter</p>
<p>Read Command AT+CSNS?</p>	<p>Response +CSNS: <mode></p>

	OK
	Parameter
Write Command AT+CSNS=[<mode>]	Response OK ERROR
	Parameter <mode> 0 voice 2 fax 4 data
Reference	Note

3.2.61 AT+CMOD Configure Alternating Mode Calls

AT+CMOD Configure Alternating Mode Calls	
Test Command AT+CMOD =?	Response +CMOD: (0-3) OK
	Parameter:
Write Command AT+CMOD=[<mode>]	Response OK ERROR
	Parameter <mode> 0 single mode 1 alternating voice/fax 2 alternating voice/data 3 voice followed by data
Reference	Note

4 AT Commands According to GSM07.05

The GSM 07.05 commands are for performing SMS and CBS related operations. M10 supports both Text and PDU modes.

4.1 Overview of AT Commands According to GSM07.05

Command	Description
AT+CMGD	DELETE SMS MESSAGE
AT+CMGF	SELECT SMS MESSAGE FORMAT
AT+CMGL	LIST SMS MESSAGES FROM PREFERRED STORE
AT+CMGR	READ SMS MESSAGE
AT+CMGS	SEND SMS MESSAGE
AT+CMGW	WRITE SMS MESSAGE TO MEMORY
AT+CMSS	SEND SMS MESSAGE FROM STORAGE
AT+CMGC	SEND SMS COMMAND
AT+CNMI	NEW SMS MESSAGE INDICATIONS
AT+CPMS	PREFERRED SMS MESSAGE STORAGE
AT+CRES	RESTORE SMS SETTINGS
AT+CSAS	SAVE SMS SETTINGS
AT+CSCA	SMS SERVICE CENTER ADDRESS
AT+CSCB	SELECT CELL BROADCAST SMS MESSAGES
AT+CSDH	SHOW SMS TEXT MODE PARAMETERS
AT+CSMP	SET SMS TEXT MODE PARAMETERS
AT+CSMS	SELECT MESSAGE SERVICE

4.2 Detailed Descriptions of AT Commands According to GSM07.05

4.2.1 AT+CMGD Delete SMS Message

AT+CMGD Delete SMS Message	
Read Command AT+CMGD=?	Response +CMGD: (Range of SMS on SIM card can be deleted) OK
Write Command AT+CMGD=<index>	Response TA deletes message from preferred message storage <mem1> location <index>. OK ERROR If error is related to ME functionality: +CMS ERROR:<err>
Reference GSM 07.05	Parameter <index> integer type; value in the range of location numbers supported by the associated memory Note

4.2.2 AT+CMGF Select SMS Message Format

AT+CMGF Select SMS Message Format	
Read Command AT+CMGF?	Response +CMGF: <mode> OK
	Parameter see Write Command
Test Command AT+CMGF=?	Response +CMGF: (list of supported <mode>s) OK
Write Command AT+CMGF=[<mode>]	Response TA sets parameter to deNote which input and output format of messages to use. OK
	Parameter <mode> <u>0</u> PDU mode 1 text mode
Reference GSM 07.05	Note

4.2.3 AT+CMGL List SMS Messages From Preferred Store

AT+CMGL List SMS Messages From Preferred Store	
Test Command AT+CMGL=?	Response +CMGL: (list of supported <stat>s) OK
	Parameters see Write Command
Write Command AT+CMGL=<stat>[,<mode>]	Parameters 1) If text mode: <stat> <u>"REC UNREAD"</u> Received unread messages (default) "REC READ" Received read messages "STO UNSENT" Stored unsent messages "STO SENT" Stored sent messages "ALL" All messages <mode> 0 normal 1 not change status of the specified SMS record 2) If PDU mode: <stat> <u>0</u> Received unread messages (default) 1 Received read messages 2 Stored unsent messages

	<p>3 Stored sent messages</p> <p>4 All messages</p> <p><mode> 0 normal</p> <p>1 not change status of the specified SMS record</p>
	<p>Response</p> <p>TA returns messages with status value <stat> from message storage <mem1> to the TE. . If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and Command successful: for SMS-SUBMITs and/or SMS-DELIVERs:</p> <p>+CMGL:</p> <p><index>,<stat>,<oa/da>,[<alpha>],[<scts>],[<toa/toda>,<length>]<CR><LF><data>[<CR><LF></p> <p>+CMGL:</p> <p><index>,<stat>,<da/oa>,[<alpha>],[<scts>],[<toa/toda>,<length>]<CR><LF><data>[...]</p> <p>for SMS-STATUS-REPORTs:</p> <p>+CMGL:</p> <p><index>,<stat>,<fo>,<mr>,[<ra>],[<tora>,<scts>,<dt>,<st>]<CR><LF></p> <p>></p> <p>+CMGL:</p> <p><index>,<stat>,<fo>,<mr>,[<ra>],[<tora>,<scts>,<dt>,<st>[...]</p> <p>for SMS-COMMANDs:</p> <p>+CMGL: <index>,<stat>,<fo>,<ct>[<CR><LF></p> <p>+CMGL: <index>,<stat>,<fo>,<ct>[...]</p> <p>for CBM storage:</p> <p>+CMGL:<index>,<stat>,<sn>,<mid>,<page>,<pages><CR><LF><data>[<CR><LF></p> <p>+CMGL:</p> <p><index>,<stat>,<sn>,<mid>,<page>,<pages><CR><LF><data>[...]</p> <p>OK</p> <p>2) If PDU mode (+CMGF=0) and Command successful:</p> <p>+CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF></p> <p>+CMGL: <index>,<stat>,[alpha],<length><CR><LF><pdu>[...]</p> <p>OK</p> <p>3)If error is related to ME functionality:</p> <p>+CMS ERROR: <err></p> <p>Parameters</p> <p><alpha> string type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer</p>

	<p>specific; used character set should be the one selected with Command Select TE Character Set +CSCS (see definition of this Command in TS 07.07)</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command+CSCS in TS 07.07); type of address given by <tda></p> <p><data> In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</p> <ul style="list-style-type: none"> - if <dc> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is not set: - if TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in TS 07.07):ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55)) - if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format: <ul style="list-style-type: none"> - if <dc> indicates that GSM 03.38 default alphabet is used: - if TE character set other than "HEX" (refer Command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number - if <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number <p><length> integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><index> integer type; value in the range of location numbers supported</p>
--	--

	<p>by the associated memory</p> <p><oa> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer Command +CSCS in TS 07.07); type of address given by <tooa></p> <p><pdu> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><scts> GSM 03.40 TP-Service-Center-Time-Stamp in time-string format (refer <dt>)</p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><tooa> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)</p>
Reference GSM 07.05	Note

4.2.4 AT+CMGR Read SMS Message

AT+CMGR Read SMS Message	
Test Command AT+CMGR=?	Response OK
Write Command AT+CMGR=<index>[,<mode>]	<p>Parameters</p> <p><index> integer type; value in the range of location numbers supported by the associated memory</p> <p><mode> 0 normal 1 not change status of the specified SMS record</p> <p>Response</p> <p>TA returns SMS message with location value <index> from message storage <mem1> to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>1) If text mode (+CMGF=1) and Command successful: for SMS-DELIVER: +CMGR: <stat>,<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data></p> <p>for SMS-SUBMIT: +CMGR: <stat>,<da>,[<alpha>],<toda>,<fo>,<pid>,<dcs>,[<vp>],<sca>,<tosca>,<length>]<CR><LF><data></p>

	<p>for SMS-STATUS-REPORTS: +CMGR: <stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> for SMS-COMMANDS: +CMGR: <stat>,<fo>,<ct>[,<pid>],[<mn>],[<da>],[<toda>],<length><CR><LF><c data>] for CBM storage: +CMGR: <stat>,<sn>,<mid>,<dc>,<page>,<pages><CR><LF><data> 2) If PDU mode (+CMGF=0) and Command successful: +CMGR: <stat>,[<alpha>],<length><CR><LF><pdu></p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><alpha> string type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda></p> <p><data> In the case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</p> <ul style="list-style-type: none"> - if <dc> indicates that GSM 03.38 default alphabet is used and <fo> indicates that GSM 03.40 TPUser-Data-Header-Indication is not set: - if TE character set other than "HEX" (refer Command Select TE Character Set +CSCS in TS 07.07):ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character P (GSM 23) is presented as 17 (IRA 49 and 55)) - if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) In the case of CBS: GSM 03.41 CBM Content of Message in text mode responses; format: - if <dc> indicates that GSM 03.38 default alphabet is used:
--	--

	<ul style="list-style-type: none"> - if TE character set other than "HEX" (refer Command +CSCS in GSM 07.07): ME/TA converts GSM alphabet into current TE character set according to rules of Annex A - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number - if <dc> indicates that 8-bit or UCS2 data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number
<dc>	depending on the Command or result code: GSM 03.38 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format
<fo>	depending on the Command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format
<length>	integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)
<mid>	GSM 03.41 CBM Message Identifier in integer format
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tooa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.
<pid>	GSM 03.40 TP-Protocol-Identifier in integer format (default 0)
<sca>	GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tosca>
<scts>	GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer <dt>)

	<p><stat> 0 "REC UNREAD" Received unread messages</p> <p>1 "REC READ" Received read messages</p> <p>2 "STO UNSENT" Stored unsent messages</p> <p>3 "STO SENT" Stored sent messages</p> <p>4 "ALL" All messages</p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><tooa> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>)</p> <p><tosca> GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer <toda>)</p> <p><vp> depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <dt>)</p>
Reference GSM 07.05	Note

4.2.5 AT+CMGS Send SMS Message

AT+CMGS Send SMS Message	
Test Command AT+CMGS=?	Response OK
Write Command 1) If text mode (+CMGF=1): +CMGS=<da>[,<toda>]<CR> text is entered <ctrl-Z/ESC> ESC quits without sending 2) If PDU mode (+CMGF=0): +CMGS=<length>><CR> PDU is given <ctrl-Z/ESC>	<p>Parameters</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda></p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><length> integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p>Response</p> <p>TA sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports) <sects> is returned. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: +CMGS: <mr></p>

	<p>OK</p> <p>2) If PDU mode(+CMGF=0) and sending successful: +CMGS: <mr></p> <p>OK</p> <p>3)If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameter <mr> GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	Note

4.2.6 AT+CMGW Write SMS Message To Memory

AT+CMGW Write SMS Message To Memory	
Test Command AT+CMGW=?	Response OK
Write Command 1) If text mode (+CMGF=1): AT+CMGW=[<oa>,<da>,<toa>/<toda>,<stat>]] <CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending 2) If PDU mode (+CMGF=0): AT+CMGW=<length>,<stat><CR> PDU is given <ctrl-Z/ESC>	Response TA transmits SMS message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsend', but parameter <stat> allows also other status values to be given. If writing is successful: +CMGW: <index> OK If error is related to ME functionality: +CMS ERROR: <err>
	Parameters <oa> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);type of address given by <toa> <da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <toda> <toa> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <toda>) <toda> GSM 04.11 TP-Destination-Address Type-of-Address octet

	<p>in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129) 129 Unknown type(ISDN format number) 145 International number type(ISDN format)</p> <p><length> integer type value indicating in the text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><pdu> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><index> Index of message in selected storage <mem2></p>
Reference GSM 07.05	Note

4.2.7 AT+CMSS Send SMS Message From Storage

AT+CMSS Send SMS Message From Storage	
Test Command AT+CMSS=?	Response OK
Write Command AT+CMSS=<index>[,<da>[,<tda>]]	<p>Response</p> <p>TA sends message with location value <index> from message storage <mem2> to the network (SMS-SUBMIT). If new recipient address <da> is given, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: +CMGS: <mr> [,<scts>]</p> <p>OK</p> <p>2) If PDU mode(+CMGF=0) and sending successful: +CMGS: <mr> [,<ackpdu>]</p> <p>OK</p> <p>3)If error is related to ME functionality: +CMS ERROR: <err></p>
	Parameters <index> integer type; value in the range of location numbers supported

	<p>by the associated memory</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);; type of address given by <toda></p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><mr> GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	Note

4.2.8 AT+CMGC Send SMS Command

AT+CMGC Send SMS Command	
Test Command AT+CMGC=?	Response OK
Write Command 1) If text mode (+CMGF=1): AT+CMGC=<fo>[,<ct><pid>,<mn>,<da>,<toda>] <CR> text is entered <ctrl-Z/ESC> ESC quits without sending 2) If PDU mode (+CMGF=0): AT+CMGC=<length><CR> PDU is given <ctrl-Z/ESC>	<p>Parameters</p> <p><fo> first octet of GSM 03.40 SMS-COMMAND (default 2) in integer format</p> <p><ct> GSM 03.40 TP-Command-Type in integer format (default 0)</p> <p><pid> GSM 03.40 TP-Protocol-Identifier in integer format (default 0)</p> <p><mn> GSM 03.40 TP-Message-Number in integer format</p> <p><da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07);; type of address given by <toda></p> <p><toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)</p> <p>129 Unknown type(ISDN format number) 145 International number type(ISDN format)</p> <p><length> integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p>Response TA transmits SMS Command message from a TE to the network (SMS-COMMAND). Message reference value <mr> is returned to the TE</p>

	<p>on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode(+CMGF=1) and sending successful: +CMGC: <mr> [,<scts>]</p> <p>OK</p> <p>2) If PDU mode(+CMGF=0) and sending successful: +CMGC: <mr> [,<ackpdu>]</p> <p>OK</p> <p>3) If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters <mr> GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	Note

4.2.9 AT+CNMI New SMS Message Indications

AT+CNMI New SMS Message Indications	
Test Command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) OK Parameters see Write Command
Read Command AT+CNMI?	Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr> OK Parameters see Write Command
Write Command AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]	Response TA selects the procedure for how the receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38. OK If error is related to ME functionality: ERROR

	<p>Parameters</p> <p><mode></p> <p>0 Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</p> <p>1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</p> <p>2 Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</p> <p>3 Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.</p> <p><mt> (the rules for storing received SMSs depend on its data coding scheme (refer GSM 03.38 [2]), preferred memory storage (+CPMS) setting and this value):</p> <p>0 No SMS-DELIVER indications are routed to the TE.</p> <p>1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem>,<index></p> <p>2 SMS-DELIVERs (except class 2) are routed directly to the TE using unsolicited result code: +CMT: [<i><alpha></i>],<length><CR><LF><pdu> (PDU mode enabled) or +CMT: <oa>, [<i><alpha></i>],<sects> [<i><tooa></i>],<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data> (text mode enabled; about parameters in italics, refer Command Show Text Mode Parameters +CSDH). Class 2 messages result in indication as defined in <mt>=1.</p> <p>3 Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other classes result in indication as defined in <mt>=1.</p> <p><bm> (the rules for storing received CBMs depend on its data coding scheme (refer GSM 03.38 [2]), the setting of Select CBM Types (+CSCB) and this value):</p> <p>0 No CBM indications are routed to the TE.</p> <p>2 New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled) or</p>
--	---

	<p>+CBM: <sn>,<mid>,<dc>,<page>,<pages><CR><LF><data> (text mode enabled).</p> <p><ds> 0 No SMS-STATUS-REPORTs are routed to the TE. 1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled) or +CDS: <fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> (text mode enabled)</p> <p><bfr> 0 TA buffer of unsolicited result codes defined within this Command is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes).</p> <p>Unsolicited result code +CMTI: <mem>,<index> Indication that new message has been received +CMT: [<alpha>],<length><CR><LF><pdu> Short message is output directly +CBM: <length><CR><LF><pdu> Cell broadcast message is output directly</p>
Reference GSM 07.05	Note

4.2.10 AT+CPMS Preferred SMS Message Storage

AT+CPMS Preferred SMS Message Storage	
Read Command AT+CPMS?	<p>Response</p> <p>+CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3></p> <p>OK</p> <p>If error is related to ME functionality: ERROR</p> <p>Parameters see Write Command</p>
Test Command AT+CPMS=?	<p>Response</p> <p>+CPMS: (list of supported <mem1>s),(list of supported <mem2>s) ,(list of supported <mem3>s)</p> <p>OK</p> <p>Parameters see Write Command</p>
Write Command AT+CPMS=	<p>Response</p> <p>TA selects memory storages <mem1>, <mem2> and <mem3> to be used for</p>

<p>[<mem1> ,<mem2> ,<mem3>]</p>	<p>reading, writing, etc. +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3></p> <p>OK</p> <p>If error is related to ME functionality: ERROR</p> <hr/> <p>Parameters</p> <p><mem1> Messages to be read and deleted from this memory storage "SM" SIM message storage</p> <p><mem2> Messages will be written and sent to this memory storage "SM" SIM message storage</p> <p><mem3> Received messages will be placed in this memory storage if routing to PC is not set ("+CNMI") "SM" SIM message storage</p> <p><usedx> integer type;Number of messages currently in <memx></p> <p><totalx> integer type;Number of messages storable in <memx></p>
Reference GSM 07.05	Note

4.2.11 AT+CRES Restore SMS Settings

AT+CRES Restore SMS Settings	
Test Command AT+CRES=?	Response +CRES: (list of supported <profile>s) <p>OK</p>
Write Command AT+CRES=[<profile>]	Response TA restores SMS settings from non-volatile memory to active memory. A TA can contain several profiles of settings. Settings specified in commands Service Centre Address +CSCA, Set Message Parameters +CSMP and Select Cell Broadcast Message Types +CSCB (if implemented) are restored. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore can not be restored. <p>OK</p> <p>If error is related to ME functionality: ERROR</p> <hr/> <p>Parameter</p> <p><profile> <u>0</u> manufacturer specific profile number where setting are to be stored</p>
Reference	Note

GSM 07.05	
-----------	--

4.2.12 AT+CSAS Save SMS Settings

AT+CSAS Save SMS Settings	
Test Command AT+CSAS=?	Response +CSAS: (list of supported <profile>s) OK
Write Command AT+CSAS=[<profile>]	Response TA restores SMS settings from non-volatile memory to active memory. A TA can contain several profiles of settings. Settings specified in commands Service Centre Address +CSCA, Set Message Parameters +CSMP and Select Cell Broadcast Message Types +CSCB (if implemented) are restored. Certain settings may not be supported by the storage (e.g. SIM SMS parameters) and therefore can not be restored OK If error is related to ME functionality: ERROR
	Parameter <profile> 0 manufacturer specific profile number where settings are to be stored
Reference GSM 07.05	Note

4.2.13 AT+CSCA SMS Service Center Address

AT+CSCA SMS Service Center Address	
Read Command AT+CSCA?	Response +CSCA: <sca>,<tosca> <scaAlpha> OK
	Parameters see Write Command
Test Command AT+CSCA=?	Response OK
Write Command AT+CSCA = [<sca>[,<tosca>]]	Response TA updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by send and writes commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into <pdu> parameter equals zero. Note: The Command writes the parameters in NON-VOLATILE memory. OK If error is related to ME functionality: +CME ERROR: <err>

	<p>Parameters</p> <p><sca> GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (specified by +CSCS in TS 07.07); type of address given by <tosca></p> <p><tosca> Service center address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer <toda>)</p> <p><scaAlpha> string type Service center address alpha data</p>
Reference GSM 07.05	<p>Note</p> <p>Only if Command +SMEXTRAINFO=1 , <scaAlpha> is available. And nothing can be displayed if it is empty.</p>

4.2.14 AT+CSCB Select Cell Broadcast SMS Messages

AT+CSCB Select Cell Broadcast SMS Messages	
Read Command AT+CSCB?	<p>Response</p> <p>+CSCB: <mode>,<mids>,<dcss></p> <p>OK</p> <p>Parameters see Write Command</p>
Test Command AT+CSCB=?	<p>Response</p> <p>+CSCB: (list of supported <mode>s)</p> <p>OK</p> <p>Parameters see Write Command</p>
Write Command AT+CSCB= <mode>[,<mids>[,<dcss>]]	<p>Response</p> <p>TA selects which types of CBMs are to be received by the ME.</p> <p>Note: The Command writes the parameters in NON-VOLATILE memory.</p> <p>OK</p> <p>If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><mode> 0 message types specified in <mids> and <dcss> are accepted 1 message types specified in <mids> and <dcss> are not accepted</p> <p><mids> string type; all different possible combinations of CBM message identifiers (refer <mid>) (default is empty string); e.g. "0,1,5,320-478,922".</p>

	<dcss> string type; all different possible combinations of CBM data coding schemes (refer <dc>) (default is empty string); e.g. "0-3,5".
Reference GSM 07.05	Note

4.2.15 AT+CSDH Show SMS Text Mode Parameters

AT+CSDH Show SMS Text Mode Parameters	
Read Command AT+CSDH?	Response +CSDH: <show> OK Parameters see Write Command
Test Command AT+CSDH=?	Response +CSDH: (list of supported <show>s) OK Parameter see Write Command
Write Command AT+CSDH=[<show>]	Response TA determines whether detailed header information is shown in text mode result codes. OK Parameter <show> <u>0</u> do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dc>) nor <length>, <toda> or <toa> in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode 1 show the values in result codes
Reference GSM 07.05	Note

4.2.16 AT+CSMP Set SMS Text Mode Parameters

AT+CSMP Set SMS Text Mode Parameters	
Read Command AT+CSMP?	Response +CSMP: <fo>,<vp>,<pid>,<dc> OK Parameters see Write Command
Test Command	Response

AT+CSMP=?	+CSMP: (list of supported <fo>s),(list of supported <vp>s), (list of supported <pid>s), (list of supported <dcs>s) OK Parameters see Write Command
Write Command AT+CSMP=[<fo> <vp>[,<pid>[,<dcs>]]]	Response TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text mode is selected (+CMGF=1). It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string). Note: The Command writes the parameters in NON-VOLATILE memory. OK Parameters <fo> depending on the Command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format. SMS status report is supported under text mode if <fo> is set to 49. <vp> depending on SMS-SUBMIT <fo> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <dt>) <pid> GSM 03.40 TP-Protocol-Identifier in integer format (default 0). <dcs> GSM 03.38 SMS Data Coding Scheme in Integer format.
Reference GSM 07.05	Note

4.2.17 AT+CSMS Select Message Service

AT+CSMS Select Message Service	
Read Command AT+CSMS?	Response +CSMS: <service>,<mt>,<mo>,<bm> OK Parameters see Write Command
Test Command AT+CSMS=?	Response +CSMS: (list of supported <service>s)

	<p>OK</p> <p>Parameters see Write Command</p>
<p>Write Command AT+CSMS= <service></p>	<p>Response +CSMS: <mt>,<mo>,<bm></p> <p>OK</p> <p>If error is related to ME functionality: +CMS ERROR: <err></p> <p>Parameters</p> <p><service> 0 GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with GSM 07.05 Phase 2 version 4.7.0; Phase 2+ features which do not require new Command syntax may be supported (e.g. correct routing of messages with new Phase 2+ data coding schemes))</p> <p> 128 SMS PDU mode - TPDU only used for sending/receiving SMSs.</p> <p><mt> Mobile Terminated Messages:</p> <p> 0 Type not supported</p> <p> 1 Type supported</p> <p><mo> Mobile Originated Messages:</p> <p> 0 Type not supported</p> <p> 1 Type supported</p> <p><bm> Broadcast Type Messages:</p> <p> 0 Type not supported</p> <p> 1 Type supported</p>
<p>Reference GSM 07.05</p>	<p>Note</p>

5 AT Commands for GPRS Support

5.1 Overview of AT Commands for GPRS Support

Command	Description
AT+CGATT	ATTACH TO/DETACH FROM GPRS SERVICE
AT+CGDCONT	DEFINE PDP CONTEXT
AT+CGQMIN	QUALITY OF SERVICE PROFILE (MINIMUM ACCEPTABLE)
AT+CGQREQ	QUALITY OF SERVICE PROFILE (REQUESTED)
AT+CGACT	PDP CONTEXT ACTIVATE OR DEACTIVATE
AT+CGDATA	ENTER DATA STATE
AT+CGPADDR	SHOW PDP ADDRESS
AT+CGCLASS	GPRS MOBILE STATION CLASS
AT+CGEREP	CONTROL UNSOLICITED GPRS EVENT REPORTING
AT+CGREG	NETWORK REGISTRATION STATUS
AT+CGSMS	SELECT SERVICE FOR MO SMS MESSAGES

5.2 Detailed Descriptions of AT Commands for GPRS Support

5.2.1 AT+CGATT Attach To/Detach From GPRS Service

AT+CGATT Attach To/Detach From GPRS Service	
Test Command AT+CGATT=?	Response +CGATT: (list of supported <state>s) OK Parameter See Write Command
Read Command AT+CGATT?	Response +CGATT: <state> OK Parameter See Write Command
Write Command AT+CGATT=<state>	Response OK If error is related to ME functionality: +CMS ERROR: <err> Parameter <state> indicates the state of GPRS attachment 0 – detached 1 – attached Other values are reserved and will result in an ERROR response to the Write Command.
Reference GSM07.07	Note

5.2.2 AT+CGDCONT Define PDP Context

AT+CGDCONT Define PDP Context	
Test Command AT+CGDCONT =?	Response +CGDCONT: (range of supported <cid>s), <PDP_type>, <APN>, <PDP_addr>, (list of supported <data_comp>s), <list of supported <head_comp>s) OK Parameters See Write Command
Read Command AT+CGDCONT ?	Response +CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> <CR><LF>+CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<data_comp>,<head_comp> ... OK Parameters See Write Command
Write Command AT+CGDCONT =<cid>[,<PDP_type>],[<APN>],[<PDP_addr>],[<data_comp>],[<head_comp>]]]]	Response OK ERROR Parameters <cid> (PDP Context Identifier) a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of permitted values (minimum value=1) is returned by the test form of the command. <PDP_type> (Packet Data Protocol type) a string parameter which specifies the type of packet data protocol X25 ITU-T/CCITT X.25 layer 3 IP Internet Protocol (IETF STD 5) OSPIH Internet Hosted Octet Stream Protocol PPP Point to Point Protocol (IETF STD 51) <APN> (Access Point Name) a string parameter that is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested. <PDP_addr> a string parameter that identifies the MT in the address space applicable to the PDP. If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be

	<p>requested. The allocated address may be read using the +CGPADDR Command.</p> <p><d_comp> a numeric parameter that controls PDP data compression 0 – off (default if value is omitted) Other values are reserved</p> <p><h_comp> a numeric parameter that controls PDP data compression 0 – off (default if value is omitted) Other values are reserved</p>
Reference GSM07.07	Note

5.2.3 AT+CGQMIN Quality Of Service Profile (Minimum Acceptable)

AT+CGQMIN Quality Of Service Profile (Minimum Acceptable)	
Test Command AT+CGQMIN=?	Response +CGQMIN: <PDP_type> ,(list of supported <precedence> s),(list of supported <delay> s),(list of supported <reliability> s),<list of supported <peak> s),(list of supported <mean> s) OK Parameters See Write Command
Read Command AT+CGQMIN?	Response +CGQMIN: <cid> ,<precedence>,<delay>,<reliability>,<peak>,<mean> <CR><LF>+CGQMIN: <cid> ,<precedence>,<delay>,<reliability>,<peak>,<mean> ... OK Parameters See Write Command
Write Command AT+CGQMIN=<cid> [,<precedence>][,<delay>][,<reliability>][,<peak>][,<mean>]]]]	Response OK If error is related to ME functionality: +CME ERROR: <err> Parameters <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command) The following parameter are defined in GSM 03.60 <precedence> a numeric parameter which specifies the precedence class <delay> a numeric parameter which specifies the delay class <reliability> a numeric parameter which specifies the reliability class <peak> a numeric parameter which specifies the peak throughput class <mean> a numeric parameter which specifies the mean throughput

	class
Reference GSM07.07	Note

5.2.4 AT+CGQREQ Quality Of Service Profile (Requested)

AT+CGQREQ Quality Of Service Profile (Requested)	
Test Command AT+CGQREQ=?	<p>Response</p> <p>+CGQREQ: <PDP_type>,(list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s),<list of supported <peak>s),(list of supported <mean>s)</p> <p>OK</p> <p>Parameters See Write Command</p>
Read Command AT+CGQREQ?	<p>Response</p> <p>+CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> <CR><LF>+CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak >,<mean> ...</p> <p>OK</p> <p>Parameters See Write Command</p>
Write Command AT+CGQREQ= <cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]	<p>Response</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: <err></p> <p>Parameters</p> <p><cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)</p> <p>The following parameter are defined in GSM 03.60</p> <p><precedence> a numeric parameter which specifies the precedence class</p> <p><delay> a numeric parameter which specifies the delay class</p> <p><reliability> a numeric parameter which specifies the reliability class</p> <p><peak> a numeric parameter which specifies the peak throughput class</p> <p><mean> a numeric parameter which specifies the mean throughput class</p>
Reference GSM07.07	Note

5.2.5 AT+CGACT PDP Context Activate Or Deactivate

AT+CGACT PDP Context Activate Or Deactivate	
---	--

Test Command AT+CGACT=?	Response +CGACT: (list of supported <state>s) OK Parameter See Write Command
Read Command AT+CGACT?	Response +CGACT: <cid>,<state>[<CR><LF>+CGACT:<cid><state>...] OK
Write Command AT+CGACT=<state>,<cid>	Response OK NO CARRIER If error is related to ME functionality: +CME ERROR: <err> Parameters <state> indicates the state of PDP context activation 0 – deactivated 1 – activated Other values are reserved and will result in an ERROR response to the Write Command. <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)
Reference GSM07.07	Note If context is deactivated successfully, NO CARRIER is returned

5.2.6 AT+CGDATA Enter Data State

AT+CGDATA Enter Data State	
Test Command AT+CGDATA=?	Response +CGDATA: list of supported <L2P>s OK Parameter See Write Command
Write Command AT+CGDATA=<L2P>[,<cid>[,<cid>[,...]]]	Response OK NO CARRIER If error is related to ME functionality: +CME ERROR: <err> Parameters <L2P> a string parameter that indicates the layer 2 protocol to be used between the TE and MT: PPP – Point to Point protocol for a PDP such as IP Other values are not supported and will result in an ERROR response to the execution Command.

	<cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command)
Reference GSM07.07	Note

5.2.7 AT+CGPADDR Show PDP Address

AT+CGPADDR Show PDP Address	
Test Command AT+CGPADDR= ?	Response +CGPADDR: (list of defined <cid> s) OK Parameter See Write Command
Write Command AT+CGPADDR= <cid>	Response +CGPADDR: <cid>,<PDP_addr> OK ERROR Parameters <cid> a numeric parameter which specifies a particular PDP context definition (see +CGDCONT Command) <PDP_addr> a string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT Command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid> . <PDP_address> is omitted if none is available.
Reference GSM07.07	Note This Command dictates the behavior of PPP in the ME but not that of any other GPRS-enabled foreground layer, e.g. browser.

5.2.8 AT+CGCLASS GPRS Mobile Station Class

AT+CGCLASS GPRS Mobile Station Class	
Test Command AT+CGCLASS= ?	Response +CGCLASS: (list of supported <class> s) OK Parameter See Write Command
Read Command AT+CGCLASS?	Response +CGCLASS: <class>

	OK Parameter See Write Command
Write Command AT+CGCLASS= <class>	Response OK ERROR If error is related to ME functionality: +CME ERROR: <err> Parameter <class> a string parameter which indicates the GPRS mobile class (in descending order of functionality) A class A (highest) B class B CG class C in GPRS only mode CC class C in circuit switched only mode (lowest)
Reference GSM07.07	Note Class A is not supported by the Quectel GPRS solution.

5.2.9 AT+CGEREP Control Unsolicited GPRS Event Reporting

AT+CGEREP Control Unsolicited GPRS Event Reporting	
Test Command AT+CGEREP=?	Response +CGEREP: (list of supported <mode>s) OK Parameter See Write Command
Read Command AT+CGEREP?	Response +CGEREP: <mode> OK Parameter See Write Command
Write Command AT+CGEREP=< mode>	Response OK ERROR Parameter <mode> 0 buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE. 1 discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE Unsolicited Result Codes supported:

	+CGEV: NW DEACT <PDP_type>, <PDP_addr>[,<cid>] +CGEV: ME DEACT <PDP_type>, <PDP_addr>[,<cid>] +CGEV: NW DETACH +CGEV: ME CLASS <class> parameters <PDP_type> Packet Data Protocol type (see +CGDCONT Command) <PDP_addr> Packet Data Protocol address (see +CGDCONT Command) <cid> Context Id (see +CGDCONT Command) <class> GPRS mobile class (see +CGCLASS Command)
Reference GSM07.07	Note

5.2.10 AT+CGREG Network Registration Status

AT+CGREG Network Registration Status	
Test Command AT+CGREG=?	Response +CGREG: (list of supported <n>s) OK Parameter See Write Command
Read Command AT+CGREG?	Response +CGREG: <n>,<stat>[,<lac>,<ci>] OK +CME ERROR: <err> Parameter See Write Command
Write Command AT+CGREG=[<n>]	Response OK ERROR Parameters <n> 0 disable network registration unsolicited result code 1 enable network registration unsolicited result code +CGREG:<stat> 2 enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>] <stat> 0 not registered, ME is not currently searching a new operator to register to 1 registered <lac> string type; two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal) <ci> string type; two bytes cell ID in hexadecimal format

Reference GSM07.07	Note For parameter stat, options 0 and 1 supported only.
-----------------------	---

5.2.11 AT+CGSMS Select Service For MO SMS Messages

AT+CGSMS Select Service For MO SMS Messages	
Test Command AT+CGSMS=?	Response +CGSMS: (list of currently available <service>s) OK Parameter See Write Command
Read Command AT+CGSMS?	Response +CGSMS: <service> OK Parameter See Write Command
Write Command AT+CGSMS=[<service>]	Response OK If error is related to ME functionality: +CME ERROR: <err> Parameter <service> a numeric parameter which indicates the service or service preference to be used 0 GPRS 1 circuit switched 2 GPRS preferred (use circuit switched if GPRS not available) 3 circuit switched preferred (use GPRS if circuit switched not available)
Reference GSM07.07	Note The circuit switched service route is the default method

6 AT Commands Special for Quectel

6.1 Overview

Command	Description
AT+QECHO	ECHO CANCELLATION CONTROL
AT+ QSIDET	CHANGE THE SIDE TONE GAIN LEVEL
AT+QPOWD	POWER OFF
AT+QTRPIN	TIMES REMAIN TO INPUT SIM PIN/PUK
AT+QMIC	CHANGE THE MICROPHONE GAIN LEVEL
AT+QALARM	SET ALARM
AT+QADC	READ ADC
AT +QRSTCB	RESET CELL BROADCAST
AT +QINDRI	INDICATE RI WHEN USING URC
AT+QLOCTS	GET LOCAL TIMESTAMP
AT+QEXTHS	EXTERNAL HEADSET JACK CONTROL
AT+QHSTBN	HEADSET BUTTON STATUS REPORTING
AT+QSIMSTAT	SIM INSERTED STATUS REPORTING
AT+QLDTMF	GENERATE LOCAL DTMF TONE
AT+QCGTIND	CS VOICE/DATA/FAX CALL OR GPRS PDP CONTEXT TERMINATION INDICATION
AT+QSPN	GET SERVICE PROVIDER NAME FROM SIM
AT+QBAND	GET AND SET MOBILE OPERATION BAND
AT+QAUDCH	SWAP THE AUDIO CHANNELS
AT+QSCLK	CONFIGURE SLOW CLOCK
AT+QENG	SWITCH ON OR OFF ENGINEERING MODE
AT+QCLASS0	STORE CLASS 0 SMS TO SIM WHEN RECEIVED CLASS 0 SMS
AT+QCCID	SHOW ICCID
AT+QTEMP	SET CRITICAL TEMPERATURE OPERATING MODE OR QUERY TEMPERATURE
AT+QSIMDET	SWITCH ON OR OFF DETECTING SIM CARD
AT+QMGDA	DELETE ALL SMS
AT+QLTONE	GENERATE LOCAL SPECIFIC TONE
AT+QCLIP	CONNECTED LINE IDENTIFICATION PRESENTATION WITHOUT ALPHA STRING
AT+QGID	GET SIM CARD GROUP IDENTIFIER
AT+QMOSTAT	SHOW STATE OF MOBILE ORIGINATED CALL
AT+QGPCCLASS	CHANGE GPRS MULTISLOT CLASS
AT+QMGHEX	ENABLE TO SEND NON-ASCII CHARACTER SMS
AT+QAUDLOOP	AUDIO CHANNEL LOOPBACK TEST
AT+QSMSCODE	CONFIGURE SMS CODE MODE
AT+QIURC	ENABLE OR DISABLE INITIAL URC PRESENTATION
AT+QCSPWD	CHANGE PS SUPER PASSWORD

AT+QEXTUNSOL	ENABLE/DISABLE PROPRIETARY UNSOLICITED INDICATIONS
--------------	--

6.2 Detailed Descriptions of Commands

6.2.1 AT+QECHO Echo Cancellation Control

AT+QECHO Echo Cancellation Control	
Read Command AT+QECHO?	Response : +QECHO: <control word>, <nlp> , <suppression value>,<nr>,<channel> OK Parameters See Write Command
Test Command AT+QECHO=?	Response : +QECHO: (<control word>), (<nlp>) , (<suppression value>),(<nr>),(<channel>) OK Parameters See Write Command
Write Command AT+QECHO= <control word> , <nlp> , <suppression value> , <nr> , <channel>	Response : OK ERROR Parameters < control word > int: 0 – 65536 <nlp> int: 0 – 65536 <suppression value> int: 0 – 65536s <nr> int: 0 – 65536s <channel> int 0-2 0 NORMAL_AUDIO 1 HEADSET_AUDIO 2 LOUDSPEAKER_AUDIO
Reference	

6.2.2 AT+QSIDET Change The Side Tone Gain Level

AT+QSIDET Change The Side Tone Gain Level	
Read Command AT+QSIDET?	Response: +QSIDET(NORMAL_AUDIO): <gainlevel> OK +QSIDET(HEADSET_AUDIO): <gainlevel> OK Parameter

	See Write Command
Test Command AT+QSIDET=?	Response +QSIDET: (<gainlevel>) OK
	Parameter See Write Command
Write Command AT+QSIDET=<gainlevel >	Response OK ERROR
	Parameter < gainlevel > int: 0 – 255
Reference	Note <ul style="list-style-type: none"> • <gainlevel> value is related to channel specific.

6.2.3 AT+QPOWD Power Off

AT+QPOWD	Power Off
Write Command AT+QPOWD = <n>	Response Parameter <n> 0 Power off urgently (Will not send out NORMAL POWER DOWN) 1 Normal power off (Will send out NORMAL POWER DOWN)
Reference	Note

6.2.4 AT+QTRPIN Times Remain To Input SIM PIN/PUK

AT+QTRPIN	Times Remain To Input SIM PIN/PUK
Execution Command AT+QTRPIN	Response Times remain to input SIM PIN +QTRPIN: <chv1>,<chv2>,<puk1>,<puk2> OK
	Parameters <chv1> Times remain to input chv1 <chv2> Times remain to input chv2 <puk1> Times remain to input puk1 <puk2> Times remain to input puk2
Reference	Note

6.2.5 AT+QMIC Change The Microphone Gain Level

AT+QMIC	Change The Microphone Gain Level
----------------	---

Read Command AT+QMIC?	Response +QMIC: < gainlevel(Normal_Mic) >, <gainlevel(Headset_Mic)> OK <hr/> Parameters See Write Command
Test Command AT+QMIC=?	Response +QMIC: (list of supported <channel>s) , (list of supported < gainlevel >s) OK <hr/> Parameters See Write Command
Write Command AT+QMIC= <channel>,< gainlevel>	Response : OK ERROR <hr/> Parameters <channel> 0 – Normal Microphone 1 – Headset Microphone 2 – Loudspeaker Microphone <gainlevel> int: 0 – 15
Reference	Note

6.2.6 AT+QALARM Set Alarm

AT+QALARM Set Alarm	
Test Command AT+QALAR M=?	Response +QALARM: (<state>),<time>,<repeat>,<power> OK <hr/> Parameters See Write Command
Write Command AT+QALAR M= <state>,<time >,<repeat>,<p ower>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err> <hr/> Parameters < state > an integer parameter which indicates whether enable or disable alarm. 0 CLEAR ALARM 1 SET ALARM

	<p>< time > a string parameter which indicates the time when alarm arrives. The format is “yy/MM/dd, hh:mm:ss+-zz” where characters indicate the last two digits of year, month, day, hour, minute, second and time zone. The time zone is expressed in quarters of an hour between the local time and GMT, ranging from -48 to +48.</p> <p>< repeat > an integer parameter which indicates the repeat mode</p> <p>0 None 1 Daily 2 Weekly 3 Monthly</p> <p><power> an integer parameter which indicates the method of dealing power when alarm arrives.</p> <p>0 None Only send “ALARM RING” to serial port 1 Alarm power off Send “ALARM RING” to serial port and power off in 5 seconds 2 Alarm power on Send “ALARM MODE” to serial port and enter into alarm mode</p> <p>Note: In alarm mode, protocol stack and SIM protocol is closed, only a few AT Command can be executed, and system will be powered down after 90 seconds if neither power key is pressed nor functionality is changed to full functionality. If power key is pressed, system will be powered down right now.</p>
Reference	Note

6.2.7 AT+QADC Read ADC

AT+QADC Read ADC	
Read Command AT+ QADC?	<p>Response</p> <p>+QADC: <status>,<value></p> <p>OK</p> <p>Parameters</p> <p>See test Command</p>
Test Command AT+QADC=?	<p>Response :</p> <p>+QADC: (list of supported <status>s), (list of supported <value>s)</p> <p>OK</p> <p>Parameters</p> <p><status></p> <p>1 success 0 fail</p> <p><value> integer 0-2400</p> <p>Note</p>

--	--

6.2.8 AT+QRSTCB Reset Cell Broadcast

AT+QRSTCB Reset Cell Broadcast	
Execution Command AT+QRSTCB	Response OK
	Parameter
Reference	Note Reset the CB module

6.2.9 AT+QINDRI Indicate RI When Using URC

AT+QINDRI Indicate RI When Using URC	
Read Command AT+ QINDRI?	Response +QINDRI: <status> OK
	Parameter See Write Command
Write Command AT+QINDRI=[<status>]	Response OK ERROR
	Parameter <status> 0 on 1 off
Reference	Note

6.2.10 AT+QLOCTS Get Local Timestamp

AT+QLOCTS Get Local Timestamp	
Test Command AT+QLOCTS=?	Response +QLOCTS: the format of <timestamp> OK
	Parameter See Execution Command
Execution Command AT+QLOCTS	Response +QLOCTS: <timestamp>
	Parameter <timestamp> a string parameter which indicates the local timestamp. The format of timestamp is "yy/MM/dd,hh:mm:ss+/-zz"

	yy: year MM: month dd: day hh: hour mm: minute ss: second zz: time zone
Reference	Note Support for this Command will be network dependant

6.2.11 AT+QEXTHS External Headset Jack Control

AT+ QEXTHS External Headset Jack Control	
Test Command AT+QEXTHS=?	Response +QEXTHS: (<mode>s) OK
	Parameter See Write Command
Read Command AT+QEXTHS?	Response +QEXTHS: <mode>,<headset attach> OK
	Parameters See Write Command
Write Command AT+QEXTHS=<mode>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
	Unsolicited result code +QEXTHS: <mode>,<headset attach>
	Parameters <mode> a numeric parameter which indicates whether an unsolicited event code (indicating whether the headset has been attached/detached) should be sent to the terminal. 0 not send unsolicited event code 1 send unsolicited event code <headset attach> a numeric parameter which indicates whether a headset has been attached or not 0 not attached 1 attached
Reference	Note

	Support for this Command will be hardware dependant
--	---

6.2.12 AT+QHSBTN Headset Button Status Reporting

AT+ QHSBTN Headset Button Status Reporting	
Test Command AT+QHSBTNT =?	Response +QHSBTN: (<mode>s) OK
	Parameter See Write Command
Read Command AT+QHSBTN?	Response +QHSBTN: <mode>,<headset button press> OK
	Parameters See Write Command
Write Command AT+QHSBTN=< mode>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
	Unsolicited result code +QHSBTN: <mode>,<headset button press>
	Parameters <mode> a numeric parameter which indicates whether an unsolicited event code (indicating whether the headset button has been pressed) should be sent to the terminal. 0 not send unsolicited event code 1 send unsolicited event code <headset attach> a numeric parameter which indicates whether a headset button has been pressed or not 0 not pressed 1 pressed
Reference	Note Support for this Command will be hardware dependant

6.2.13 AT+QSIMSTAT SIM Inserted Status Reporting

AT+QSIMSTAT SIM Inserted Status Reporting	
Test Command AT+QSIMSTAT =?	Response +QSIMSTAT: (list of supported <n>s) OK

	Parameter See Write Command
Read Command AT+QSIMSTAT ?	Response +QSIMSTAT: <n>,<SIM inserted> OK
	Parameter See Write Command
Write Command AT+QSIMSTAT =<n>	Response OK ERROR If error is related to ME functionality: +CMS ERROR: <err>
	Parameters <n> a numeric parameter which indicates whether to show an unsolicited event code indicating whether the SIM has just been inserted or removed. 0 disable 1 enable < SIM inserted> a numeric parameter which indicates whether SIM card has been inserted. 0 not inserted 1 inserted
Reference	Note

6.2.14 AT+QLDTMF Generate Local DTMF Tone

AT+QLDTMF Generate Local DTMF Tone	
Write Command AT+QLDTMF=<n>[,<DTMF string>]	Response OK ERROR
	Parameters <n> a numeric parameter(1-1000) which indicates the duration of all DTMF tones in <DTMF -string> in 1/10 secs <DTMF -string> a string parameter which has a max length of 20 chars of form <DTMF > , separated by commas. <DTMF > A single ASCII chars in the set 0-9,#,*,A-D.
Execution Command AT+QLDTMF	Response OK Aborts any DTMF tone currently being generated and any DTMF tone sequence.
Reference GSM07.07	Note

6.2.15 AT+QCGTIND CS Voice/Data/Fax Call Or GPRS PDP Context Termination Indication

AT+QCGTIND CS Voice/Data/Fax Call Or GPRS PDP Context Termination Indication	
Test Command AT+QCGTIND=?	Response +QCGTIND: (list of supported <n>s) OK
	Parameter See Write Command
Read Command AT+QCGTIND?	Response +QCGTIND: <n> OK
	Parameter See Write Command
Write Command AT+QCGTIND=<n>	Response OK ERROR
	Parameter <n> a numeric parameter which indicates whether to enable an unsolicited event code indicating whether a CS voice call, CS data, fax call or GPRS session has been terminated. 0 disable 1 enable
	Unsolicited result code When enabled, an unsolicited result code is returned after the connection has been terminated +QCGTIND: < type > Parameter < type > connection type 0 CSV connection 1 CSD connection 2 PPP connection
Reference	Note

6.2.16 AT+QSPN Get Service Provider Name From SIM

AT+QSPN Get Service Provider Name From SIM	
Read Command AT+QSPN?	Response +QSPN: <spn>,<display mode> OK

Test Command AT+QAUDCH=?	Response +QAUDCH: (0 = NORMAL_AUDIO, 1 = HEADSET_AUDIO, 2 = LOUDSPEAKER_AUDIO, 3 = AUTO) OK
	Parameter See Write Command.
Write Command AT+QAUDCH=[<n>]	Response OK +CME ERROR: <err>
	Parameter <n> 0 – Normal audio channel(default) 1 – Headset audio channel 2 – Loudspeaker audio 3 – Auto
Reference	.

6.2.19 AT+QSCLK Configure Slow Clock

AT+ QSCLK Configure Slow Clock	
Read Command AT+QSCLK?	Response +QSCLK: <n> OK
	Parameter See Write Command.
Test Command AT+QSCLK=?	Response +QSCLK: (0,1) OK
	Parameter See Write Command.
Write Command AT+QSCLK=[<n>]	Response OK ERROR
	Parameter <n> 0 – disable slow clock 1 – enable slow clock
Reference	Note

6.2.20 AT+QENG Switch On Or Off Engineering Mode

AT+ QENG Switch On Or Off Engineering Mode	
Read Command	Response

<p>AT+QENG?</p>	<p>Engineering Mode is designed to allow a field engineer to view and test the network information received by a handset, when the handset is either in idle mode or dedicated mode (that is: with a call active). In each mode, the engineer is able to view network interaction for the “serving cell” (the cell the handset is currently registered with) or for the neighbouring cells.</p> <p>TA returns the current engineering mode. The network information including serving cell and neighbouring cells are returned only when <mode>=1 or <mode> = 2. <cell> carry with them corresponding network interaction.</p> <p>+QENG: <mode>,<Ncell> [+QENG: <cell>,”<arfcn>,<rxl>,<rxq>,<mcc>,<mnc>,<bsic>,<cellid>,<rla>,<txp>” <CR><LF>+QENG: <cell>,”<arfcn>,<rxl>,<bsic>” ...]</p> <p>OK</p> <p>Parameters See Write Command.</p>
<p>Test Command AT+QENG=?</p>	<p>Response TA returns the list of supported modes. +QENG: (list of supported <mode>s),(list of supported <Ncell>)</p> <p>OK</p> <p>Parameters See Write Command.</p>
<p>Write Command AT+QENG =<mode>[,<Ncell>] >]</p>	<p>Response TA attempt to switch on or off engineering mode.GSM network operator. TA controls the presentation of an unsolicited result code +QENG: (network information) when <mode>=2 and there is a change of network information .</p> <p>OK ERROR</p> <p>Parameters</p> <p><mode> 0 switch off engineering mode 1 switch on engineering mode 2 switch on engineering mode, and activate the unsolicited reporting of network information.</p> <p><Ncell> 0 un-display neighbor cell ID 1 display neighbor cell ID</p> <p><cell> 0 the serving cell 1-6 the index of the neighbouring cell.</p> <p><arfcn> absolute radio frequency channel number.</p>

	<p><rxl> receive level.</p> <p><rxq> receive quality.</p> <p><mcc> mobile country code.</p> <p><mnc> mobile network code.</p> <p><bsic> base station identity code.</p> <p><cellid> cell id.</p> <p><rla> receive level access minimum.</p> <p><txp> transmit power maximum CCCH.</p>
Reference	Note

6.2.21 AT+QSCCLASS0 Store Class 0 SMS To SIM When Received Class 0 SMS

AT+QSCCLASS0 Store Class 0 SMS To SIM When Received Class 0 SMS	
Read Command AT+QSCCLASS0 ?	<p>Response</p> <p>+QSCCLASS0: <mode></p> <p>OK</p> <p>Parameter</p> <p>See Write Command.</p>
Test Command AT+QSCCLASS0 =?	<p>Response</p> <p>+QSCCLASS0: (0, 1)</p> <p>OK</p> <p>Parameter</p> <p>See Write Command.</p>
Write Command AT+QSCCLASS0 =[<mode>]	<p>Response</p> <p>OK</p> <p>ERROR</p> <p>Parameter</p> <p><mode></p> <p>0 – disable to store Class 0 SMS to SIM when received Class 0 SMS</p> <p>1 – Enable to store Class 0 SMS to SIM when received Class 0 SMS</p>
Reference	Note

6.2.22 AT+QCCID Show ICCID

AT+QCCID Show ICCID	
Test Command AT+QCCID =?	<p>Response</p> <p>OK</p>
Execution Command AT+QCCID	<p>Response</p> <p>ccid data [ex. 898600810906F8048812]</p> <p>OK</p>

	Parameter
Reference	Note

6.2.23 AT+QTEMP Set Critical Temperature Operating Mode Or Query Temperature

AT+CMTE Set Critical Temperature Operating Mode Or Query Temperature	
Read Command AT+QTEMP?	<p>Response</p> <p>+QTEMP: <mode><Temperature></p> <p>OK</p> <hr/> <p>Parameters</p> <p>See Write Command.</p>
Write Command AT+QTEMP= [<mode>]	<p>Response</p> <p>OK</p> <p>ERROR</p> <hr/> <p>Parameters</p> <p><mode></p> <p>0 disable power off</p> <p>1 enable power off</p> <p>< Temperature> range of -40 to 90</p>
Reference	<p>Note</p> <ul style="list-style-type: none"> ● When temperature is extreme high or low, product will power off. ● URCs indicating the alert level "1" or "-1" are intended to enable the user to take appropriate precautions, such as protect the module from exposure to extreme conditions, or save or back up data etc. Presentation of "1" or "-1" URCs is always enabled. ● Level "2" or "-2" URCs are followed by immediate shutdown. The presentation of these URCs are always enabled

6.2.24 AT+QSIMDET Switch On Or Off Detecting SIM Card

AT+ QSIMDET Switch On Or Off Detecting SIM Card	
Read Command AT+QSIMDET?	<p>Response</p> <p>+QSIMDET: <mode></p> <p>OK</p> <hr/> <p>Parameter</p>
Test Command AT+QSIMDET =?	<p>Response</p> <p>+QSIMDET: (0-1)</p>

	OK
	Parameter See Write Command.
Write Command AT+QSIMDET= <mode>	Response OK ERROR
	Parameter <mode> 0 – switch off detecting SIM card 1 – switch on detecting SIM card
Reference	Note

6.2.25 AT+QMGDA Delete All SMS

AT+QMGDA Delete All SMS	
Test Command AT+QMGDA=?	Response +QMGDA: (listed of supported <type>s) OK +CMS ERROR: <err>
	Parameter See Write Command
Write Command AT+QMGDA=<t ype>	Response OK ERROR +CMS ERROR: <err>
	Parameter 1) If text mode: <ul style="list-style-type: none"> “DEL READ” delete all read messages “DEL UNREAD” delete all unread messages “DEL SENT” delete all sent SMS “DEL UNSENT” delete all unsent SMS “DEL INBOX” delete all received SMS “DEL ALL” delete all SMS 3) if PDU mode : <ul style="list-style-type: none"> 1 delete all read messages 2 delete all unread messages 3 delete all sent SMS 4 delete all unsent SMS 5 delete all received SMS 6 delete all SMS
Reference	Note

6.2.26 AT+QLTONE Generate Local Specific Tone

AT+SIMTONE Generate Specifically Tone	
Test Command AT+QLTONE =?	Response +QLTONE: (0-1), (0-50000), (0-1000), (0-1000), (0-15300000) OK
	Parameters See Write Command.
Write Command AT+QLTONE =<mode>,< frequency >,< periodOn >,< periodOff >,< duration >	Response OK ERROR
	Parameters <mode> 0 – Stop playing tone 1 – Start playing tone <frequency > the frequency of tone to be generated <periodon> the period of generating tone <periodoff> the period of stopping tone <duration> duration of tones in milliseconds
Reference	Note

6.2.27 AT+QCLIP Connected Line Identification Presentation Without Alpha String

AT+QCLIP Connected Line Identification Presentation Without Alpha String	
Read Command AT+QCLIP?	Response +QCLIP: <mode> OK
	Parameter
Write Command AT+QCLIP=[<m ode>]	Response OK ERROR
	Parameter <mode> 0 – disable to present alpha string 1 – enable to present alpha string
Reference	Note

6.2.28 AT+QGID Get SIM Card Group Identifier

AT+QGID Get SIM Card Group Identifier	
Execution Command AT+ QGID	Response +QGID: <gid1> <gid2>

	OK ERROR
	Parameters <gid1> integer type of SIM card group identifier 1 <gid2> integer type of SIM card group identifier 2
Reference	Note If the SIM supports GID files, the GID values were returned. Otherwise 0xff is returned.

6.2.29 AT+QMOSTAT Show State of Mobile Originated Call

AT+QMOSTAT Show State of Mobile Originated Call	
Test Command AT+QMOSTAT =?	Response +QMOSTAT: (0,1) OK
	Parameters See Write Command.
Read Command AT+QMOSTAT ?	Response +QMOSTAT: <mode> OK
Write Command AT+QMOSTAT =[<mode>]	Response OK ERROR
	Parameters <mode> 0 not show call state of mobile originated call 1 show call state of mobile originated call. After dialing call numbers, the URC strings of MO RING will be sent if the other call side is alerted and the URC strings of MO CONNECTED will be sent if the call is established.
Reference	Note

6.2.30 AT+QGPCLASS Change GPRS Multi Slot Class

AT+QGPCLASS Change GPRS Multi Slot Class	
Read Command AT+QGPCLASS	Response MULTISLOT CLASS: <class>

?	OK
	Parameter see Write Command
Test Command AT+QGPCLASS =?	Response MULTISLOT CLASS: 1-12 OK
Write Command AT+QGPCLASS =<class>	Response OK ERROR
	Parameter <class> GPRS multi slot class
Reference	Note Need reboot to take effect.

6.2.31 AT+QMGHEX Enable To Send Non-ASCII Character SMS

AT+QMGHEX Enable To Send Non-ASCII Character SMS	
Read Command AT+QMGHEX?	Response +QMGHEX: <mode> OK
	Parameter See Write Command
Test Command AT+QMGHEX =?	Response +QMGHEX: (0,1) OK
Write Command AT+QMGHEX =<mode>	Response OK ERROR
	Parameter <mode> 0 Send SMS in ordinary way 1 Enable to send SMS varying from 0x00 to 0x7f except 0x1a and 0x1b under text mode and GSM character set
Reference	Note Only be available in TEXT mode and +CSCS="GSM".

6.2.32 AT+QAUDLOOP Audio Channel Loopback Test

AT+QAUDLOOP Audio Channel Loopback Test	
Test Command AT+QAUDLOOP=?	Response +QAUDLOOP: (0-1), (0-2) OK
Write Command AT+QAUDLOOP=<state>[,<type>]	Response OK ERROR
	Parameters <state> 0 test is off 1 test is on <type> 0 Normal audio channel 1 Headset audio channel 2 Loudspeaker audio channel
Reference	Note

6.2.33 AT+QSMSCODE Configure SMS Code Mode

AT+QSMSCODE Configure SMS Code Mode	
Test Command AT+QSMSCODE=?	Response +QSMSCODE:(0,1) OK
Read Command AT+QSMSCODE?	Response +QSMSCODE:<mode> OK
	Parameter see Write Command
Write Command AT+QSMSCODE=<mode>	Response OK ERROR
	Parameter <mode> 0 code mode according with NOKIA 1 code mode according with SIEMENS
Reference	Note Default value is 0.

6.2.34 AT+QIURC Enable Or Disable Initial URC Presentation

AT+QIURC Enable Or Disable Initial URC Presentation	
Test Command AT+QIURC=?	Response +QIURC: (0,1) OK
Read Command AT+QIURC?	Response +QIURC:<mode> OK
	Parameter see Write Command
Write Command AT+QIURC= [<mode>]	Response OK ERROR
	Parameter <mode> 0 disable URC presentation. 1 enable URC presentation
Reference	Note When module power on and initialization procedure is over . URC “Call Ready” will be presented if <mode> is 1.

6.2.35 AT+QCSPWD Change PS Super Password

AT+QCSPWD Change PS Super Password	
Write Command AT+QCSPWD= <oldpwd>,<newp wd>	Response OK ERROR
	Parameters <oldpwd> string type. Old password and length should be 8. <newpwd> string type. New password and length should be 8.
Reference	Note <ul style="list-style-type: none"> ● Default value of <oldpwd> is “12345678”. ● If module is locked to a specific SIM card through +CLCK and password lost or SIM state is PH-SIM PUK, you can use the super password to unlock it.

6.2.36 AT+QEXTUNSOL Enable /Disable Proprietary Unsolicited Indications

AT+QEXTUNSOL Enable /Disable Proprietary Unsolicited Indications	
Test Command AT+QEXTUNS OL =?	Response +QEXTUNSOL:(list of supported <exunsol>s) OK
	Parameters see Write Command
Write Command AT+QEXTUNS OL=<exunsol> ,< mode>	Response OK ERROR
	Parameters <exunsol> string type. values currently reserved by the present document “SQ” Signal Quality Report Displays signal strength and channel bit error rate (similar To AT+CSQ) in form +CSQN: <rsssi>,<ber>when values change. “FN” forbidden network available only When returning to a non- registered state this indicates whether All the available PLMNs are forbidden. “MW” SMS Message waiting On receiving an SMS (as indicated by the +CMTI indication) the SMS is decoded and checked to see if it contains one or more of the message waiting indications (i.e. voicemail, email, fax etc). If so, an unsolicited indication is shown in the form for each message type: +CMWT: <store>,<index>,<voice>,<fax>,<email>,<other> Where <store> is the message store containing the SM, index is the message index and <voice>,<email>,<fax>,<other> contain the number of waiting messages (with ‘0’ defined as clear indication, non-zero for one or more waiting messages) or blank for not specified in this message. “UR” Unsolicited result code Produces an unsolicited indication following particular call state Transitions. Multiple notifications may occur for the same transition +CGURC: <event> Where <event> describes the current call state: <event> 0 Active call terminated, at least one held call remaining 1 Attempt to make an Mobile Originated call 2 Mobile Originated Call has failed for some reason 3 Mobile Originated call is ringing 4 Mobile Terminated call is queued (Call waiting) 5 Mobile Originated Call now connected 6 Mobile Originated or Mobile Terminated call has disconnected 7 Mobile Originated or Mobile Terminated call hung up 8 Mobile Originated call to non-emergency number in emergency

	<p>mode</p> <p>9 Mobile Originated call no answer</p> <p>10 Mobile Originated call remote number busy</p> <p>“BC” Battery Charge</p> <p>Displays battery connection status and battery charge level(similar To AT+CBC) in form +CBCN:<bcs>,<bcl> when values change.</p> <hr/> <p>“BM” Band mode</p> <p>Displays band mode (similar to AT+QBAND)in form +QBAND: <band>when value changes.</p> <p>“SM” Additional SMS Information</p> <p>Displays additional information about SMS events in the form of Unsolicited messages of the following format</p> <p>+TSMSINFO: <CMS error info></p>
	<p>where <CMS error info> is a standard CMS error in the format defined by the AT+CMEE command i.e. either a number or a string.</p> <p>“CC” Call information</p> <p>Displays the disconnected call ID and the remain call numbers after one of the call disconnected.</p> <p>+CCINFO : <Call id Disconnected>,<Remain calls></p> <p><mode></p> <p>0 disable</p> <p>1 enable</p> <p>2 query</p>
Reference	Note

7 AT Commands for TCPIP Application Toolkit

7.1 Overview

Command	Description
AT+QIOPEN	START UP TCP OR UDP CONNECTION
AT+QISEND	SEND DATA THROUGH TCP OR UDP CONNECTION
AT+QICLOSE	CLOSE TCP OR UDP CONNECTION
AT+QIDEACT	DEACTIVATE GPRS PDP CONTEXT
AT+QILPORT	SET LOCAL PORT
AT+QIREGAPP	START TASK AND SET APN, USER NAME, PASSWORD
AT+QIACT	BRING UP WIRELESS CONNECTION WITH GPRS OR CSD
AT+QILOCIP	GET LOCAL IP ADDRESS
AT+QISTAT	QUERY CURRENT CONNECTION STATUS
AT+QIDNSCFG	CONFIGURE DOMAIN NAME SERVER
AT+QIDNSGIP	QUERY THE IP ADDRESS OF GIVEN DOMAIN NAME
AT+QIDNSIP	CONNECT WITH IP ADDRESS OR DOMAIN NAME
AT+QIHEAD	ADD AN IP HEAD WHEN RECEIVING DATA
AT+QIAUTOS	SET AUTO SENDING TIMER
AT+QIPROMPT	SET PROMPT OF '>' WHEN SENDING DATA
AT+QISERVER	CONFIGURE AS SERVER
AT+QICSGP	SET CSD OR GPRS FOR CONNECTION MODE
AT+QISRVC	CHOOSE CONNECTION
AT+QISHOWRA	SET WHETHER DISPLAY IP ADDRESS AND PORT OF SENDER WHEN RECEIVE DATA
AT+QISCON	SAVE TCPIP APPLICATION CONTEXT
AT+QIMODE	SELECT TCPIP APPLICATION MODE
AT+QITCFG	CONFIGURE TRANSPARENT TRANSFER MODE
AT+QISHOWPT	Control whether to show the protocol type of the received data
AT+QIMUX	Control whether to support establish multiple TCPIP connection
AT+QISHOWLA	Set Whether Display local IP Address When Receive Data
AT+QIFGCNT	Configure a context as foreground context
AT+QISACK	Query the length of sent data and the length of acknowledged data

7.2 Detailed Descriptions of Commands

7.2.1 AT+QIOPEN Start Up TCP Or UDP Connection

AT+QIOPEN Start Up TCP Or UDP Connection	
Test Command AT+QIOPEN=?	Response +QIOPEN: (list of supported <mode>),IP address range,(port range) <CR><LF>+QIOPEN: (list of supported <mode>),(domain name),(port range)

	<p>OK</p> <p>Parameters</p> <p>See Write Command</p>
<p>Write Command</p> <p>AT+QIOPEN=[<index>,<mode>,<IP address>/<domain name>,<port></p>	<p>Response</p> <p>If format is right response OK, otherwise response ERROR</p> <p>If connect successfully response [<index>], CONNECT OK</p> <p>Otherwise response [<index>], CONNECT FAIL</p> <p>Parameters</p> <p><index> the index of the socket to start. This parameter is necessary only if AT+QIMUX was set as 1 (refer to AT+QIMUX). When AT+QIMUX was set as 0, the parameter has to be omitted.</p> <p><mode> a string parameter which indicates the connection type</p> <p>“TCP” Establish a TCP connection</p> <p>“UDP” Establish a UDP connection</p> <p><IP address> remote server IP address</p> <p><port> remote server port</p> <p><domain name> remote server domain name</p> <p><state> a string parameter which indicates the progress of connecting</p> <p>0 IP INITIAL</p> <p>1 IP START</p> <p>2 IP CONFIG</p> <p>3 IP IND</p> <p>4 IP GPRSACT</p> <p>5 IP STATUS</p> <p>6 TCP/UDP CONNECTING</p> <p>7 IP CLOSE</p> <p>8 CONNECT OK</p> <p>9 PDP DEACT</p>
Reference	<p>Note:</p> <p>This command is allowed to establish a TCP/UDP connection only when the state is IP INITIAL or IP STATUS or IP CLOSE. So it is necessary to process “AT+QIDEACT” or “AT+QICLOSE” before establish a TCP/UDP connection with this command when the state is not IP INITIAL or IP STATUS or IP CLOSE.</p>

7.2.2 AT+QISEND Send Data Through TCP Or UDP Connection

AT+QISEND Send Data Through TCP Or UDP Connection	
Test Command	Response
AT+QISEND=?	+QISEND= <length>

	OK
<p>Execution Command</p> <p>AT+QISEND</p> <p>response"> ", then type data to send, tap CTRL+Z to send, tap ESC to cancel the operation</p>	<p>Response</p> <p>This Command is used to send changeable length data.</p> <p>If connection is not established or disconnected: ERROR</p> <p>If sending successfully: SEND OK</p> <p>If sending fail: SEND FAIL</p> <p>Note</p> <p>1 This Command is used to send data on the TCP or UDP connection that has been established already. Ctrl-Z is used as a termination symbol. ESC is used to cancel sending data.</p> <p>2 There are at most 1460 bytes that can be sent at a time.</p> <p>3 This command is invalid when QIMUX is 1 (refer to AT+QIMUX).</p>
<p>Write Command</p> <p>AT+QISEND=[<index>,<length></p>	<p>Response</p> <p>This Command is used to send fixed length data or send data on the given socket (defined by <index>).</p> <p>If connection is not established or disconnected: ERROR</p> <p>If sending successfully: SEND OK</p> <p>If sending fail: SEND FAIL</p> <p>Parameter</p> <p><index> the index of the socket to send data. This parameter is necessary only if AT+QIMUX was set as 1 (refer to AT+QIMUX). When AT+QIMUX was set as 0, the parameter have to be omitted.</p> <p><length> a numeric parameter which indicates the length of sending data, it must less than 1460</p>
Reference	<p>Note</p> <p>1. There are at the most 1460 bytes that can be sent each time.</p> <p>2. Set the time that send data automatically with the Command of AT+QIAUTOS.</p> <p>3. Only send data at the status of established connection, otherwise Response ERROR</p>

7.2.3 AT+QICLOSE Close TCP Or UDP Connection

AT+QICLOSE	Close TCP Or UDP Connection
Test Command	Response

AT+QICLOSE=?	OK
Execution Command AT+QICLOSE	<p>Response</p> <p>If close successfully: CLOSE OK</p> <p>If close fail: ERROR</p> <p>Note:</p> <p>1 If QISRVC is 1 and QIMUX is 0, this command will close the connection in which the module is the client</p> <p>2 If QISRVC is 1 (please refer to AT+QISRVC) and QIMUX is 1, it will return ERROR</p> <p>3 If QISRVC is 2 and QIMUX equals 0 and the module is the server and some client has connected in, this command will close the connection between the module and the remote client.</p> <p>4 If QISRVC is 2 and QIMUX is 0 and the module is in listening state and no client connect in, this command will make the module quit the listen state.</p> <p>5 If QISRVC is 2 and QIMUX is 1 and the module is used as a server, this command will close all the income connection and make the module quit the listen state</p>
Write Command AT+QICLOSE=<index>	<p>Response</p> <p>If close successfully: <index>, CLOSE OK</p> <p>If close fail: ERROR</p> <p>Note:</p> <p>1 This command is valid only if QIMUX is 1</p> <p>2 If QISRVC is 1 and QIMUX is 1, this command will close the corresponding connection according to <index> and the server of the connection is the remote.</p> <p>3 If QISRVC is 2 and QIMUX is 1, this command will close the income connection according to <index></p>
Reference	<p>Note</p> <p>If QISRVC is 1 and QIMUX is 0, AT+QICLOSE only close connection when the status is CONNECTING or CONNECT OK, otherwise response ERROR, after close the connection, the status is IP CLOSE</p>

7.2.4 AT+QIDEACT Deactivate GPRS/CSD PDP Context

AT+QIDEACT Deactivate GPRS/CSD PDP Context	
Test Command AT+QIDEACT=?	Response OK

Execution Command AT+QIDEACT	Response If close successfully: DEACT OK If close fail: ERROR Note Except at the status of IP INITIAL, you can deactivate GPRS/CSD PDP context by AT+QIDEACT. After closed, the status is IP INITIAL.
Reference	Note

7.2.5 AT+QILPORT Set Local Port

AT+QILPORT Set Local Port	
Test Command AT+QILPORT=?	Response +QILPORT: (list of supported <port>s) OK Parameter See Write Command
Read Command AT+QILPORT?	Response <mode>: <port> <CR><LF><mode>: <port> OK Parameter See Write Command
Write Command AT+QILPORT=<mode>,<port>	Response OK ERROR Parameters <mode> a string parameter which indicates the connection type "TCP" TCP local port "UDP" UDP local port <port> 0-65535 a numeric parameter which indicates the local port
Reference	Note

7.2.6 AT+QIREGAPP START TCPIP Task And Set APN、USER NAME、PASSWORD

AT+QIREGAPP Start TCPIP Task And Set APN、USER NAME、PASSWORD	
Test Command AT+QIREGAPP=?	Response +QIREGAPP: "APN","USER","PWD" OK
Read Command AT+QIREGAPP	Response +QIREGAPP: <apn>,<user name>,<password>

?	<p>OK</p> <p>Parameters</p> <p>See Write Command</p>
<p>Write Command</p> <p>AT+QIREGAPP</p> <p>=<apn>,<user name>,<password>[,<rate>]</p>	<p>Response</p> <p>OK</p> <p>ERROR</p> <p>Parameters</p> <p><apn> a string parameter which indicates the GPRS access point name or the call number of CSD</p> <p><user name> a string parameter which indicates the GPRS/CSD user name</p> <p><password> a string parameter which indicates the GPRS/CSD password</p> <p><rate> the speed of data transmit for CSD</p>
<p>Execution Command</p> <p>AT+QIREGAPP</p>	<p>Response</p> <p>OK</p> <p>ERROR</p>
Reference	<p>Note</p> <p>1 The write command and execution command of this command is valid only at the state of IP INITIAL. After operating this command, the state will be changed to IP START.</p> <p>2 the value of QICSGP (please refer to AT+QICSGP) define what kind of bearer (GPRS or CSD) the parameters are used for.</p>

7.2.7 AT+QIACT Bring Up Wireless Connection With GPRS Or CSD

AT+QIACT Bring Up Wireless Connection With GPRS Or CSD	
<p>Execution Command</p> <p>AT+QIACT</p>	<p>Response</p> <p>OK</p> <p>ERROR</p>
Reference	<p>Note</p> <p>AT+QIACT only activates GPRS/CSD context at the status of IP START, after operating this Command, the state will be changed to IP CONFIG. If module accepts the activated operation, the state will be changed to IP IND; after module accepting the activated operation, if activate successfully, the state will be changed to IP GPRSACT, response OK, otherwise response ERROR.</p>

7.2.8 AT+QILOCIP Get Local IP Address

AT+QILOCIP Get Local IP Address	
<p>Read Command</p> <p>AT+QILOCIP?</p>	<p>Response</p> <p>OK</p>
Execution	Response

Command AT+QILOCIP	<p><IP address> ERROR Parameter <IP address> a string parameter which indicates the IP address assigned from GPRS or CSD</p>
Reference	<p>Note Only at the following status: IP GPRSACT、TCP/UDP CONNECTING、CONNECT OK、IP CLOSE can get local IP Address by AT+QILOCIP, otherwise response ERROR. And if the status before execute the command is IP GPRSACT, the status will be changed to IP STATUS after the command.</p>

7.2.9 AT+QISTAT Query Current Connection Status

AT+QISTAT Query Current Connection Status	
Test Command AT+QISTAT=?	Response OK
Execution Command AT+QISTAT	<p>Response OK STATE: <state> Or List of (+QISTAT: <index>, <mode>, <addr>, <port><CR><LF>) OK</p> <p>Parameter <state> referred to AT+QIOPEN <index> the index of the connection, the range is (0-5) <mode> the type of the connection "TCP" TCP connection "UDP" UDP connection <addr> the IP address of the remote <port> the port of the remote</p> <p>Note: The former style of response displays when QIMUX=0, and the later style of response displays when QIMUX=1</p>
Reference	Note

7.2.10 AT+QIDNSCFG Configure Domain Name Server

AT+QIDNSCFG Configure Domain Name Server

Test Command AT+QIDNSCFG =?	Response OK
Read command AT+QIDNSCFG ?	Response PrimaryDns: <pri_dns> SecondaryDns: <sec_dns> OK
Write Command AT+QIDNSCFG =<pri_dns>[,<sec_dns>]	Response OK ERROR Parameters <pri_dns> a string parameter which indicates the IP address of the primary domain name server <sec_dns> a string parameter which indicates the IP address of the secondary domain name server
Reference	Note

7.2.11 AT+QIDNSGIP Query The IP Address Of Given Domain Name

AT+QIDNSGIP Query The IP Address Of Given Domain Name	
Test Command AT+QIDNSGIP =	Response OK
Write Command AT+QIDNSGIP =<domain name>	Response OK ERROR If successful, return: <IP address> If fail, return: ERROR: <err> STATE: <state> Parameters <domain name> a string parameter which indicates the domain name <IP address> a string parameter which indicates the IP address corresponding to the domain name <err > a numeric parameter which indicates the error code 1 DNS not Authorization 2 invalid parameter 3 network error 4 no server 5 time out 6 no configuration

	<p>7 no memory</p> <p>8 unknown error</p> <p><state> refer to AT+QIOPEN</p>
Reference	Note

7.2.12 AT+QIDNSIP Connect With IP Address Or Domain Name Server

AT+QIDNSIP Connect With IP Address Or Domain Name Server	
Test Command AT+QIDNSIP=?	Response +QIDNSIP: (list of supported <mode>s) OK Parameter See Write Command
Read Command AT+QIDNSIP?	Response +QIDNSIP: <mode> OK Parameter See Write Command
Write Command AT+QIDNSIP=<mode>	Response OK ERROR Parameter <mode> a numeric parameter which indicates connecting with IP address server or domain name server 0 remote server is an IP address 1 remote server is a domain name
Reference	Note

7.2.13 AT+QIHEAD Add An IP Head When Receiving Data

AT+QIHEAD Add An IP Head When Receiving Data	
Test Command AT+QIHEAD=?	Response +QIHEAD: (list of supported <mode>s) OK Parameter See Write Command
Read Command AT+QIHEAD?	Response +QIHEAD: <mode> OK

	Parameter See Write Command
Write Command AT+QIHEAD=<mode>	Response OK ERROR Parameter <mode> a numeric parameter which indicates whether add an IP header before received data or not 0 not add IP header 1 add IP header, the format is "+IPD(data length):"
Reference	Note

7.2.14 AT+QIAUTOS Set Auto Sending Timer

AT+QIAUTOS Set Auto Sending Timer	
Test Command AT+QIAUTOS=?	Response +QIAUTOS: (list of supported <mode> s) OK Parameter See Write Command
Read Command AT+QIAUTOS?	Response +QIAUTOS: <mode> OK Parameter See Write Command
Write Command AT+QIAUTOS=<mode>,<time>	Response OK ERROR Parameters <mode> a numeric parameter which indicates whether set timer when sending data 0 not set timer when sending data 1 Set timer when sending data <time> a numeric parameter which indicates the seconds after which the data will be sent
Reference	Note

7.2.15 AT+QIPROMPT Set Prompt Of '>' When Sending Data

AT+QIPROMPT Set Prompt Of '>' When Sending Data	
Test Command	Response

AT+QIPROMPT =?	+QIPROMPT: (<send prompt>s) OK Parameter See Write Command
Read Command AT+QIPROMPT ?	Response +QIPROMPT: <send prompt> OK Parameter See Write Command
Write Command AT+QIPROMPT =<send prompt>	Response OK ERROR Parameter <send prompt> a numeric parameter which indicates whether echo prompt '>' after issuing AT+QISEND Command 0 no prompt and show "send ok" when send successfully 1 echo '>' prompt and show "send ok" when send successfully 2 no prompt and not show "send ok" when send successfully
Reference	Note

7.2.16 AT+QISERVER Configure As Server

AT+QISERVER Configure As Server	
Read Command AT+QISERVER ?	Response +QISERVER: <mode>, <num> OK Parameter <mode> 0 has not been configured as a server 1 has been configured as a server <num> the number of clients that have connected in. The range is 1~5.
Execution Command AT+QISERVER	Response OK ERROR If configuration as server success, return: SERVER OK If configuration as server fail, return: CONNECT FAIL Note: This command configures the module as a TCP server and the maximum allowed client is 1.
Write Command	Response

AT+QISERVER =<type>[,<max>]	OK ERROR If configuration as server success, return: SERVER OK If configuration as server fail, return: CONNECT FAIL Parameter <type> A numeric to indicate the type of the server 0 TCP server 1 UDP server <max> the maximum number of clients allowed to connect in. The default value is 1. Note: The parameter <max> is invalid when QIMUX is 0
Reference	Note

7.2.17 AT+QICSGP Set CSD Or GPRS For Connection Mode

AT+QICSGP Set CSD Or GPRS For Connection Mode	
Test Command AT+QICSGP=?	Response +QICSGP:0-CSD,DIALNUMBER,USER NAME,PASSWORD,RATE(0,3) +QICSGP: 1-GPRS,APN,USER NAME,PASSWORD OK Parameters See Write Command
Read Command AT+QICSGP?	Response +QICSGP: <mode> OK Parameter See Write Command
Write Command AT+QICSGP=<mode>,[(<apn>,<user name >,<password>)/(<dial number>,<user name>,<password>,<rate>)]	Response OK ERROR Parameters <mode> a numeric parameter which indicates the wireless connection mode 0 set CSD as wireless connection mode 1 set GPRS as wireless connection mode GPRS parameters: <apn> a string parameter which indicates the access point name <user name> a string parameter which indicates the user name

	<p><password> a string parameter which indicates the password</p> <p>CSD parameters:</p> <p><dial number> a string parameter which indicates the CSD dial numbers</p> <p><user name> a string parameter which indicates the CSD user name</p> <p><password> a string parameter which indicates the CSD password</p> <p><rate> a numeric parameter which indicates the CSD connection rate</p> <p>0 2400</p> <p>1 4800</p> <p>2 9600</p> <p>3 14400</p>
Reference	Note

7.2.18 AT+QISRVC Choose Connection

AT+QISRVC Choose Connection	
Test Command AT+QISRVC=?	Response +QISRVC: (list of supported <connection> s) OK Parameter See Write Command
Read Command AT+QISRVC?	Response +QISRVC: <connection> OK Parameter See Write Command
Write Command AT+QISRVC=<connection>	Response OK ERROR Parameter <connection> a numeric parameter which indicates the chosen connection <ul style="list-style-type: none"> 1 choose connection as client 2 choose connection as server Note that there may exist two connections at one time: one connection is as client connecting with remote server, the other connection is as server connecting with remote client. Using this Command to choose through which connection data is sent.
Reference	Note

7.2.19 AT+QISHOWRA Set Whether Display IP Address And Port Of Sender When Receive Data

AT+QISHOWRA Set Whether Display IP Address And Port Of Sender When Receive Data	
Test Command AT+QISHOWRA=?	Response +QISHOWRA: (list of supported <mode>s) OK Parameter See Write Command
Read Command AT+QISHOWRA?	Response +QISHOWRA: <mode> OK Parameter See Write Command
Write Command AT+QISHOWRA=<mode>	Response OK ERROR Parameter <mode> a numeric parameter which indicates whether show the prompt of where the received data are from before the received data or not. 0 do not show the prompt 1 show the prompt, the format is as follows: RECV FROM:<IP ADDRESS>:<PORT> Note that the default mode is not to show the prompt.
Reference	Note

7.2.20 AT+QISCON Save TCPIP Application Context

AT+QISCON Save TCPIP Application Context	
Read Command AT+QISCON?	Response TA returns TCPIP Application Context, which consists of the following AT Command parameters. SHOW APPTCPIP CONTEXT +QIDNSIP:<mode> +QIPROMPT:<sendprompt> +QIHEAD:<iphead> +QISHOWRA:<srip> +QICSGP:<csgp> Gprs Config APN:<apn> Gprs Config UserId:<gusr>

	<p>Gprs Config Password:<gpwd> Gprs Config inactivityTimeout:<timeout> CSD Dial Number:<cnum> CSD Config UserId:<usr> CSD Config Password:<cpwd> CSD Config rate:<crate> App Tcpip Mode:<mode> In Transparent Transfer Mode Number of Retry:<nmRetry> Wait Time:<waitTm> Send Size:<sendSz> esc:<esc></p> <p>OK</p> <hr/> <p>Parameters</p> <p><mode> see AT+QIDNSIP <sendprompt> see AT+QIPROMPT <iphead> see AT+QIHEAD</p> <p><srip> see AT+QISHOWRA <csgp> see AT+QICSGP <apn> see AT+QICSGP <gusr> see AT+QICSGP <gpwd> see AT+QICSGP <timeout> see AT+QICSGP <cnum> see AT+QICSGP <usr> see AT+QICSGP <cpwd> see AT+QICSGP <crate> see AT+QICSGP</p> <p><nmRetry> see AT+QITCFG <waitTm> see AT+QITCFG <sendSz> see AT+QITCFG <esc> see AT+QITCFG</p>
<p>Execution Command AT+QISCON</p>	<p>Response</p> <p>TA saves TCPIP Application Context which consist of following AT Command parameters, and when system is rebooted, the parameters will be loaded automatically:</p> <p style="text-align: center;">AT+QIDNSIP, AT+QIPROMPT, AT+QIHEAD, AT+QISHOWRA, AT+QICSGP</p> <p>OK</p> <hr/> <p>Parameter</p>

Reference	Notice: The execution command only save the corresponding parameters of the foreground context (refer to AT+QIFGCNT).
-----------	---

7.2.21 AT+QIMODE Select TCPIP Application Mode

AT+QIMODE Select TCPIP Application Mode	
Test Command AT+QIMODE=?	Response +QIMODE:(0-NORMAL MODE,1-TRANSPARENT MODE) OK
Read Command AT+QIMODE?	Response +QIMODE: <mode> OK Parameter See Write Command
Write Command AT+QIMODE=<mode>	Response OK ERROR Parameter <mode> 0 normal mode 1 transparent mode
Reference	Note

7.2.22 AT+QITCFG Configure Transparent Transfer mode

AT+QITCFG Configure Transparent Transfer Mode	
Test Command AT+QITCFG=?	Response +QITCFG: (NmRetry:3-8),(WaitTm:2-10),(SendSz:256-1024),(esc:0,1) OK
Read Command AT+QITCFG?	Response +QITCFG: <NmRetry>,<WaitTm>,<SendSz>,<esc> OK Parameters See Write Command
Write Command AT+QITCFG=<NmRetry>,<WaitTm>,<SendSz>,<esc>	Response OK ERROR Parameters <NmRetry> number of retries to be made for an IP packet. <WaitTm> number of 100ms intervals to wait for serial input before sending the packet.

	<p><SendSz> size in bytes of data block to be received from serial port before sending.</p> <p><esc> whether turn on the escape sequence, default is TRUE.</p>
Reference	Note

7.2.23 AT+QISHOWPT Control whether to show the protocol type of the received data

AT+QISHOWPT Control whether to show the protocol type of the received data	
Test Command AT+QISHOWPT=?	Response +QISHOWPT: (0-1) OK
Read Command AT+QISHOWPT?	Response +QISHOWPT: <mode> OK Parameters See Write Command
Write Command AT+QISHOWPT=<mode>	Response OK ERROR Parameters <mode> <ul style="list-style-type: none"> 0 NOT show the transport protocol type at the end of header of the received TCP/UDP data 1 Show the transport protocol type at the end of header of the received TCP/UDP data as the following format. +IPD(data length)(TCP/UDP):
Reference	Note This command is invalid after AT+QIHEAD=0

7.2.24 AT+QIMUX Control whether to support establish multiple TCPIP connection

AT+QIMUX Control whether to support establish multiple TCPIP connection	
Test Command AT+QIMUX=?	Response +QIMUX: (0,1) OK
Read Command AT+QIMUX?	Response +QIMUX: <mode> OK Parameters See Write Command

Write Command AT+QIMUX=<mode>	Response OK ERROR Parameters <mode> <ul style="list-style-type: none"> <u>0</u> NOT support to establish multiple TCPIP connection at the same time. 1 support to establish multiple TCPIP connection at the same time.
Reference	Note

7.2.25 AT+QISHOWLA Set Whether Display local IP Address When Receive Data

AT+QISHOWLA Set Whether Display local IP Address When Receive Data	
Test Command AT+QISHOWLA=?	Response +QISHOWLA: (list of supported <mode> s) OK Parameter See Write Command
Read Command AT+QISHOWLA?	Response +QISHOWLA: <mode> OK Parameter See Write Command
Write Command AT+QISHOWLA=<mode>	Response OK ERROR Parameter <mode> a numeric parameter which indicates whether show the prompt of where to receive the data received before or not before received data. <ul style="list-style-type: none"> <u>0</u> do not show the prompt 1 show the prompt, the format is as follows: TO:<IP ADDRESS> Note: 1 the default mode is not to show the prompt.
Reference	Note

7.2.26 AT+QIFGCNT Configure a context as foreground context

AT+QIFGCNT Configure a context as foreground context	
Test Command AT+QIFGCNT=?	Response +QIFGCNT: (list of supported <id>s) OK Parameter See Write Command
Read Command AT+QIFGCNT?	Response +QIFGCNT: <id>,<channel> OK Parameter See Write Command
Write Command AT+QIFGCNT=<id>	Response OK ERROR Parameter <id> A numeric to indicate which context will be set as foreground context. The range is 0-1 <channel> A numeric to indicate which channel is controlling the context <id>. 0 AT_COMMAND_1 1 AT_COMMAND_2 2 AT_COMMMAD_3 3 AT_COMMAND_4 255 the context is not controlled by any channel Note: When CMUX is opened, if the state of the context defined by id is not IP_INITIAL and the context is controlled by the other channel, it will return ERROR
Reference	Note

7.2.27 AT+QISACK Query the length of sent data and the length of acknowledged data

AT+QISACK Query the length of sent data and the length of acknowledged data	
Test Command AT+QISACK=?	Response OK Parameter See Write Command
Execution Command AT+QISACK	Response +QISACK: <sent>, <acked>, <nAcked>

	<p>OK Parameter See Write Command</p>
<p>Write Command AT+QISACK=<n ></p>	<p>Response +QISACK: <sent>, <acked>, <nAked></p> <p>OK Parameter <n> the index of the connection to query <sent> a numeric to indicate the total length of the sent data <acked> a numeric to indicate the total length of the acknowledged data <nAked> a numeric to indicate the total length of the data unacknowledged</p>
Reference	Note

Appendix A Supported unsolicited result codes

A.1 Summary of CME ERROR Codes

Final result code +CME ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values are mostly used by common messaging commands:

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adaptor link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency calls only
40	network personalization PIN required
41	network personalization PUK required
42	network subset personalization PIN required
43	network subset personalization PUK required

44	service provider personalization PIN required
45	service provider personalization PUK required
46	corporate personalization PIN required
47	corporate personalization PUK required
103	illegal MS
106	illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	location area not allowed
113	roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class
2064	GPRS - MSC temporarily not reachable
2088	GPRS - no PDP context activated
2143	GPRS - semantically incorrect message
3097	GPRS - LLC or SMDCP failure
3098	GPRS - insufficient resources
3099	GPRS - unknown APN
3100	GPRS - unknown PDP address or type
3102	GPRS - activation rejected by GGSN
3103	PRS - unspecified activation rejection
3104	GPRS - service not available
3108	GPRS - regular deactivation
3109	GPRS - QOS not accepted
3110	GPRS - network failure
3111	GPRS - reactivation required
3113	GPRS - semantic error in TFT operation
3114	GPRS - syntactical error in TFT operation
3115	GPRS - unknown PDP context
3116	GPRS - semantic errors in packet filter
3117	GPRS - syntactical errors in packet filter
3118	GPRS - PDP context w/o TFT already activated
3153	GPRS - Invalid TI value
3168	GPRS - invalid MAND information
3170	GPRS - message type incompatible with state
3276	GPRS - bad code or protocol rejection
3742	incorrect <oper> format
3765	invalid input value
3769	unable to get control of required module

3771	call setup in progress
3772	SIM powered down

A.2 Summary of CMS ERROR Codes

Final result code +CMS ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same Command line is executed. Neither ERROR nor OK result code shall be returned.

<err> values are mostly used by common messaging commands:

Code of <err>	Meaning
300	ME failure
301	SMS ME reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode
305	invalid text mode
310	SIM not inserted
311	SIM pin necessary
312	PH SIM pin necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network
332	network timeout
500	unknown
512	SIM not ready
513	message length exceeds
514	invalid request parameters
515	ME storage failure
517	Invalid service mode
528	More Message to Send state error
529	MO SMS is not allow
530	GPRS is suspended
531	ME storage full

532	doing SIM refresh
-----	-------------------

A.3 Summary of URC

Index	URC display	Meaning	Condition
1	+CMTI:<mem>,<index>	New message received, and saved to memory	AT+CNMI=2,1
2	+CMT:[<alpha>],<length><CR><LF><pdu>	New short message is received and output directly to TE(PDU mode)	AT+CNMI=2,2
3	+CMT:<oa>,<alpha>,<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data>	New short message is received and output directly to TE(Text mode)	AT+CNMI=2,2
4	+CBM:<length><CR>	New CBM is received and output directly(PDU mode)	AT+CNMI=2,2
5	+CBM:<sn>,<mid>,<dcs>,<page>,<pages>,<CR>,<LF><data>	New CBM is received and output directly to TE(Text mode)	AT+CNMI=2,2
6	+CDS:<length><CR><LF><pdu>	New CDS is received and output directly(PDU mode)	AT+CNMI=2,2
7	+CDS:<fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st>	New CDS is received and output directly to TE(Text mode)	AT+CNMI=2,2
8	+CGEV:NW DEACT<PDP_type>,<PDP_addr>[,<cid>]	GPRS network detach	AT+CGEREP=1
9	+CGEV:ME DEACT<PDP_type>,<PDP_addr>[,<cid>]	GPRS ME detach	AT+CGEREP=1
10	+CGEV:NW DETACH	GPRS network detach	AT+CGEREP=1
11	+CGEV:ME DETACH	GPRS ME detach	AT+CGEREP=1
12	+CVGREG:1	Network registered	AT+CGREG=1
13	+CGREG:0	Network unregistered	AT+CGREG=2
14	+CVGREG:1,<lac><ci>	Network registered, with location code	AT+CGREG=2
15	+CVGREG:0,<lac><ci>	Network unregistered, with location code	AT+CGREG=2
16	+QEXTHS:<mode>,<headset attach>	Headset attachment status change	AT+QEXTHS=1
17	+QHSBTN:<mode>,<headset button press>	Headset button pressed	AT+QHSBTN=1
18	+QCGTIND	A CS voice call, CS data,fax call or GPRS session termination indicator	AT+QCGTIND=1
19	+CSQN:<rssi>,<ber>	Signal quality change	AT+QEXTUNSO

			L="SQ",1
20		Forbidden network available only	AT+QEXTUNSO L="FN",1
21	+CMWT:<store>,<index>,<voice>,<fax>,<email>,<other>	Message waiting	AT+QEXTUNSO L="MW",1
22	+CGURC:<event>	Unsolicited result code follow particular call state transition	AT+QEXTUNSO L="UR",1
23	+CBCN<bcs>,<bcl>	Display battery connexion status and battery charge level	AT+QEXTUNSO L="BC",1
24	+QBAND:<band>	Band mode display	AT+QEXTUNSO L="BM",1
25	+TSMSINFO:<CMS error info>	Additional SMS information	AT+QEXTUNSO L="SM",1
26	+CCINFO:<Call is Disconnected>,<remain calls>	Displays the disconnected call ID and the remain call numbers after one of the call disconnected	AT+QEXTUNSO L="CC",1
27	RING	Indicates incoming call	n/a
28	Call Ready	Device ready to make/receive calls	n/a
29	Charging in NORNAL MODE	The module is in charging state	n/a
30	From GHOST MODE to NORMAL MODE	Device is turned on when in charging state	n/a
31	+QTEMP:-1	Low temperature warning	AT+QTEMP=1
32	+QTEMP:1	High temperature warning	AT+QTEMP=1
33	+QTEMP:-2	Low temperature shutdown indicator	AT+QTEMP=1
34	+QTEMP:2	High temperature shutdown indicator	AT+QTEMP=1
35	UNDER_VOLTAGE POWER DOWN	Under voltage shutdown indication	n/a
36	UNDER_VOLTAGE WARNING	Under voltage warning	n/a
37	OVER_VOLTAGE POWER DOWN	Over voltage shutdown indication	n/a
38	OVER_VOLTAGE WARNING	Over voltage warning	n/a
39	UNDER_VOLTAGE POWER DOWN	Normal power down	n/a
40	+COLP:<number>,<type>[,<sub addr>,<satype>[CLI validity]],	The presentation of the COL(connected line) at the TE for a mobile originated call	AT+COLP=1
41	+CLIP:<number>,<type>'','',',<alphaID>,<CLI validity>	Mobile terminating call indication	AT+CLIP=1
42	+CRING:<type>	An incoming call is indicated to	AT+CRING=1

		the TE with unsolicited result code instead of the normal RING	
43	+CREG:<stat>	Indicate registration status of the ME	AT+CREG=1
44	+CREG:<stat>[,<lac>]	After cell neighborhood changing shows whether the network has currently indicated the registration of the ME, with location area code	AT+CREG=2
45	CCWV	Call meter warning,5 seconds left before ACM	AT+CCWV=1
46	+CCWA:<number>,<type>,<class>[,<alpha>]	Caall waiting indication	AT+CCWA=1,1
47	RDY	ME initialization successful	n/a
48	+CFUN:1	All function of the ME is available	n/a
49	+CPIN:<state>	SIM card pin state	n/a
50	MO RING	MO call ringing	AT+QMOSTAT=1
51	MO CONNECTED	MO call connexed	AT+QMOSTAT=1
52	ALARM RING	Alarm event triggered	AT+QALARM=1,<time>,<repeat>,0/1
53	ALARM MODE	ME switched on by alarm	AT+QALARM=1,<time>,<repeat>,2

QUECTEL



Shanghai Quectel Wireless Solutions Co., Ltd.

Room 801, Building E, No.1618, Yishan Road, Shanghai, China 201103

Tel: +86 21 5108 2965

Mail: info@quectel.com